



DIGITECH
Audio



User Manual
25W Personal Megaphone
with Siren
AM-4042

USER MANUAL


Thank you for selecting this megaphone, please read the user manual carefully before use to know how to operate it properly and effectively.

PACKAGE LIST

- 1 x Megaphone
- 1 x User Manual


PARTS & FUNCTIONS

1. Speaker: Converts electrical signal into sound.
2. Signal Switch: Activates siren function.
3. Press-to-talk Switch: Press this switch for announcing when carrying the megaphone on the shoulder.
4. Handle Grip: Used to hold this megaphone.
5. Latch: Used to fasten the top cover with the megaphone.
6. Top Cover: Holds the battery compartment.
7. Microphone: Converts sound into electrical signal.
8. Volume Controller: Used to adjust the output volume. To increase volume, turn direct clockwise.
9. Battery Compartment: Holds 8pcs size C batteries.
10. Mic Fixing Hanger: Hangs the microphone.
11. Carry Strap: Conveniently carries the microphone.

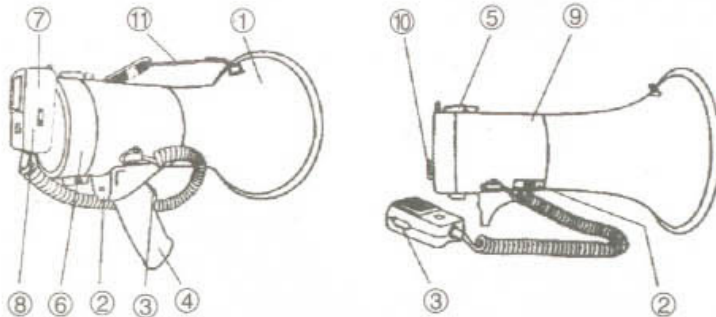


OPERATIONAL INSTRUCTIONS

- Installing the Batteries: Open up the latch and top cover. Remove the two battery tubes. Put 4pcs size C batteries properly (+/- terminals must match) into each tube. Insert the tubes into the battery compartment, and close the top cover and the latch.
- When carrying the microphone on the shoulder, press the press-to-talk power switch on the left side of the microphone. Position the speaker opening mouth towards the object

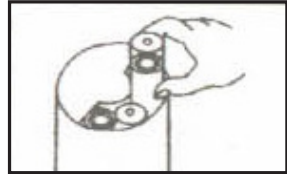

and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.

- Turn the sound volume control on the right side of the microphone and adjust the volume level to optimum without causing howling. Please note that the closer the sound source is to the microphone the better the amplification is.
- If the megaphone is a model equipped with the siren function. Switch the signal switch to the siren position; the speaker will generate a continuous siren. While switched to the talk position, the siren will stop.
- If the megaphone is a model equipped with the whistle function. Switch the signal switch to the whistle position, and press the power switch, the speaker will generate a continuous whistle. While switched to the talk position, the siren will stop.

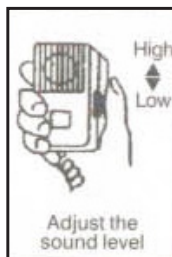

- If the megaphone is activated and the volume of the speaker is weak, the batteries may be out of power. Replace the batteries.

BASIC TROUBLESHOOTING

- If the megaphone does not work, remove the batteries to check if the +/- terminals match correctly.
- If the terminals match correctly, place the batteries back and press them down into the battery compartment firmly, make sure the batteries are in contact properly.

SPECIFICATIONS

Rated Output Power: 18W(8W speaker, THD=10%)
Max Output Power: 25W
Power Consumption: 25W (at rated output)
Power Source: 8 x C Batteries (Not Included)
Output Current: 0.9A
Effective Distance: Approx. 600m
Power Duration: Approx. 6 Hours
Microphone: Uni-Directional Dynamic
Dimension: Horn width 240mm dia. x 355mm (D)
Weight: 1.45kg (without batteries)

PRECAUTIONS

- Do not place under the direct sunlight or the high temperature environment for a long period of time.
- Avoid exposure to rain, water or heavy humidity.
- When cleaning the megaphone body only use a neutral detergent. Never use thinner or benzene.
- Amplified sound or howling may cause damage to person's ears. Don't use the megaphone close to people's ears/
- If not in use for a long period of time, remove the batteries and store them separately to prevent leaking batteries and damaging the circuits inside the megaphone.
- When the megaphone is not in use, put the signal switch in the "talk" position, and the "press-to-talk" switch in a natural position in order to extend the use of the batteries. This is the battery power saving procedure that will make the batteries work longer for your microphone.

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500

www.techbrands.com

Made in China