



DIGITECH
Audio

UHF Wireless Guitar Transmitter and Receiver

With 6.5mm Mono Plug

AM-4109



User Manual

Specifications:

Transmitter:

| | |
|-----------------|---------------|
| Frequencies: | CH1: 520.5MHz |
| | CH2: 532.9MHz |
| Freq stability: | 0.002% |
| Range: | 60m max |

Receiver:

| | |
|---------------|---------------------------|
| Sensitivity: | 2 μ V (12dB) |
| Signal/noise: | 90dB |
| Dimensions: | 115(W) x 80(D) x 25(H) mm |

Flyout:

1. Telescopic Antenna
2. 3 x LED Indicators
3. Channel Selector
4. Power Input
5. Audio Output
6. On/Off Switch
7. Transmit Volume
8. Battery Compartment
9. LED Indicator



Installation and Operation (Receiver)

For best results, the receiver should be placed at least 1m off the ground, and should not be placed directly in front of the speaker system.

- Position the receiver on a stable platform and attach the AC adaptor.
- Plug one end of the provided lead into the AF output connector of the receiver, and the other end to the input jack of your amplifier or PA system.
- Plug the power adaptor into a suitable electrical wall socket and turn the power on.
- Select the channel you would like to use.

Installation and Operation (Transmitter)

- Open the battery compartment, insert 1 x AAA battery and close the battery cover.
- Plug the transmitter plug into your instrument and turn the power switch on.
- The signal level indicator on the receiver should now light up indicating that the signal is being received. It will only light up for a few seconds.
- Adjust your instrument and amplifier controls to the desired volume and tone.
- Please ensure you select the same channel (CH1 or CH2) as the receiver on the transmitter.
- When finished, turn the power switch off before removing from the instrument.

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com