

# 2 Channel Wireless UHF Microphone System

## With Individual Channel Level Control

AM-4114



**User Manual** 

## **Specifications:**

Frequency: CH1: 525.1MHz

CH2: 645.9MHz

Transmission Range: 60m

Microphone Power: 2 x AA per Microphone

Pick up: Dynamic

Dimensions: Microphone: 240(L) x 50(Dia.) mm

Receiver: 210(L) x 140(D) x 42(H) mm

# Flyout:

- 1. Antenna
- 2. Mix Out
- 3. Power Input
- 4. Balance Output
- 5. Power Button
- 6. Volume Control
- 7. LED Indicators
- 8. Power Switch







#### Installation and Operation (Receiver)

For best results, the receiver should be placed at least 1m off the ground, and should not be placed directly in front of the speaker system.

- Connect the antenna, a balanced cable AF line (not supplied) to your speaker or amplifier system, and plug in the power adapter.
- Adjust the antenna so that it is vertical.
- Switch on the power, and while it is in stand-by, turn on the power of your speaker or amplifier system.
- Ensure not to use two machines with the same frequency at the same place at the same time.

### **Installation and Operation (Transmitter)**

- Open up the battery compartment of the microphone, insert 2 x AA batteries and close the battery compartment.
- Switch on the power and the power light will flash once.
- The signal level on the receiver will light up to indicate that an effective signal is being received.
- Adjust the channel volume and the volume on your speaker or amplifier system.
- When the AF level lights up corresponding to the volume, the system is functioning normally.

Distributed by: TechBrands by Electus Distribution Pty. Ltd. 320 Victoria Rd, Rydalmere

NSW 2116 Australia

Ph: 1300 738 555 Int'l: +61 2 8832 3200

Fax: 1300 738 500 www.techbrands.com