



Single UHF Microphone System



User Manual

AM-4119

Please read this user manual carefully before using the product and retain the user manual for future reference.

WARNINGS

- Consult the details of this manual for safe and operation of the AM-4119 unit.
- Keep this instruction in a safe place for reference when needed.
- Only use the attachments provided or those approved by the manufacturer.
- Only the power voltage labelled on the power adaptor can be applied to the operation of this instrument. Make sure whether the local city voltage is suitable.
- It can be dangerous to open and dismantle the case of the AM-4119 in order to conduct any repairs by yourself. The repair process should be done by a qualified technician.
- Please abide by the warnings and cautions outlined in this manual.
- The AM-4119 should be kept away from high humidity, heat, electromagnetic fields and direct sunshine. Please disconnect all the connects cables and power supply and remove the batteries when not in use.

TROUBLESHOOTING

1. The receiver is turned on, but the indicator light is not showing.

Make sure if the power cable is connected on powered on and the socket is in good condition.

2. When you speak into the microphone, the AF light flashes, but no sound is heard from the connected speaker?

Make sure the volume level is not set on a low level, and check that the audio cable is connected correctly.

 
3. The effective signal distance between the microphone and the base station is close, but the signal is not being received.

- Check that the antennas have not become dislodged or damaged.
- Check is a battery change is required in the microphone.
- Check the location of the receiver and base station. If there is a strong magnetic field in your surroundings, the signal may be impeded.


4. The timbre is bad.

- Check that the voltage of the battery is sufficient and if a change is required.
- Check if there are the other products in the vicinity operating on the same UHF frequency as the AM-4119. Do not use two devices with the same frequency at the same time in a place. (Separate them at least 100m.)


CONTROL PANEL & FUNCTION RECEIVER

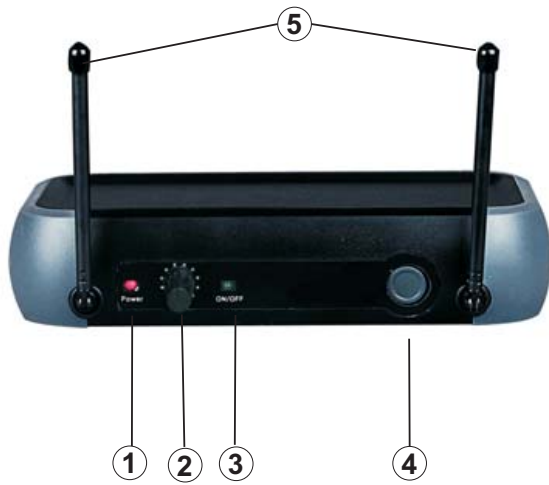

 1. The light of ON/OFF Switch
2. Volume
3. RF Light
4. Power ON/OFF Switch
5. Receiver Antenna

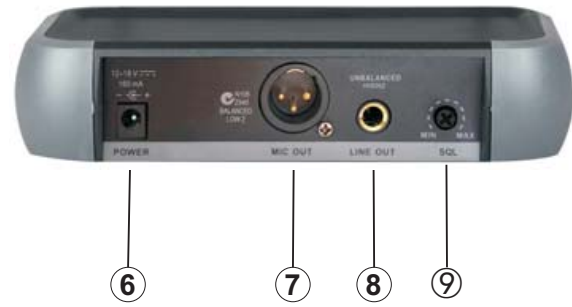

 6. Power Jack
7. Balanced Output Connector
8. Mixed Output Connector
9. SQL

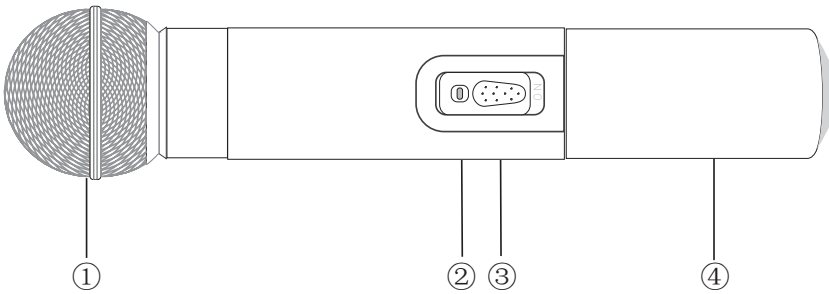

TRANSMITTER (HANDHELD)

1. Pickup Cover
2. The Light of Low Voltage
3. The Power Switch of Transmitter
4. The Battery Room of Transmitter



SYSTEM INSTALLATION & MANIPULATION (RECEIVER)

For a best use please ensure that the base station (receiver) is positioned at least 1m above the ground and is not facing the connected speakers.

It is necessary to ensure that the AM-4119 system is being connected in an area where no other products are operating on the same frequency as the unit.

Place the base station (receiver) in a stable place.

Connect the correct audio cable and power supply to the base station (receiver).

Connect the other end of the audio cable to the input connection of your chosen equipment.

Adjust the antennas on the Base Station (receiver) to a vertical position ground level.

Connect the supplied power adapter to the wall socket and switch on the power.

SYSTEM INSTALLATION & MANIPULATION (TRANSMITTER)

Open up the battery compartment and insert the correct batteries (two AA batteries) then close the cover. Switch on the handheld transmitter.

DISTRIBUTED BY:

TechBrands by Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere

NSW 2116 Australia

Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

www.techbrands.com

Made in China