



Distributed by:  
TechBrands by Electus Distribution Pty. Ltd.  
320 Victoria Rd, Rydalmere  
NSW 2116 Australia  
Ph: 1300 738 555  
Int'l: +61 2 8832 3200  
Fax: 1300 738 500  
[www.techbrands.com](http://www.techbrands.com)

## Dual Wireless UHF Microphone System User Manual AM-4132

## SPECIFICATIONS

### Frequency:

Channel 1: 645.9MHz  
Channel 2: 525.1MHz

### Transmission Range:

Up to 60m

### Microphone Power:

2 x AA (Each)

### Pick Up:

Dynamic

### Dimensions:

Microphones: 236 (L) x 52 (Dia.) mm  
Receiver: 175 (L) x 108 (D) x 40 (H) mm

## INSTALLATION & OPERATION (RECEIVER)

For best results, the receiver should be placed at least 1m off the ground, and should not be placed directly in front of the speaker system.

- Connect the antenna, a balanced cable AF line (not supplied) to your speaker or amplifier system, and plug in the power adaptor.
- Adjust the antenna so that it is vertical.
- Switch on the power, and while it is in stand-by, turn on the power of your speaker or amplifier system.
- Ensure not to use two machines with the same frequency in the same place at the same time.

## BOX CONTENTS

- 1 x Microphone Receiver
- 2 x Microphone
- 1 x Power Adaptor
- 2 x Sets of AA Batteries
- 1 x Audio Cable

## INSTALLATION & OPERATION (TRANSMITTER)

- Open up the battery compartment of the microphone, insert 2 x AA batteries and close the battery compartment.
- Switch on the power and the power light will flash once.
- The signal level on the receiver will light up to indicate that an effective signal is being received.
- Adjust the channel volume and the volume on your speaker or amplifier system.
- When the AF level lights up corresponding to the volume, the system is functioning normally.

## FLYOUT

1. Antenna
2. Balance Output
3. Power Input
4. Mix Out
5. LED Indicator
6. Volume Control
7. Power Button
8. Power Indicator
9. Power Switch

