

digitech

Audio Mixer with Bluetooth® Technology



User Manual AM-4230

Box Contents:



1 x Audio Mixer



1 x 3.5mm to 3.5mm Auxiliary Cable




1 x USB Charging Cable



1 x 6.5mm Plug to 3.5mm Socket Adaptor

Product Diagram:

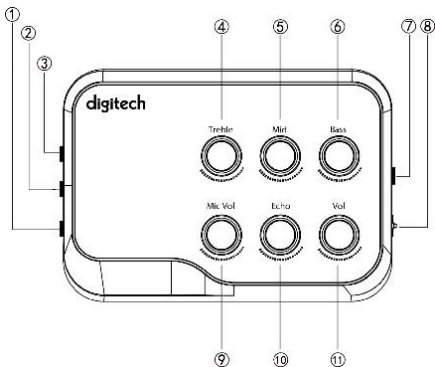

#	Feature	Description
1.	6.5mm Line Input	Connect to a wired 6.5mm microphone
2.	3.5mm Line Output	Connect to line input of any Bluetooth® or PA speaker

3.	3.5mm Line Input	Connect to an audio device such as a smartphone using the 3.5mm auxiliary cable
4.	Mic Treble	Adjust the microphones treble level
5.	Mic Mid	Adjust the microphones mid level
6.	Mic Bass	Adjust the microphones bass level
7.	USB Power Socket	Connect to the USB charging cable and suitable 5VDC USB charging source
8.	Power On/Off	Press the switch to turn the unit on or off
9.	Mic Volume	Adjust the microphones volume up or down
10.	Mic Echo	Adjust the microphones echo effect
11.	Main Volume	Adjust the main system volume up or down

Operation:

1. Turn the power switch to on which is located on the right side of the unit. If the unit has no power due to low battery, then connect the USB charging cable to a suitable USB power adaptor or USB computer port.
2. Once the mixer is powered on; the LED status indicator will start flashing blue indicating that is in pairing mode.
3. Open the settings of your smart phone or table and ensure Bluetooth® is turned on.
4. Once your Bluetooth® is enabled; scan for devices and the Bluetooth® name AM-4230 should appear.

Bluetooth® Name: **AM-4230**

5. Press the AM-4230 on the Bluetooth® device list and your smartphone or tablet should show that it is connected. The LED status indicator will begin flashing slowly indicating that it has been paired successfully.

6. Connect the 3.5mm to 3.5mm auxiliary cable to the 3.5mm line output located on the left side of the mixer.

7. Connect the opposite end of the 3.5mm cable to the line input of your Bluetooth® or PA speaker.

8. You can now start playing audio from your smartphone, tablet or computer. The volume can be adjusted from both the speaker and your device.

3.5mm & 6.5mm Audio Line In:

1. Insert a 3.5mm to 3.5mm auxiliary cable to the 3.5mm audio line input socket located on the left side of the mixer.

2. Insert the opposite end of the 3.5mm cable to a smartphone, tablet or computer. The music should start automatically playing if your Bluetooth® has been paired.

3. The mixer also has a 6.5mm line input which allows a wired 6.5mm microphone (not included) to be used. The microphone can be used while the Bluetooth® is playing for a karaoke effect. The treble, mid, bass, echo and volume can be controlled for the microphone.

Charging:

1. Insert the USB charging cable in a 5VDC mains USB power adaptor (not included) or a suitable USB charging port such as a computer.

2. Insert the USB charging plug in to the micro B USB charging socket located at the right side of the mixer.

3. The LED status indicator will be red once charging has started. Charging will be completed in around 3 hours.

4. Once fully charged; the LED status indicator will turn off.

5. The LED will be flashing red if it has detected a low battery.

Troubleshooting:

Problem:	Solution:
Battery Won't Charge Or Power On	Connect to a suitable USB charging source such as a 5VDC USB mains power adaptor or USB charging port and make sure it's correctly turned on.
	Make sure the battery is fully charged up to 3 hours and make sure the LED status indicator has turned off.
No Audio	Ensure the main volume is correctly turned all the way up.
	Ensure the volume of your audio device connected via Bluetooth® is turned up.

Problem:	Solution:
No Audio	Ensure the speaker connected to the 3.5mm line output is turned on and the volume is all the way up.
Bluetooth® Will Not Pair	Restart your audio device connected and turn the mixer off and on again.
	Type in the password "0000" if it asks you for one.

Safety:

1. Do not open the case of the mixer to avoid damage and injury.
2. Keep the mixer away from high temperatures as it may cause damage to the mixer.
3. Do not expose the mixer to water, moisture or liquids to prevent the unit from damage.

Features:

- . Bluetooth® Wireless Technology
- . 3.5mm Auxiliary Input & Output
- . 6.5mm Microphone Input
- . Rechargeable Battery
- . Treble, Mid, Bass, Echo & Volume Control

Specifications:

Inputs: 1 x 3.5mm Aux, 1 x 6.5mm Mic

Outputs: 1 x 3.5mm Aux

Bluetooth® Version: 4.2

Transmission Range: Up to 10m

Playback Time: Up to 10 Hours

Charging Time: Up to 3 Hours

Battery: 3.7V Li-ion, 1500mAh

Power: 5VDC, 500mA (Micro B USB)

Power Consumption: 500mA (Max)

Dimensions: 107(W) x 75(D) x 37(H)mm

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com