


User manual

⚠ Warning: High brightness lamp! Avoid staring or look directly at the light, specially for children.

Please read this specification carefully before you use the projector
 The company preserve the explanation right about the specification
 The product appearance and the UI interface ,Please in kind prevail
 The product technology or software upgrade without prior notice
 version: 182 (09) VGA

Product Overview

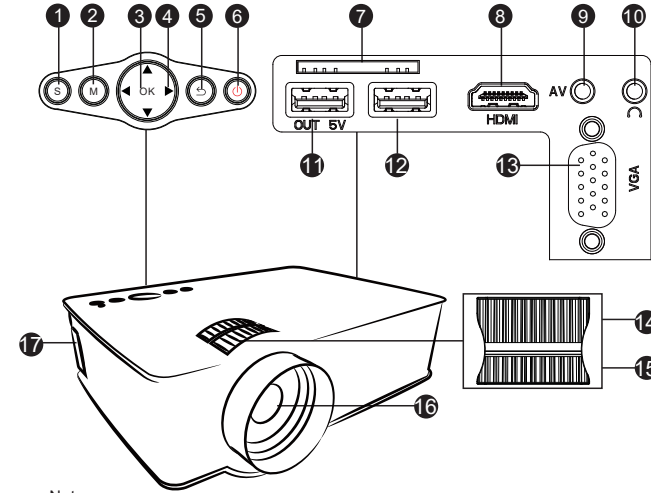


- 1.Signal Source
- 2.Menu
- 3.OK Button
- 4.Arrow Keys
- 5.Back
- 6.Power
- 7.Media Card
8. Video HD Input
- 9.Video Input
- 10.Earphone/3.5mm AUDIO OUT
- 11.5V Output
- 12.Media Input
13. VGA Input
14. Lens Focussing
- 15.Keystone Correction
- 16.Lens
- 17.Power Input(110-240V)

Note:
 please refer to the product appearance,
 this figure is for reference only.

Specifications

Imaging System	LCD	Power	110-240V~50/60HZ
Physical Resolution	800*480	5V Power	5V 500mA out
Light source	LED	Input Interface	Media/Media Card
Projection distance	1.0-3.0m		HDMI/AV/VGA
Projection size	32-120 inch	Output Interface	earphone
Aspect Ratio	16:9 /4:3	Projector Size	208*168.3*78mm
Keystone Correction	±15°Manual	Project Weight	944.5g

Remote Control

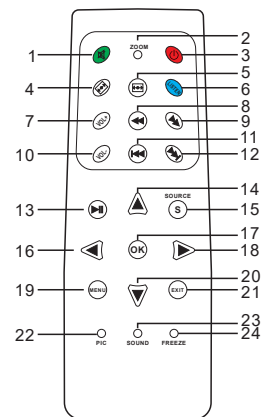

1. **Mute button:** turn on or off the sound output of the projector.
2. **Zoom keys:** the screen will display the switch to 16:9/4:3 or zoom mode.
3. **Power button:** Switch standby or working status of the projector.
- 4/5. **Flip key:** images, videos about Flip / upside down, multimedia
6. **Energy saving mode:** listen separately (only sound in this mode).
- 7/10. **volume keys:** volume up / volume down.
- 8/9/11/12. **Playback button:** fast forward / rewind / previous / next track.
13. **Play Pause button**
- 14/16/18/20. **arrow keys:** Menu mode parameter is used to adjust the projector.
15. **Signal selection key:** Switch the input signal source projector.
17. **OK button to confirm**
19. **Menu key:** call up or exit the projector's main menu.
21. **Exit function keys**
22. **image mode fast bond**
23. **Music mode shortcuts**
24. **Freeze:** When playing video, press this button to freeze the screen

Operating Instructions

1. Getting Started


- ①. Projector connect to power by the power line together with the projector.
- ②. After electrify the indicator light at the top of the projector shines, the projector is standby.

2. power on/power off

Press the "power" button on the top of the projector, or the button on the remote control, it start work.


3. Startup interface

After power on, the boot screen appear, like the picture.

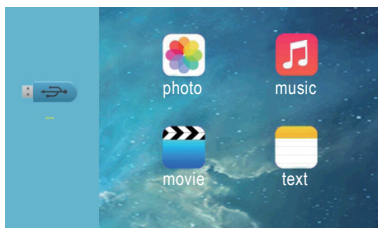


4. Focusing/ Keystone Correction

- ①. Keystone Correction
In different angel you put the projector, the projection will Deformation like trapezoid, use the keystone correction to make it correctly.
- ②. Image focus
Let projector be perpendicular to wall, with the Focusing button to make the picture clear. When focusing, you can broadcasting programs to help you finish focus.

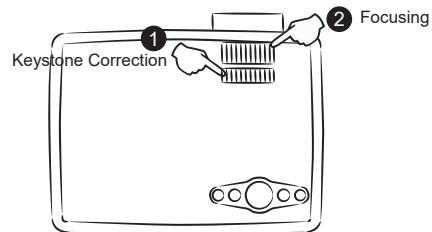


Note:
please refer to the product appearance, this figure is for reference only.

5. Connecting

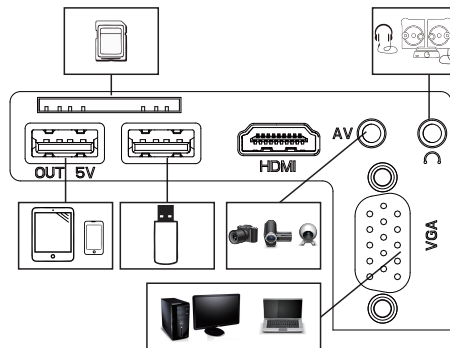

6. Network Multimedia Connect

- ①. Insert the removable storage, Media cards in the corresponding interface.
- ②. Choose the media signal channel : "channel "or"Media cards".
- ③. According to the broadcast programs to choose: " photos""music""movie""text".
- ④. Choose the file you want to play, press the key " play pause" to play or pause the file.

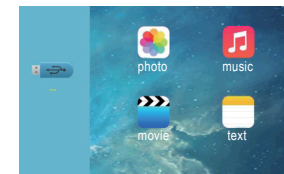

7. AV video equipment connecting

- ①. Use the 3in 1 video tieline comes with projector to connect with AV.
- ②. Choose the media signal channel : "AV".

8. HDMI or VGA equipment connecting

- ①. VGA and HDMI interface can be connected with the computer and other with VGA HDMI output interface device.
- ②. Choose the media signal channel : "HDMI" or "VGA"

9. 3.5mm audio equipment connecting


Support 3.5mm earphones and other cable sound equipment .

10. other connections

Could charge the mobile phone and ipad by 5V power.

Main menu action


1. Picture Menu

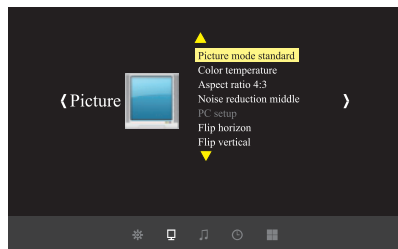

Picture Menu

Picture Mode	Standard/warm/user/Dynamic
Color temperature	Standard/warm/cool
Aspect	Auto/4:3/16:9
Noise reduction	OFF/LOW/MID/HIGH
Flip horizon	OFF/ON
Flip vertical	OFF/ON


2. Sound Menu

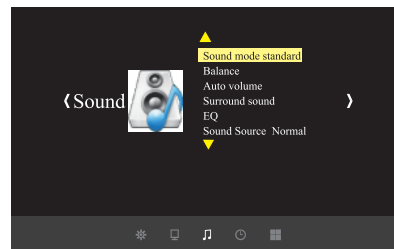

Sound Menu

Sound mode	Music/Movie/Sport/User/Standard
Balance	(-50~50)
Auto-volume	OFF/On
Surround Sound	OFF/Surround
Balance	(120/500/1.5K/5K/10K) Hz 50

3. Option

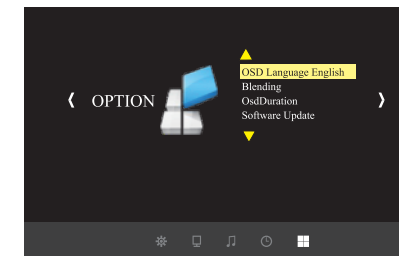

Option

Language	esky/English/Franais/Dansk...
Restore Factory Settings	YES/NO
Blending	OFF/LOW/MID/HIGH
OsdDuration	OFF/5S/10S/15S
Upgrate	Software update