


USER MANUAL

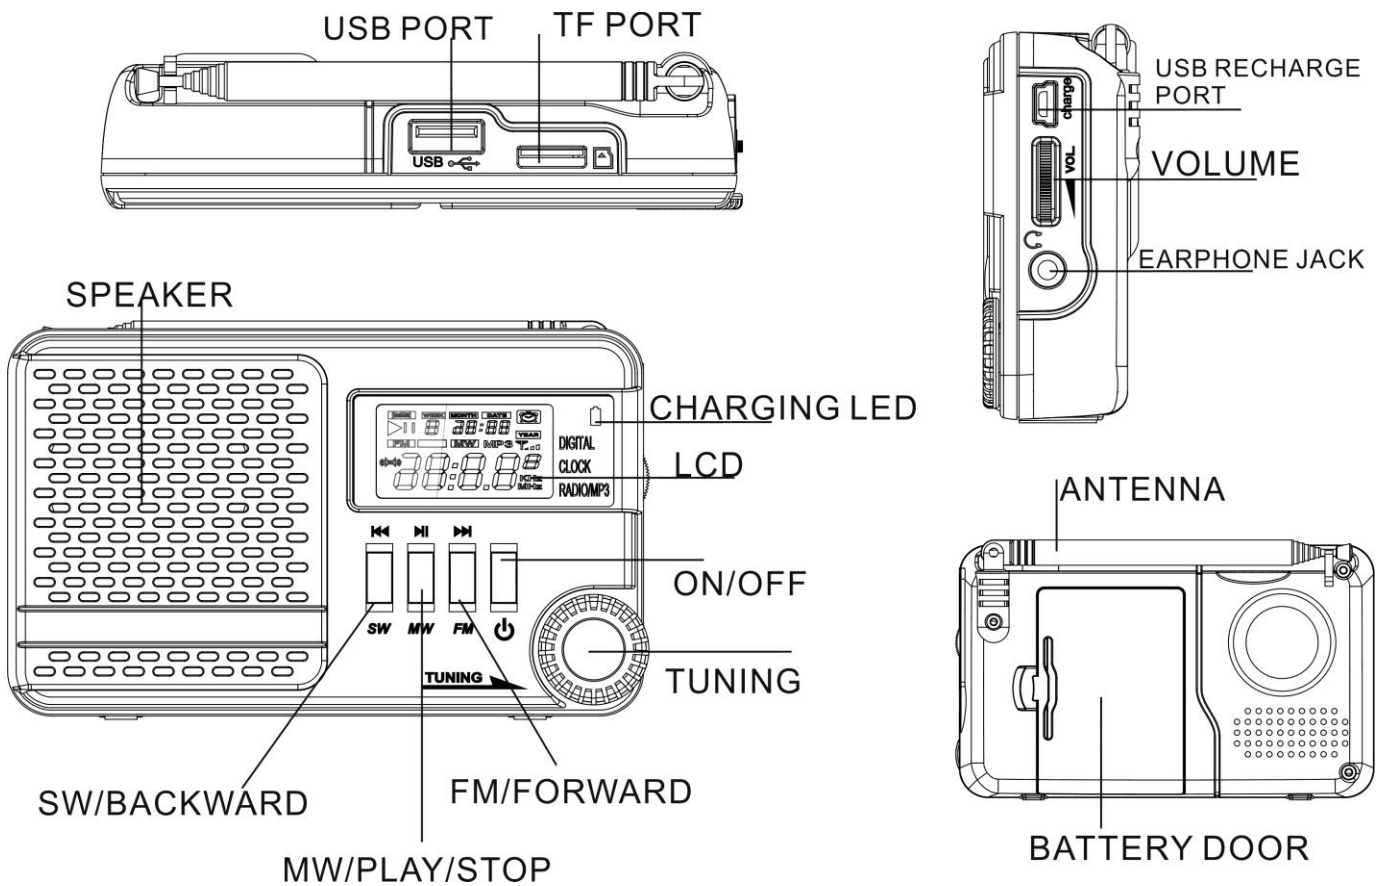

Main function:

1. Radio with FM1, FM2, MW, SW1-8
2. Alarm with radio (wake up radio)
3. Sleep Function (10-90 minutes)
4. time day, month, year display
5. Use coder tuning
6. MP3 player support TF card & USB port
7. Use Li-ion Battery

Insert Batteries

- a. Takeoff the batteries compartment cover
- b. Insert the LI-ION battery and make sure the polarity is correct
- c. Replace the cover
- d. The LCD will display the time:12:00

Setting the time

- a: Press FM/FORWARD key, the hour 12 will flash, use the TUNING knob to adjust the time
- b. Press FM/FORWARD key to finish the hour setting, at the same time, the minutes 00 will flash; also use the TUNING knob to make adjustment. And FM/FORWARD key to finish setting
- c. and then same way for Year, Month, Day

Setting Alarm

- a. Press MW/PLAY/STOP key, the ALARM icon will display on LCD, the LCD also display 6:00 (if you have set the alarm time, then before , then here display the time you set before)
- b. Press FM/FORWARD key, the hour: 6 flash, use Tuning Knob to adjust the Hour. Press FM/FORWARD key, the minutes 00 will flash, use TUNING knob to adjust the minutes.
- c. Press FM/FORWARD key to finish the setting
- d. Then when the alarm time coming, the Radio(FM) will be on.
- e. Turn on/off the alarm function, under the time display, Press MW/PLAY/STOP key, the alarm icon will be disappear, it means the alarm is off, press MV/PLAY/STOP key again, the alarm icon appear on LCD, it means the Alarm function is on.

Sleep Function

- a. Under the condition of radio off, keep pressing ON/OFF key for 3 second,
- b. the LCD will display 90 (it mean that after 90 minutes, the radio will be off automatically.)
- c. Use ON/OFF key to adjust time; it is from 90-10 minutes you can choice
- d. after you setting, the radio will be on, and a Sleep icon are display on the LCD
- e. when the time coming, the radio will be off

Using the radio

- a. Press ON/OFF Key to turn on the radio
- b. Turn the volume control knob to control the volume
- c. Press FM key to get the FM station, and press FM once more to get FM1 station (make sure the soft antenna have been inserted on the unit)
- d. Press MW key to get the MW station
- e. Press SW key to get the SW station, press SW key again and again, the SW will change from SW1 to SW8
- f. Rotate the Tuning knob to the frequency of your programmer, frequency display on LCD
- g. Turn off radio by pressing the Power Key
- h.

Using the MP3 to play TF card

- a. Insert the TF card into the TF port; or insert the USB memory bar into the USB port, Press the ON/OFF key to turn on the radio, and keep press MW/PLAY/STOP key for 3 second, the unit will play MP3 song
- b. Use the BACKWARD, PLAY/STOP FORWARD key to control the MP3 playing

How to recharge the battery

- a. Insert the rechargeable cable, one side insert into the computer or adaptor USB port, one side into the unit USB rechargeable port
- b. When charging, the charging LED will be on

Specification:

Frequency Range:	FM1: 70-88MHZ	SW4: 11.65-13.595MHZ
	FM: 87-108MHZ	SW5: 13.6-15.095MHZ
	MW: 522-1710KHz	SW6: 15.1-17.495MHZ
	SW1: 5.95-7.095MHZ	SW7: 17.5-21.445MHZ
	SW2: 7.1-9.495MHZ	SW8: 21.45-21.85MHZ
	SW3: 9.5-11.645MHZ	

Power: 3.7V Li-ion rechargeable battery

SPEAKER: 0.5W, 8Ω
BACKLIGHT: Blue color, 10 seconds maintain