

5.8GHz Wireless 1080p HDMI AV Sender



User Manual AR-1908

Box Contents:



1 x HDMI Transmitter



1 x HDMI Receiver



1 x Infrared Emitter




1 x Infrared Receiver




2 x Mains Power Adaptors

Product Diagram:

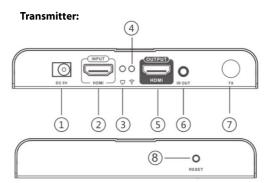


| # | Feature: | Description: |
|---|-------------------------|---|
| 1 | DC Power Socket | Connect to the 5VDC mains power adaptor |
| 2 | HDMI Input | Connect to the HDMI source device |
| 3 | HDMI Signal LED | Displays the HDMI signal input |
| 4 | Wireless Connection LED | Displays the TX/RX wireless connection |
| 5 | HDMI Output | Connect to a TV or Monitor |
| 6 | Infrared Output | Connect with the Infrared Emitter |
| 7 | Antenna Socket | Connect to the antenna |
| 8 | Reset Button | Press to reset the unit |

Receiver:

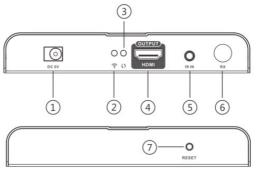

| # | Feature: | Description: |
|---|-------------------------|---|
| 1 | DC Power Socket | Connect to the 5VDC mains power adaptor |
| 2 | Wireless Connection LED | Displays the TX/RX wireless connection |
| 3 | Data Transmission LED | Flashes slowly on intitial connection |
| | | Flashes rapidly when successfully connected |
| 4 | HDMI Output | Connect to a TV or Monitor |
| 5 | Infrared Input | Connect with the Infrared Receiver |
| 6 | Antenna Socket | Connect to the antenna |
| 7 | Reset Button | Press to reset the unit |

Connection Diagram:

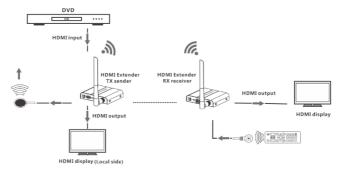

Operation:

Transmitter:

1. Connect the DC plug of the mains power adaptor to the power socket of the transmitter. Plug in the mains power adaptor to a 240VAC wall socket and turn it on.

- 2. Connect a HDMI cable (not included) from your source device such as Pay TV, DVD player or media player to the HDMI input of the transmitter.
- Connect a HDMI cable (not included) from the HDMI output of the transmitter to your TV or Monitor's HDMI input. This will allow you to view your TV or monitor while transmitting the signal.
- Connect the Infrared (IR) emitter cable to the IR Out socket located on the transmitter.
- 5. Peel off the 3M sticker located on the back of the infrared emitter and stick the emitter in front of the infrared port of your device such as Pay TV, DVD player or media player. The remote control of your device will still work even with the emitter placed over the top of the infrared port.

Please refer to your devices user manual if you're unsure of where the infrared port is located.

Receiver:

- 1. Connect the DC plug of the mains power adaptor to the power socket of the receiver. Plug in the mains power adaptor to a 240VAC wall socket and turn it on.
- Connect a HDMI cable (not included) from the HDMI output of the receiver to your TV or Monitor's HDMI input.
- 3. Connect the Infrared (IR) receiver cable to the IR In socket located on the receiver.
- 4. Peel off the 3M sticker located on the back of the infrared receiver and stick it in the front corner of your TV or your desired location. You will be able to use your original remote of your device to change channels, volume etc.
- 5. Once everything is connected and switched on, you will see the LED indicators light up and the video will be transmitting to your TV or monitor.

Troubleshooting:

| Problem | Solution |
|---------------------------|--|
| | Re-position the transmitter and receiver |
| | closer together as it may be out of range. |
| | Walls and solid objects will reduce the |
| | transmission range |
| | Check to see if your source device and |
| No video is displayed | TV's/monitors are all switched on |
| | Reconnect the HDMI cables on both the |
| | transmitter and receiver |
| | Reset the transmitter and receiver |
| | Check to see if the wireless connection |
| | LED is lit |
| | Check to see if the mains power adaptors |
| LFD indicators won't show | are connected properly and switched on |
| LED INDICATORS MOULT SHOW | Reconnect the HDMI cables on both the |
| | transmitter and receiver |

| Check if the source device and |
|---|
| TV/monitors are all switched on |
| Re-position the transmitter and receiver |
| closer together as it may be out of range |
| Reset the transmitter and receiver |
| Reconnect the HDMI cables on both the |
| transmitter and receiver |
| Turn off any other 5.8GHz device near the |
| device to avoid interference |
| |

FAQ:

1. Q: Why am I only getting a short wireless distance?

A: The transmission distance will be reduced when obstacles are between the transmitter and receiver such as walls or solid objects.

2. O: Can an additional HDMI receiver be connected?

A: No; This unit operates on a point to point connection only.

Safety:

- Do not open or repair the device without professional assistance to avoid electrical shock.
- Do not expose this unit to water, moisture or any liquid
- Position the unit in a well ventilated area to prevent the unit from overheating.
- 4. Only use the supplied 5VDC, 2A power adaptors. If you use any third party power supplies, ensure the voltage is the same to prevent the unit from damage.

Specifications:

Wireless Frequency: 5.8GHz Wireless Range: Up to 30m

HDMI: 1.3a HDCP: 1.4

Resolution: 1080p (1920 x 1080) @ 50/60Hz

1080i (1920 x 1080) @ 50/60Hz 720p (1280 x 720) @ 50/60Hz 576p (720 x 576) @ 50Hz 576i (720 x 576) @ 50Hz 480p (640 x 480) @ 60Hz

480i (640 x 480) @ 60Hz

Audio: L/R Stereo Audio

Maximum Transfer Rate: 10.2Gbps

Latency: ≤ 200ms

Infrared Frequency: 20-60KHz (Supports IR Passback)

Power Consumption: 1A Max

Power: 5VDC, 2A

Dimensions: 118(W) x 80(D) x 22(H)mm (Each)

Distributed by:

TechBrands by Electus Distribution Pty. Ltd. 320 Victoria Rd, Rydalmere

NSW 2116 Australia Ph: 1300 738 555

Int'l: +61 2 8832 3200 Fax: 1300 738 500

www.techbrands.com