





Brand code list

Table listing various electronic brands and their corresponding codes. Includes categories like TV, Video, Audio, and Satellite. Brands listed include Yamaha, Pioneer, Sony, and many others.

Brand code list

Table listing various electronic brands and their corresponding codes. Includes categories like TV, Video, Audio, and Satellite. Brands listed include Yamaha, Pioneer, Sony, and many others.

Programming your remote

Locking the Master volume control

You can use a single device, such as your TV, to control the volume even when another device is selected. To do so you need to lock the volume once the TV is programmed.

Example: TV volume control in every mode;

1. Press TV.

2. Press and hold the red & blue keys for 3 seconds. The red LED will light up twice.

3. Press 9 9 3.

4. Press the Volume (+) key and the red LED will blink twice.

Result: In every mode, whenever you press the VOL+/- or MUTE keys, this will be send out from TV mode.

To cancel the "Volume Lock" per mode (e.g. DVD mode):

1. Press and hold the red & blue keys for 3 seconds. The red LED will light up twice.

2. Press 9 9 3.

3. Press DVD.

4. Press the Volume (-) key and the red LED will blink four times.

Result: DVD mode will control its own VOL+/- and MUTE again.

Resetting your remote

To reset all the programmed data on the remote control and start again from scratch:

1. Press and hold the red & blue keys for 3 seconds. The red LED will light up twice.

2. Press 9 8 0. The LED should blink twice, meaning the remote control has been reset.

Troubleshooting

Device does not respond to code entered

- Check you are using codes which correspond to your brand. Try another code and make sure you enter it within 10 seconds of initiating the programming mode (pressing and holding red & blue for 3 seconds)

- The distance between remote and TV is not optimal.

- Try getting closer or further away from the device and start the search again.

Device does not switch off during Auto or Manual programming

- The batteries in the remote control are weak.

- Replace the batteries.

- Take out the batteries, press all the buttons several times to discharge the remote control and re-insert the batteries.

- Try programming again.

- The device switches off during programming, but functions do not work after testing

- You may have missed the code. If you do not stop the auto search in time when your device switches off, start the process again to re-programme, and release the Power key as soon as the device switches off.

- Try using the Code Set up to find the correct code

AUSTRALIAN HELPLINE

- 1300 888 298

NEW ZEALAND HELPLINE

- 0800 14 255 69