

RESPONSE

FM Transmitter with Bluetooth® Technology



 
User Manual AR-3140

 
Box Contents:



1 x FM Transmitter with Bluetooth® Technology

Product Diagram:

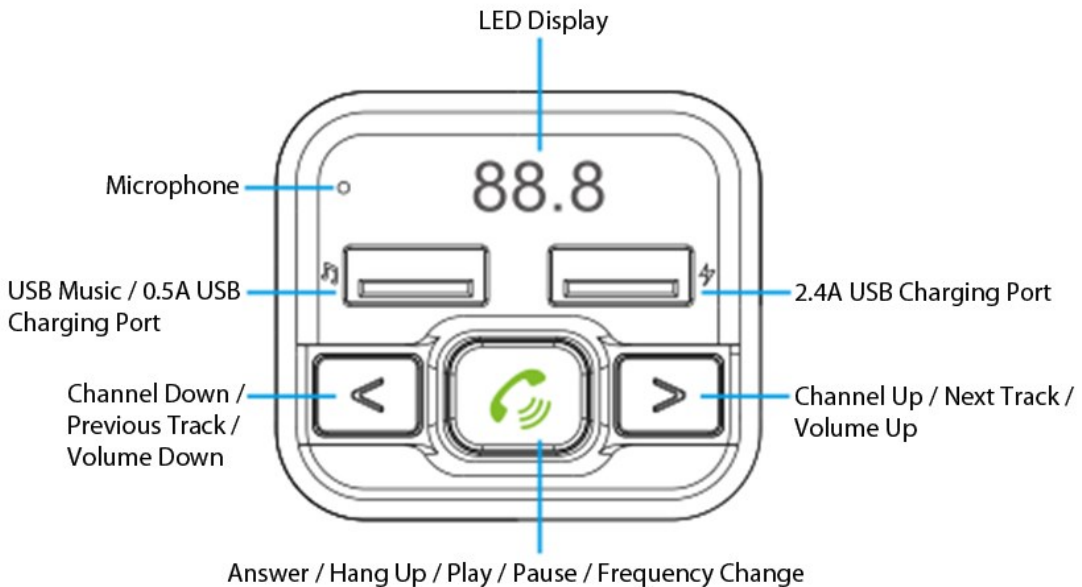

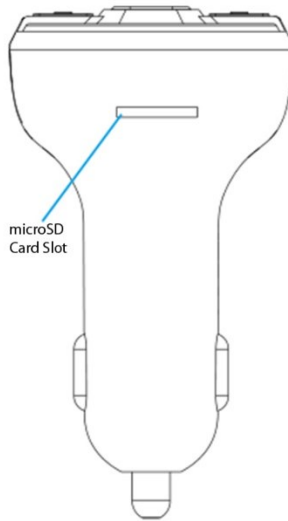


Operation:

FM Pairing:

1. Insert the FM Transmitter in to your vehicle's 12 or 24VDC cigarette lighter socket.
2. The FM transmitter will be automatically powered once your vehicle has been started.
3. Tune your car radio to an unused FM frequency between 87.5 and 108.0MHz.

Note: If you hear soft music, voices or loud static then it is suggested to change to another FM frequency.

 4. Press and hold the Frequency Change / Call button for up to 2 seconds. You will now see the FM frequency flashing on the LED screen.

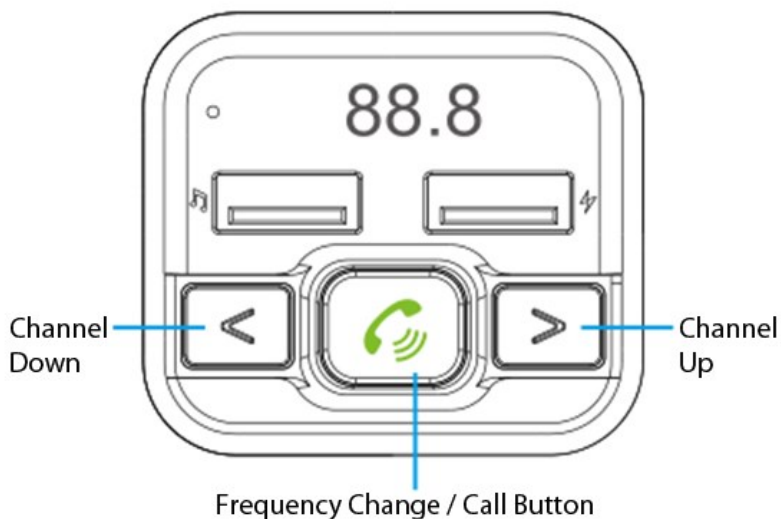

5. Press the channel up or down button and select the same FM frequency of your car radio between 87.5 and 108.0MHz.

6. Once the FM frequency has been selected; press and hold the Frequency Change / Call button for up to 2 seconds to set the FM frequency.

Bluetooth® Pairing:

1. Open the settings of your smart phone and ensure Bluetooth® is turned on.
2. Once your Bluetooth® is enabled; Scan for devices and the Bluetooth name Response AR-3140 should appear. If the name doesn't appear then please ensure the FM transmitter is correctly turned on.







Bluetooth® Name: **Response AR-3140**

3. Press the Response AR-3140 on the Bluetooth® device list and your smartphone should show that it is connected.

Note: Please use the Bluetooth® password “0000” if required. Most smartphones don't require a Bluetooth® password.

4. You can now start playing audio from your smartphone to the FM transmitter.
5. In order to change the volume; press and hold the volume up or down button. The volume may also be controlled by your smartphone.

Bluetooth® Hands-Free:

1. Press the call button  to answer an incoming call.
2. Press and hold the call button  to reject the incoming call if you wish not to answer it.
3. Once a call has been received; press the call button  again to hang up.
4. Press the call button  twice to dial the previous number automatically. Press the call button  again if you wish to cancel dialing.
5. Press and hold the call button  to change the audio output from your smartphone to your car stereo during calling.
6. The phone numbers can only be dialed by your smartphone. Once the call is connected; you can use the hands-free function to call again, hang up and receive calls.

Note: When an incoming call is received; it will automatically switch from music mode. It will revert back to music mode once the call has ended.

 
USB/microSD Playback:

1. Insert a USB flash drive or microSD card up to 32GB in the USB or microSD card slot.

2. Once the USB or microSD has been inserted; it will automatically start playing. Pulling out the USB or microSD card will prevent the FM transmitter from playing in Bluetooth® mode when your car has started.

Note: When your car has started in Bluetooth® mode; it will automatically switch to music playback mode after 7 seconds if no Bluetooth® audio has been detected. You can pause while in Bluetooth® mode by pressing the pause button or from your device to also make it switch to music playback mode.

3. Press the next or previous track button to change songs from your USB or microSD card. The format of the songs must be either in MP3 or WMA.

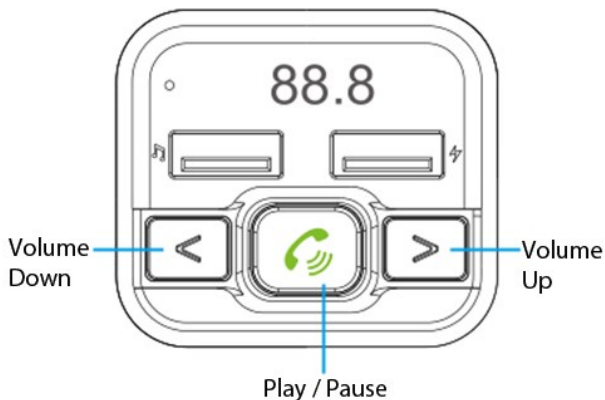

Troubleshooting:

Problem:	Solution:
LED Display Won't Turn On	Check to see if the device has been inserted correctly and your car has been turned on.
	Check if the cigarette lighter socket in your car is functioning correctly.
No Audio	Check to see if the volume is turned up on your smartphone.
	Check if the volume on the FM transmitter has been turned up.
	Check if the USB or microSD has been inserted correctly and formatted to FAT32 if playing in music mode.
USB/microSD Not Recognised	Check to see if the microSD or USB has been inserted correctly.
	Ensure the format of the USB/microSD is FAT32 or exFAT otherwise it will not work. Connect it to your computer to check the format or in order to change it from NTFS to FAT32 or exFAT.
Loud Noise & Static While Playing	Change the FM frequency to a more clear and unused channel otherwise this noise will continue.

Safety:

1. Do not open the case of this product to prevent the unit from damage.
2. Keep the FM transmitter away from high temperatures as it may damage the device.
3. Do not expose the FM transmitter to water or liquids to prevent the unit from damage.

Features:

- . Hands-Free Calls & Voice Prompt
- . USB & microSD Card Playback
- . In-Built Microphone
- . Dual USB Charging

Specifications:

Display: 0.8" LED

Bluetooth® Version: 4.2+EDR

Bluetooth® Protocol: AVRCP, HFP, A2DP

Bluetooth® Device Support: Requires V2.1+

Input Voltage: 10-28VDC

FM Frequency: 87.5-108.0MHz (206 Channels)

USB/microSD Capacity: Up to 32GB

USB/microSD Audio Format: MP3, WMA

USB/microSD Card Format: FAT32, exFAT, FAT16, FAT12

USB Output: 2.4A Max (Charging Port)

0.5A Max (Music/Charging Port)

2.9A Total

Dimensions: 70(L) x 43(W) x 38(H)mm

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com