

# digitech

## Mini Portable Boom Box with Bluetooth® Technology



## User Manual CS-2469

## Box Contents:



1 x Mini Portable Boom Box



1 x Carry Strap




1 x 3.5mm to 3.5mm Auxiliary Cable



1 x USB Charging Cable

# Product Diagram:

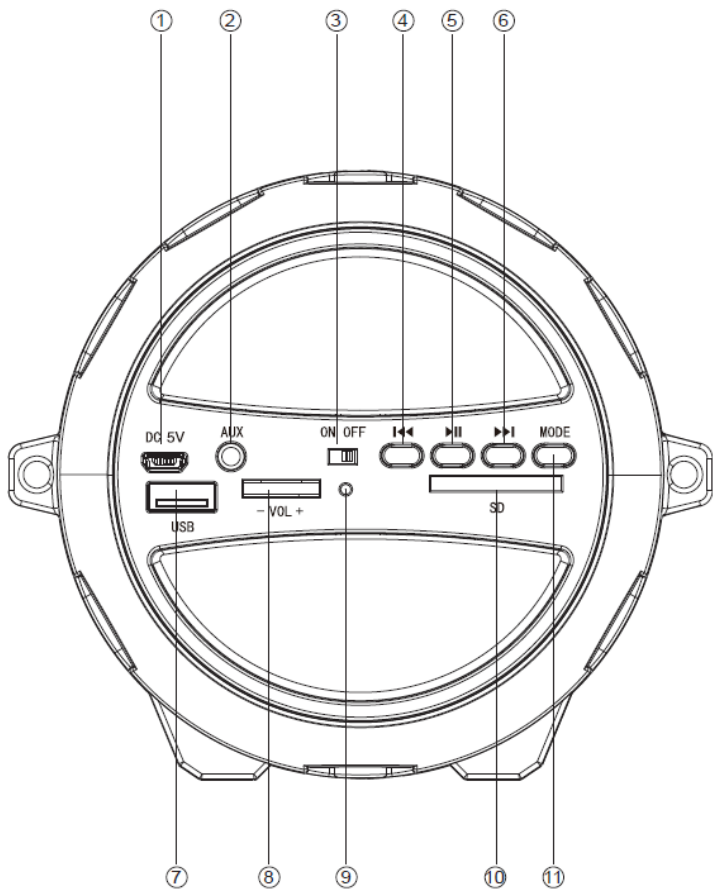

#	Feature:	Description:
1.	USB Power Socket	Connect to the USB charging cable and suitable USB charging source
2.	3.5mm Audio Input	Connect to an audio device such as a smartphone using the 3.5mm audio cable
3.	Power On/Off	Press the switch to turn the unit on or off
4.	Previous Track	Press to skip to the previous track
5.	Play/Pause	Press to play or pause current music tracks
6	Next Track	Press to skip to the next track
7.	USB Input	Insert a USB flash drive up to 32GB
8.	Volume	Adjust the main system volume up or down
9.	LED Status Indicator	Displays the current power/charging status
10.	SD Card Slot	Insert a SD card up to 32GB
11.	Mode Button	Press to switch between Bluetooth, USB, SD, FM Radio and 3.5mm aux modes

## **Operation:**

### **Bluetooth® Pairing:**

1. Press the power on switch located on the front of the speaker. If the unit has no power due to low battery, then connect the USB charging cable to a suitable USB power adaptor or USB computer port.
2. Once the speaker is powered on; it should start automatically flashing blue in Bluetooth® mode and will beep twice. If it's showing something different, then press the mode button to find BT.
3. Open the settings of your smart phone or tablet and ensure Bluetooth® is turned on.
4. Once your Bluetooth® is enabled; scan for devices and the Bluetooth® name CS-2469 should appear. If the name doesn't appear then please ensure the speaker is correctly powered on and the correct mode is selected.

Bluetooth® Name: **CS-2469**

5. Press the CS-2469 on the Bluetooth® device list and your smartphone or tablet should show that it is now connected. The speaker will beep 3 times for successful connection.

6. You can now start playing audio from your smartphone or tablet. The volume can be adjusted from both the speaker and your device.

**Note: If the speaker can't be connected; then please restart the speaker or the device and try again.**

## **Audio Line In:**

1. Insert a 3.5mm to 3.5mm auxiliary cable to the 3.5mm audio input sockets located at the front of the speaker.
2. The music should automatically start playing from aux mode once you have inserted the cable, press the mode button if you're already in another mode to switch to aux mode.
3. You can now play, pause or skip tracks from your audio device such as a smartphone, tablet, computer or MP3 player.

## **USB/SD Card Playback:**




1. Press the on switch to turn the speaker on.
2. Insert a USB flash drive or SD card in to the USB or SD card slot. The blue LED indicator will be flashing.
3. The USB and SD card mode will automatically turn on once it has been inserted. You can now play, pause or skip tracks from either the USB or SD card.
4. The music audio formats supported are MP3, WMA and WAV. It will play the tracks randomly.

**Note: The USB and SD card needs to be formatted to FAT32. it is suggested to copy the music files to the root directory and remove unnecessary files to read faster.**

**Inserting a USB or SD card while in Bluetooth mode will automatically switch to USB/SD mode.**



## **FM Radio:**

1. Press the mode button and switch to FM radio mode. The FM radio station 87.5 will appear on first time use.
2. Press the play/pause  button to start automatically searching for a FM radio station.
3. Press the previous  or next  track buttons to switch between 87.5 and 108.0MHz FM radio frequencies.

**Note: Inserting the 3.5mm to 3.5mm auxiliary cable in to the audio input may result in a slight radio signal improvement.**

## **Charging:**

1. Insert the USB charging cable in a 5VDC mains power adaptor (not included) or a suitable USB charging port such as a computer.
2. Insert the USB charging plug in to micro B USB charging socket located at the front of the speaker.
3. The LED status indicator will be red once charging has started. Charging will be completed in around 3 hours.
4. Once fully charged; the LED status indicator will turn off.
5. The LED will be flashing red if it has detected a low battery.

**Note: Please disconnect the mains power adaptor when not in use as leaving a full battery on charge may cause damage to the battery.**

# Troubleshooting:

<b>Problem:</b>	<b>Solution:</b>
Battery Won't Charge Or Power On	Connect to a suitable USB charging source such as a USB mains power adaptor or USB charging port and make sure it's correctly turned on.
	Make sure the battery is fully charged up to 3 hours and make sure the LED status indicator has turned off.
	If you have left the USB charging cable connected to a power source and the speaker unused for a long period of time; it may have caused damage to the battery.
No Audio	Ensure the volume is correctly turned up depending on the main or microphone volume.
	Ensure the volume is correctly turned on your audio device if connected in Bluetooth® mode.
	Try a different audio source or mode; it may be your device not transmitting audio.
Bluetooth® Will Not Pair	Restart the speaker and smartphone or tablet.
	Type in the password "0000" if it asks you for one.
	Make sure the mode of the speaker is selected to "BT" and the Bluetooth® is turned on from your device.

<b>Problem:</b>	<b>Solution:</b>
USB/SD Not Recognised	<p>Ensure the format of the USB or SD card is in FAT32.</p> <p>Plug in to a computer to check or change the current format.</p>
	<p>Make sure the USB or SD card is below 32GB capacity.</p>
	<p>Ensure the USB and SD card is inserted correctly and try to restart the speaker.</p>
No Power / LED Display	<p>Ensure the USB charging cable is properly to USB charging port or USB charging adaptor.</p>
	<p>Check to see if your USB power source is working correctly.</p>
Low Radio Signal	<p>Try to move the speaker to another location or insert the 3.5mm cable into the aux jack to slightly improve the signal.</p>

## **Safety:**

1. Do not open the case of the speaker to avoid damage and injury.
2. Keep the speaker away from high temperatures as it may cause damage to the speaker and battery.
3. Do not expose the speaker to water, moisture or liquids to prevent the unit from damage.
4. If using a third party mains power adaptor; make sure the voltage and current match the specifications as 5VDC, 500mA or above.

## **Features:**

- . Bluetooth® Wireless Technology
- . USB & SD Card Playback
- . FM Radio
- . Rechargeable Battery
- . 3.5mm Auxiliary Jack

## Specifications:

Bluetooth® Version: 4.2+EDR (A2DP)

Output Power: 8.5WRMS

Inputs: 1 x 3.5mm Aux

Audio Sources: Bluetooth®, USB, SD, FM Radio

Tweeter Size: 3"

Transmission Range: Up to 10m

Frequency Response: 100Hz-20KHz

Sensitivity: >61dB

Speaker Impedance: 4Ω

FM Frequency: 87.5-108.0MHz

USB/SD Capacity: Up to 32GB (FAT32)

USB/SD Audio Format: MP3, WMA, WAV

Playback Time: 2-5 Hours

Charging Time: Up to 3 Hours

Battery: Li-ion 3.7V, 1500mAh

Power: 5VDC, 1A

Power Consumption: 750mA (Max)

Dimensions: 250(L) x 138(Dia)mm

Distributed by:  
TechBrands by Electus Distribution Pty. Ltd.  
320 Victoria Rd, Rydalmere  
NSW 2116 Australia  
Ph: 1300 738 555  
Int'l: +61 2 8832 3200  
Fax: 1300 738 500  
[www.techbrands.com](http://www.techbrands.com)