



Cooler/Warmer GH-1373 User Manual

FEATURES

This cooler/warmer is designed to keep your food and drinks cool or warm during your travels, please note it is not designed to freeze or cook food. Depending on the operating conditions the unit will cool up to 18 degrees below ambient temperature and heat up to 50-65 degrees .

The 12V power cable can be plugged into the cigarette lighter socket in your car, boat or caravan. The cooler/warmer is also suitable for camping use however it should not be exposed to any rain, moisture, dirt, dust or sand.

SETUP

Mounting the unit: Assemble the seat belt strap to the unit as per the following diagram.

1. Put the belt through the 2 holes on the housing, as shown on 1 and 2.
2. Set the belt as shown in 3 and 4 with the belt through the buckle follow the arrows.
3. Pull the belt at both ends and ensure it is safely set.

Use the seat belt strap to securely fasten the unit inside your car, boat or caravan. Ensure the unit is mounted so that it is in a secure position and cannot easily fall in the case of car braking etc. Also ensure it is away from direct sunlight.

Connecting of the power cable: Simply plug the 12V cable into the lighter socket in your car, boat or caravan.

