



GH1596

Fridge Slide



INSTRUCTION MANUAL

CONTENTS

General Information & Safety Instructions.....	3
Box Contents.....	3
Product Diagram	4
Before First Use.....	4
Preparing For The Fridge Slide Install.....	5
Tie Down the Fridge	6
Important Notes.....	6
Cleaning, Care, Storage & Maintenance	7
Specifications	7
Warranty Information.....	8

GENERAL INFORMATION & SAFETY INSTRUCTIONS

Product introductions, safety warnings, & any other relevant information that doesn't fit anywhere else in the manual.

Any disposal or recycling instructions should be included here.

Any major warnings or notes should be clearly addressed at the end of this section in the below method;

For safety warnings, age restrictions & recommendations;

WARNING: The manufacturer is not responsible for any potential injury from misuse

Throughout the manual any important notes should be clearly identified using addressed as per below;

NOTE: The product should be placed in a secure location before turned on

BOX CONTENTS



1x Fridge Slider



Mounting Kit
6 x M6 washers
6 x M6 tee nuts
6 x M6 x 20mm bolts



Tie Down Kit
4 x nylon straps

PRODUCT DIAGRAM



BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Please pay close attention to the section entitled Important Safety and General Instructions. Find a safe and convenient place to keep this instruction manual for future reference.


1. Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual. Plastic wrapping can be a suffocation hazard for babies and children so ensure all packaging materials are out of their reach.
2. Address any steps taken before turning on or using the product for the first time. This section should contain any relevant images or procedures, e.g., charging a battery, installing propellers or applications on mobile devices.

WARNING: The manufacturer is not responsible for any potential injury from misuse

NOTE: Place the product on a dry, flat, even surface.

PREPARING FOR THE FRIDGE SLIDE INSTALL

Slide needs to be installed on a flat even surface with a minimum of 12mm thickness. You will require the use of an electric drill to install the slide.

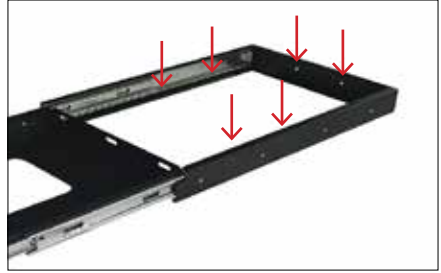

1. Open the slide by depressing the lock lever on the right, then pull slide forward to reveal the fixing holes in the side rails.

2. Mark the six drilling points through the slide fixing holes with a permanent marker.



3. Drill six 7mm holes for the Tee Nuts.

4. Insert the Tee Nuts into the holes ensuring the nuts are upright and square to the hole.



5. Flatten the Tee Nuts with a mallet or hammer.

6. Position the fridge slide on the flat surface. Use the 6 x M6 bolts to fix to the surface.

TIE DOWN THE FRIDGE

Secure your fridge on the slide by using the 4 nylon straps supplied. Make sure the straps are tight and secure.



IMPORTANT NOTES

- The slide must be securely and evenly bolted down to the floor of the vehicle or to wherever the slide is to be used.
- Under no circumstances can the slide be used other than when it is fixed down correctly on a smooth even surface with no contortion of the frame.
- The sliding tray is activated by depressing the right hand side lever on the front to pull forward and lock in.
- Heavy pushing without depressing the lever will result in damage to the lever.
- Ensure that the tray is firmly locked into place when returning the tray to its inward position.
- This slide is designed to carry fridges up to 80kgs including contents. It is not recommended for commercial use and no warranty applies if used so.

CLEANING, CARE, STORAGE & MAINTENANCE

- Clean with a damp cloth.
- Store away in a cool dry place away from dirt and debris.
- Avoid impacts and keep threads and valve free from dirt and debris.

SPECIFICATIONS

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555