
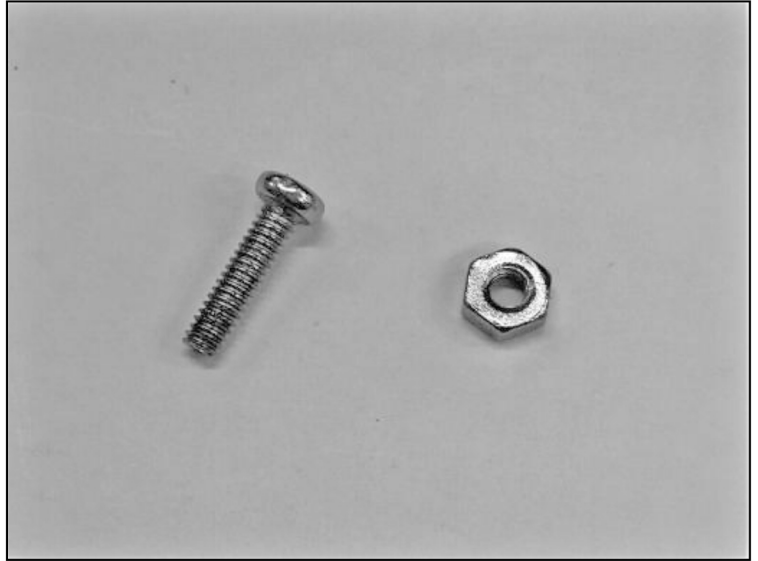


GT3706 – Useless Box

Instructions to Open/Close Battery Compartment

(please ensure to remove brown protective film on all surfaces of the product before use)

1. The battery compartment is the side with a single panel (pictured in side view). When removing the screws, take care not to lose the nuts and it is advised not to remove the screw on the top edge completely (circled) - simply loosen it enough to be able to open the panel.

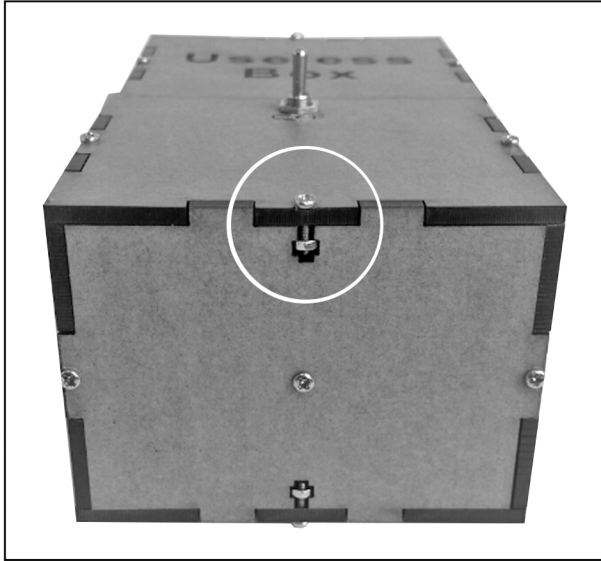

2. After the battery has been connected, the screws and nuts must be replaced carefully one at a time.
- First, sit the Useless Box so that the screw will be inserted from the top and carefully place the nut in the gap as pictured, ensuring that it does not fall into the box (in the instance that it does happen, gently shake the box with an opening downwards until the nut falls out).
 - Second, place the screw through the hole carefully into the nut.
 - Lastly, gently screw down with a screwdriver.
 - Repeat with all remaining screws.

(1)



(2)



(3)

