

# 1:58 R/C Mini Boat Twin Pack


GT3771  
AGES UP 8+



## User Manual

### Installation:


1. Open the packaging and slide out the inner packages.

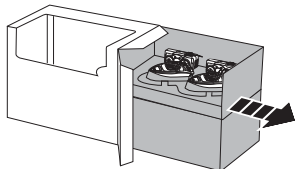


2. Remove the sticker from the back of the inner pads and remove the boats from the packaging.



3. Remove the remote controls out of the packaging.

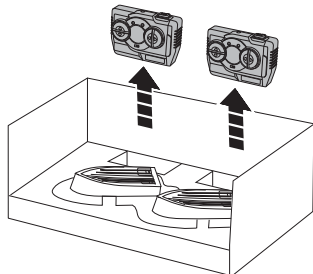


4. Using a screwdriver, loosen the screws on the battery compartment of the remote control and insert 3 x AA batteries (not included) using the correct polarity. Replace the battery cover and tighten the screws in place.

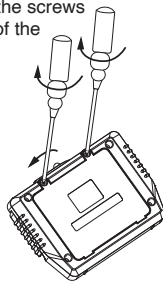

5. Remove the sticker and take out the inflatable pool from the packaging. Open the air valve of the pool and use the inflatable pool pump to fill it with air.

 
Connect the hose to the inflatable foot pump and insert it into the air valve of the pool.



Use the inflatable pool pump to fill the pool with air by repeatedly pressing on the pump with your foot. Once finished then close the air valve of the pool tightly in place.



 Once you have finished with the pool, release the drain valve inside the pool to empty the pool of water.




Drain Valve

### Charging:



1. Slide open the charging compartment on the right side of the remote control.
2. Pull out the battery connector and connect it with the charging port located on top of the boat.
3. The LED charging indicator will turn on once charging, it will turn off once the charging has finished.

CHARGING INDICATOR

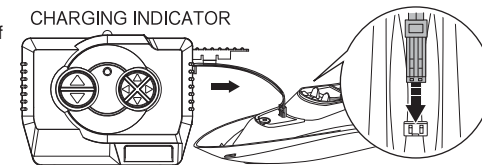



### Operation:

1. Once the batteries have been inserted in the remote, it will start transmitting once the buttons are pressed.  
Note: It is recommended to fully charge the boats before use.
2. Make sure the pool has been fully filled with air and the inside with water.
3. Place the boats on top of the water; the boats have sensors on the bottom and will automatically turn on once placed in water.
4. Start operating the boats with the remote control.

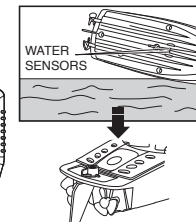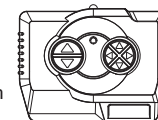

### Remote Control:

 1. Once the batteries have been inserted, the remote will start operating once buttons have been pressed.
2. Pressing forwards and backwards on the remote control will make the boat go forwards or backwards.
3. Pressing the left and right turn buttons will direct the boat either left or right.

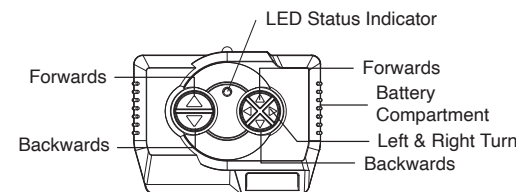

### Safety & Warnings:

- Children have drowned in portable swimming pools. Ensure active adult supervision at all times.
- Do not leave children unsupervised in or around the pool—keep them within arm's reach.
- Empty and store the pool safely after use.
- Batteries need to be inserted using the correct polarity.
- Do not mix alkaline, zinc carbon or rechargeable batteries together.
- Do not short circuit the battery terminals.
- Do not touch the propellers when in use.
- Do not leave the boats in water for extended periods of time.

### Specifications:

Frequency: 2.4GHz  
Remote Control Range: Up to 10m  
Play Time: Up to 8 Minutes  
Charging Time: Up to 8 Minutes  
IP Rating: IPX6  
Batteries:  
Boat: 2.4V Li-ion, 50mA (Included)  
Remote: 3 x AA (Not Included)  
Dimensions:  
Boat: 151(L) x 47(W) x 42(H)mm (Each)  
Remote: 93(L) x 70(H) x 29(D)mm (Each)  
Pool: 1250(L) x 970(W) x 125(H)mm (Inflated)

### Warranty Information:

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose. This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure. To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Any expenses relating to the return of your product to the store will normally have to be paid by you. The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution  
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766  
Ph. 1300 738 555