

3+
FOR AGES

RCTECH

HI-CALIBRE



 
(Operating instruction)
GT-4205

Please read the instructions carefully before using.
Please keep instructions for future use.


Contents



Mini racer x1



Transmitter x1

 

Instruction sheet x1




Antenna x1




Road-block x4

Part details

● Transmitter



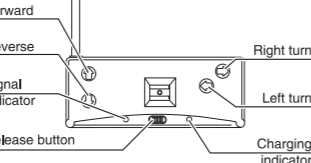


● Mini racer

 


Preparation

   1. Open the can, detach the can cover and can body. Push the LOCK inside the can cover towards the direction shown to release the 4 ROAD-BLOCKS.
2. Take out the transmitter and mini racer from the can body. Press down the RELEASE BUTTON, slide the mini racer in the direction shown to release it.
3. Slide the transmitter's battery compartment cover towards the direction shown and open it.



 
4. Insert 2 x AA batteries with the correct polarity, then replace the battery compartment cover.



5. Press any button, the SIGNAL INDICATOR light that the battery is installed correctly.





 6. Insert and tighten the antenna to the antenna hole on the transmitter as illustrated.







Charging the mini racer

 1. Open the charger cover as illustrated and take out the CHARGING PLUG.
2. Insert the CHARGING PLUG to the CHARGING JACK on the bottom of the mini racer, the CHARGING INDICATOR lights up to indicate the charging is in process.
3. The mini racer is fully charged when the CHARGING INDICATOR goes off.

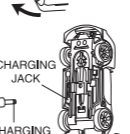

Operation

    1. Extend the transmitter's antenna for better signal reception. Move the ON/OFF switch on the mini racer to ON, and place it on the ground.
2. The transmitter is full-function:
 - (1) The SIGNAL INDICATOR lights up when any button on the transmitter is pressed.
 - (2) The mini racer run forward and lights up its headlights when the transmitter's FORWARD button is pressed. The mini racer run reverse and lights up its tail lamps when the transmitter's REVERSE button is pressed.
 - (3) Pressing the LEFT/RIGHT button on the transmitter while the mini racer is running forward or reverse, the mini racer will make left/right turns.
 - (4) The RELEASE BUTTON on the transmitter is used to release the mini racer which is locked on the transmitter when packaging.
3. The DIRECTIONAL GUIDE is used to adjust the mini racer's direct-line-running-performance.



Notes:

- * Models available in 27MHz or 40MHz. Get either frequency to race against each other, only 2 different frequency models at 1 time.
- * Max driving distance is around 10 metres
- * Charging time on average is 5 minutes, with a 7 minute driving time

Cautions:

- * Use product as intended, follow instructions and heed to Cautions
- * Never mix old batteries with new for the remote control
- * Never mix different batteries types (i.e. rechargeable, disposable alkaline, heavy duty) for the Remote
- * Never attempt to open, modify or repair the Remote Control or the Car
- * ALWAYS give the car a charge before and after use
- * ALWAYS remove batteries from the Remote Control when not is use