
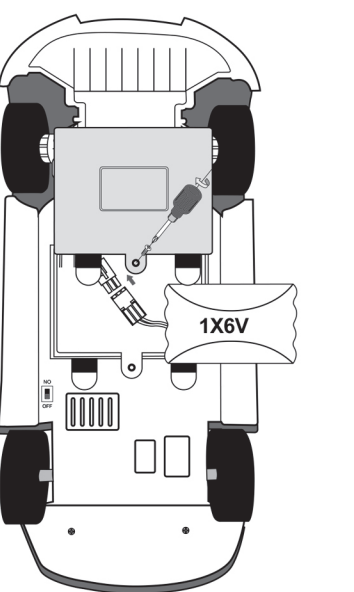
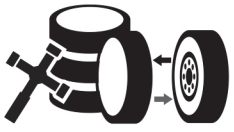
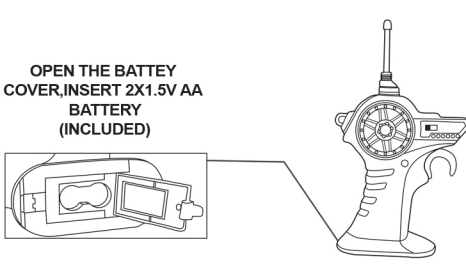
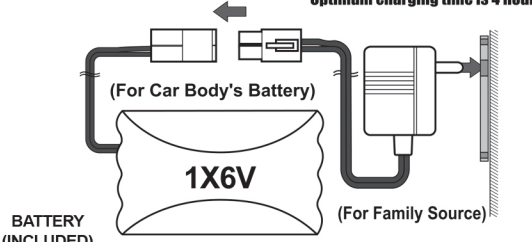


<p>INSERT THE BATTERY SET OF THE CAR</p> <p>OPEN THE BATTERY COVER, INSERT THE 6V BATTERY SET FIT BACK THE BATTERY COVER</p>  <p>1X6V</p>  <p>EXTRA GRIP RACING WHEELS (INCLUDED)</p>	<p>INSTRUCTION OF THE CONTROLLER</p> <p>OPEN THE BATTERY COVER, INSERT 2X1.5V AA BATTERY (INCLUDED)</p>  <p>CHARGE THE 6V BATTERY SET</p> <p>The car must be charged with the special charger, be sure that the technology parameter is fit for the charger. Do not help yourselves to match a charger. Optimum charging time is 4 hours.</p>  <p>(For Car Body's Battery) 1X6V (For Family Source)</p>
--	--

--Functional specifications

 
Forward, Backward, Turn Right & Left, Drift.

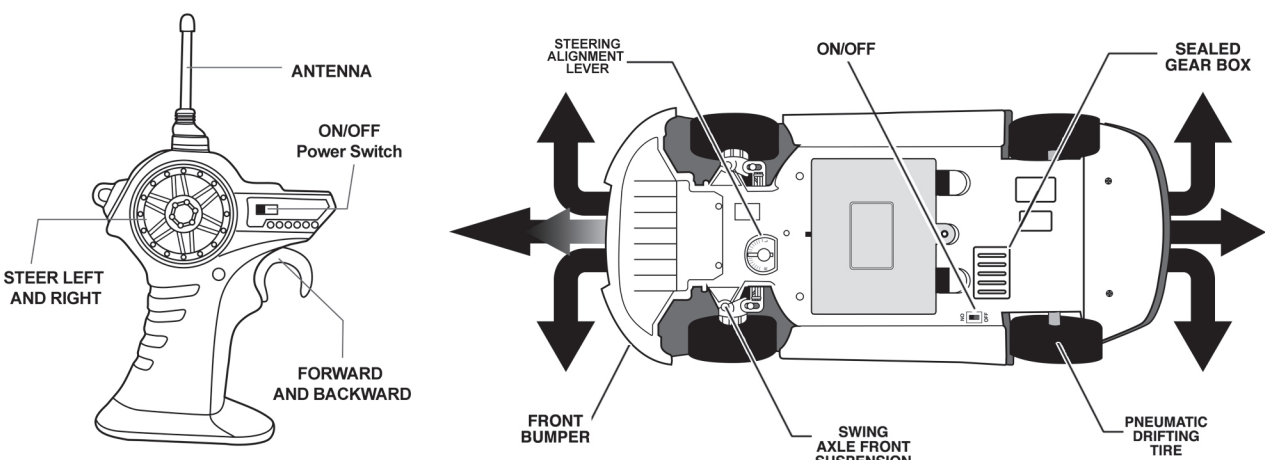

Controller Labels: ANTENNA, ON/OFF Power Switch, STEER LEFT AND RIGHT, FORWARD AND BACKWARD

Car Labels: STEERING ALIGNMENT LEVER, ON/OFF, SEALED GEAR BOX, FRONT BUMPER, SWING AXLE FRONT SUSPENSION, PNEUMATIC DRIFTING TIRE

⚠ CAUTION

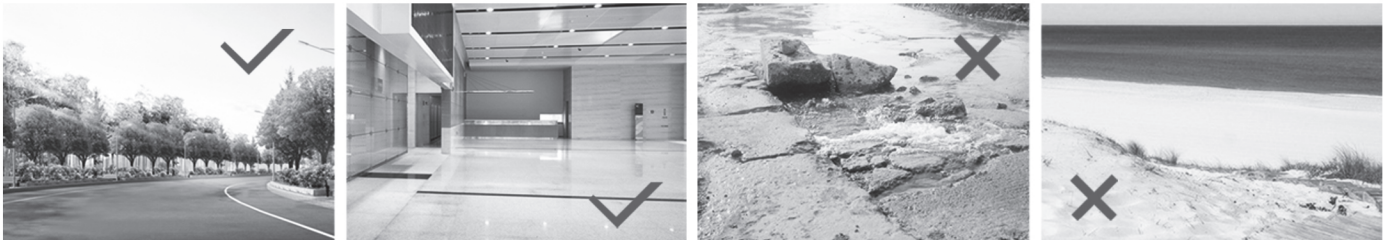

1:16 scale Drift Racing Car series are applicable to use in the wide flat ground, such as public garden, hall, school track etc. But does not apply to the uneven and ponding place such as beach, steep slope, marsh land. Please follow the instructions with many thanks.



Use instruction

- Thank you for choosing our toy R/C car. To ensure correct and pleasing operations, please read through the following use instruction and have enough understanding of the product before using.

Functions and Specification:

- Full Function: Forward, Backward, Turn Right & Left, Drift.
- Batteries: 2x1.5V battery for controller and 1x6V rechargeable battery for car.

Battery safety Information

1. Don't short-circuit terminals.
2. Don't recharge non-rechargeable batteries.
3. Rechargeable batteries may only be charged under the supervision of an adult.
4. Remove all batteries if vehicle will not be used for a long period of time.
5. Dispose of batteries safely. Don't dispose of batteries in fire as they may explode.
6. The battery charger used should be regularly examined for damage to the cord, plug, enclosure and other parts. In the event of damage do not use it until it has been repaired.
7. Exhausted batteries are to be removed from the toy.
8. Keep these instructions for future reference: they contain important information.
9. Packaging has to be kept since it contains important information.
10. Rechargeable batteries are to be removed from the toy before being charged.

Care and Maintenance

1. Always remove batteries from the toy when it is not being used for a long period of time.
2. Wipe the toy gently with a clean damp cloth.
3. Keep the toy away from direct sunlight and/or direct heat.
4. Do not submerge the toy into water that can damage the electronic assemblies.

Charging and battery

1. The charging time should be at least 8 hours for 1st & 2nd charging, afterwards it is around 4 hours per time. Don't overcharge, the power will not increase anymore it takes a long time charging.
2. The remote control car can be played around 15 minutes after the battery is fully charged. The racing speed will slow down once the battery power is lower, then please replace the new battery or charge the rechargeable batteries as well.

How to recharge the Battery pack?

1. If 1.5V non-rechargeable batteries are used, simply load in the batteries according to the polarity marks.
2. If rechargeable battery is used, please plug in the charger and insert the plug of the battery into the charging jack on the charger.
3. Allow battery pack to be charged for a minimum of 8 hours for the first and second charges, subsequent charges require 4 hours. Do not over charge the Battery pack. Charging the battery pack for a longer period will not increase the Battery charge life.
4. Battery charger used with the toy are to be regularly examined, For damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this charger until the damage has been repaired.

How to play?

1. Install the rechargeable batteries inside the battery compartment that is underneath the chassis, taking care to observe the polarity. Fit back the cover.
2. Insert 2x1.5V battery inside the controller. The car is now ready to run.
3. Turn the two switches located on both the car and the controller to the "ON" position and then operate the car.
4. If the car does not run in a straight line adjust the steering alignment lever located beneath the chassis.
5. When the light in the controller begins to dim, it may be time to replace the 1.5V battery.