


MINI RACE RC CAR

GT4259


(Operating instruction)

Please read the instructions carefully before using.
Please take care of the instructions for use at a
later date.

Contents

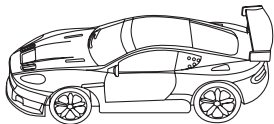


Mini racer x1

 

Transmitter x1



 
Instruction sheet x1




Road-block x4

Part details

● Transmitter

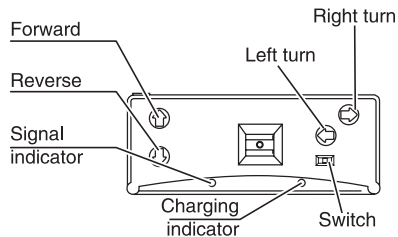


● Mini racer

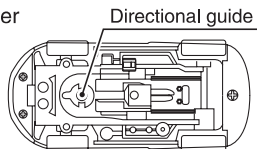


Preparation


1. Open the can, detach the can cover and can body. Push the LOCK inside the can cover towards the direction shown to release.

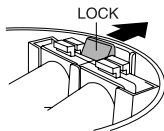


2. Take out the transmitter and car from the can body. Slide the car by the direction shown in the picture, to release.

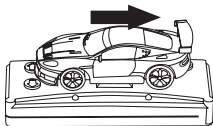

3. Slide the transmitter's battery compartment cover towards the direction shown and open it.

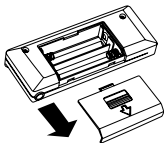

4. Insert 2 x AA batteries with the correct polarity, then place the battery compartment cover back into place.

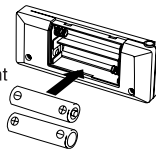


Distributed by:
Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

www.electusdistribution.com.au

Made in China

Operation


 
1. After installing the battery on the remote control, turn the switch to the ON position - the frequency light should flash. Once the frequency light stops flashing, the mini racer has paired with the transmitter successfully. If the frequency light continues to flash, the transmitter has not connected to the transmitter.



2. Transmitter (Remote Control) Functions:



- Press any button on transmitter when the mini racer is switched on - the frequency light will turn on and the car will move accordingly.
- The arrow buttons move the car in the corresponding direction.

 3. Adjust the Directional Guide under the front of the mini racer to calibrate the alignment. This helps with straight-line movement and more accurate turning.

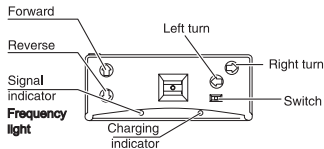

Charging the mini racer

 1. Open the charger cover as illustrated and take out the CHARGING PLUG.
2. Insert the CHARGING PLUG to the CHARGING JACK on the bottom of the mini racer, the CHARGING INDICATOR lights up indicate the charging is in process. Make sure the power switch of the car is turned off. It is normal for the frequency lamp to flash when charging.
When charging, the charging head should be recognized the direction, and remember to turn off the switch when not in use.
3. The mini racer is fully charged when the CHARGING INDICATOR goes off.
Charging time: 3-4 minutes.

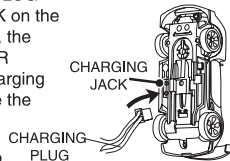

Caution :

- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type are recommended to be used.
- Exhausted batteries should be removed from the product.
- Do not dispose batteries in fire, or batteries will explode or leak.
- The supply terminals are not to be short-circuited.
- Batteries are to be inserted with the correct polarity.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged (if removable).
- Remove batteries if the product is not to be used for an extended period.
- The packaging has to be kept since it contains important information.