



MINI TORNADO R/C STUNT CAR


AGES UP 8+

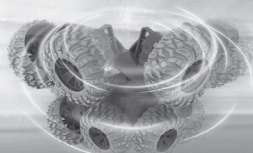

Contents

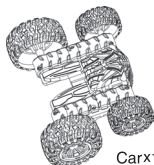


Carx1

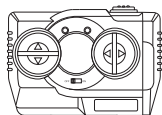


Transmitter 1

Preparation

1. Use a screwdriver to loosen the screw on battery cover of transmitter by counter-clockwise, take out the battery cover according arrow direction.

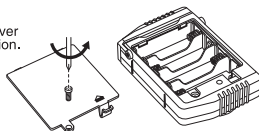


2. Insert the battery in the positive direction first, and then the battery in the negative direction, and tighten the screws clockwise.

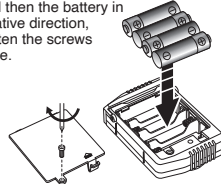



USB charging

Turn the power switch of the remote control to the "ON" position, then open the charging cover on the remote control and take out the charging plug. Insert the charging plug into the charging port of the stunt car, the charging indicator will light up, indicating that charging is in progress. When the charging indicator turns off automatically, it means charging is complete. When the green light flashes during charging, it indicates that the remote control battery is not sufficiently charged.

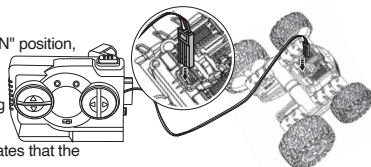



Operation

1. When in use, turn the car switch to "ON", the car's code matching light will flash, indicating that it is turned on. Turn the power of the remote control to "ON". Complete the code matching with the car, and then you can use it normally after the code is completed. After use, please turn off the power switch.

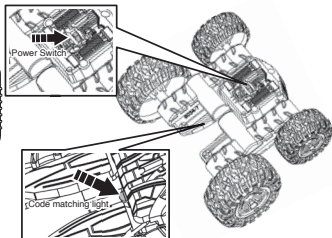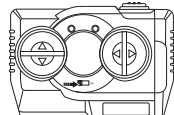

2. Function of transmitter buttons:

- (1). Press the button of the remote control to start the stunt car. The function indicator on the remote control will light up as the button of the remote control is pressed (press any button of the remote control, the function indicator of the remote control will light up).
- (2) When pressing the forward/backward button, the stunt car can go forward/backward.
- (3) When pressing the left/right button, the stunt car can rotate left/right.

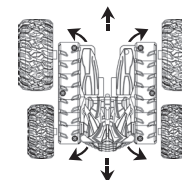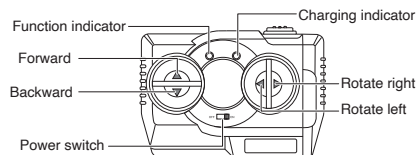

Caution:

- The car body with 3.7V Li-ion rechargeable battery, transmitter with 4*1.5V AA batteries(excluded).
- Batteries are to be inserted with the correct polarity;
- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are only to be charged under adult supervision;
- Different types of batteries or new and used batteries are not to be mixed;
- The supply terminals are not to be short-circuited;
- When the speed slows down, it means that there is not enough electricity in the car body, please charge the car;
- When the controller has low power, the match frequency light will darken or off, please change the battery of the controller;
- Please identify the charging jack and charging port when charging;
- Please take batteries out from transmitter when it's not in use for a long time, and turn power switch to "OFF";
- Unpacking should be carried out under the guidance of adults;
- The packaging contains important information, it should be retained.