

Please read this Manual carefully before use and keep it properly for future use.

Packing list



Remote control *1



3.7 V battery *1

 


USB cable * 1




Manual * 1

Battery installation and charging of remote control car and remote control

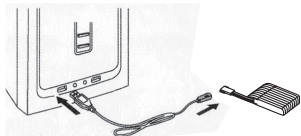


 Connect the battery to the USB cable, plug the USB cable into the USB port of the computer or the USB charger, and turn on the power. When the red light is on, it means charging. When the red light is off, it means fully charged.




Battery installation method of remote control

 - Open the battery cover on the bottom of the remote control
- Install 2 1.5V "AA" batteries with correct polarity and close the battery cover.

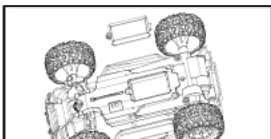

 
Open the battery cover and put the battery into the battery compartment after charging.

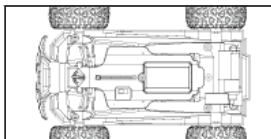

Connect the battery pack to the port of the car body and close the battery cover


Function of remote control

 Distributed by:
Electus Distribution Pty Ltd
46 Eastern Creek Dr,
Eastern Creek NSW 2766 Australia
Ph 1300 738 555
Int'l +61 2 8832 3200 / Fax 1300 738 500
www.electusdistribution.com.au

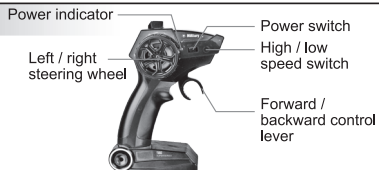

Operation method

 1. Turn the power switch of the remote control vehicle to the "ON" position. Put the remote control car on the plane, and then turn on the remote control switch. When the remote control indicator stops flashing, you may operate the control lever. (Note: when the remote control indicator is flashing, the control lever can not be operated.)



Basic operation diagram for product use



- Pull the remote control lever backward to move the remote control car forward, and pull forward to move the remote control car backward. When the control lever is pulled backward half way, the remote control car will move forward slowly; when the control lever is pulled backward completely, the remote control car will move forward rapidly.
- If you turn the "right / right steering wheel" clockwise, the car will turn right; if you turn the "left / left steering wheel" counter-clockwise, the car will turn left.
- The high / low speed button is in low-speed gear in default when leaving the factory. You press the switch button once and the car light flashes twice to switch to the high-speed gear, and then press the switch button once again to switch to the low-speed gear.



Maintenance and repair

- If you do not use it for a long time, please take out the battery.
- Wipe the car gently with a wet cloth.
- Do not put the product in high temperature, high humidity and direct sunlight.
- Do not put the product in the water, or the electronic components will be damaged.

Precautions

- Please pay attention to the polarity when installing or replacing the battery; Non-rechargeable battery can not be charged; Charging a rechargeable battery should be supervised by adult;
- Do not use old or new batteries or different types of batteries; Please pay attention to the signal interference nearby during operation, otherwise the remote control distance will be affected;
- When the remote control car slows down, it means that the car is out of power. Please charge the remote control car according to the above method. If the remote control is out of power, the indicator will turn dark or does not light up. Please replace the battery with a new one. If you do not use it for a long time, please take out the battery in the remote control, turn the power switch of the remote control car to "OFF" position, and take out the battery of the remote control car.

Recommendations

When the car is moving, please do not touch the wheels of the remote control car by hand, so as to avoid damage to the car.



Do not use the product on the road where there is traffic, so as to avoid any accident.

Do not use the product in mud, dirt or sand.