



WARNING: If powering the LA5179 from 240VAC (mains supply) remove the two wires from terminals 1 and 2 and connect to mains supply.