LA5596 Wireless Switch Dimmer

It enables remotely switching of any incandescent lamps. wirelessly via Home Automation Controller.


Specifications

Power Supply Max Load Coverage Range Dimension AC220~ AC230V/50HZ 4A@AC220~230V/50HZ Up to100 meters (line of sight) Approx. 80 mm x 55mm x 30mm

LED status indication

Green LED flash Green LED on Red LED flash Red LED on Operate ok indication (clear pre-learn ID ok) System work at automation mode and relay off System work at learn mode System work at manual mode or relay on


Connect Diagram

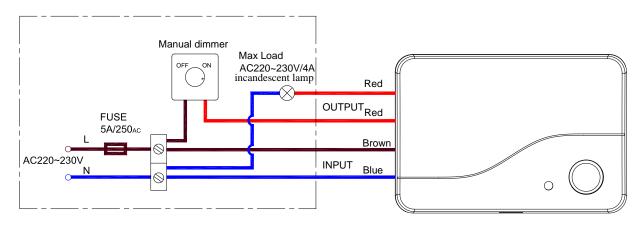

How clear learnt Wireless Switch Dimmer


- 1. Power down the Switch Dimmer
- 2. Press hold the button
- 3. Power up
- 4. Hold up the button about 5 seconds, wait for green LED flash 2 times indicate clear learn ok.


How to learn Wireless Switch Dimmer into Controller

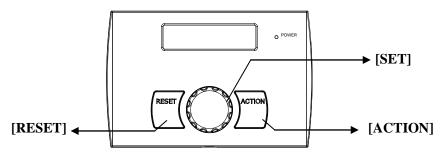

LA5592 Home Automation Controller

Step1: Set home automation controller as follow:

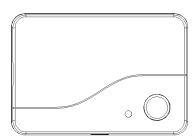

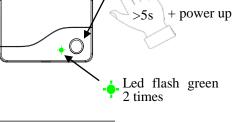

08:00 01- Jan DAY

- It is accessed directly from Day mode via press [SET] key
- Press [SET] key will go into Program Mode
- When cursor indicate SETUP, press **[SET]** key will go into SETUP program mode
- Rotate [SET] key to select **Output Device**? and press [SET] key go into **Output Device** function.
- Rotate [SET] key to select **Output 3?** and press [SET] key go into setup output device 3 function.
- Rotate [SET] key to select **Device Type**? and press [SET] key go into **Output Device Type** function.
- LCD display current output device type Rotate [SET] key to select Switch Dimmer type
- LCD display Set Dimmer Step Rotate [SET] key to select Dimmer Step No,
- Press **[SET]** key to save it, it will exit and go to "Tx Learn Data". Note: Controller transmit learn data, ID save to Output device

Step2: Operate wireless Switch Dimmer as follow:

- Powering up the Switch Dimmer (Green LED is ON)
- Hold up the button about 5 seconds, switch dimmer go into learn mode, the red led is flashing, within 15 seconds no data it will auto exit and return last time work mode, or learn ok will auto exit.
- Note: Switch dimmer max up learn 8 ID.


Step3: Operate Home Automation Controller as follow:

• Press [SET] key, Controller will transmit learn data to output device

Note: Switch dimmer learn OK will exit learn mode, ensuring the switch dimmer work in automation mode (Green LED is ON)

08:00 01- Jan ACT INFO SETUP **SETUP MENU** Setup System? SETUP MENU **Output Device? OUTPUT DEVICE** Output 3? **Input Device Device Type? Device Type** Switch Dimmer? Set Dimmer Step (1-8): ? 1 **Output Device** Tx Learn Data? Led on green Led flash red



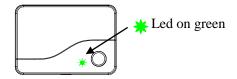

- Learn OK, to enable the output device of controller and press **[SET]** key go into **Enable Work** function.
- Display current Enable stauts
- Rotate [SET] key to select ON,and press [SET] key to accept, it will enable Output Device 3 work
- Set Enable Work/ OFF, Controller will can't action the output device
- System generate an have OK tone, it will exit and go into next Output Device

Output Device Enable?

Enable Work OFF?

Enable Work ON?

Enable Work OFF?

OUTPUT DEVICE Output 4?

How to test Wireless Switch Dimmer via controller

- It is accessed directly from Day mode via press [SET] key
- Press [SET] key will go into Program Mode
- Rotate [SET] key to select INFO ?
- When cursor indicate INFO, press **[SET]** key will go into view information mode
- Rotate [SET] key to select Test System?
- Press [SET] key go into Test System function.
- Rotate [SET] key to select Out_Deviec Test?
- press **[SET]** key go into test output device function. and rotate **[SET]** key to select will test device

08:00	01- Jan
DAY	

08:00 01- Jan SETUP ACT INFO

08:00 01- Jan SETUP ACT INFO

INFO MENU View Log?

INFO MENU Test System?

TEST SYSTEM Speaker Test?

TEST SYSTEM Out_Device Test?

Out_Device Test O03:Output 3?

- Press [SET] key to accept and the toggle test outputs ON
- The switch dimmer is open, Loasd output is ON, red led on.
- Press any key stop output and it will go into next output device
- The switch dimmer is close, Load output is Off, green led on.

