


# POWERTECH

## 30W USB Type-C & A Dual Mains Power Adaptor User Manual MP-3414

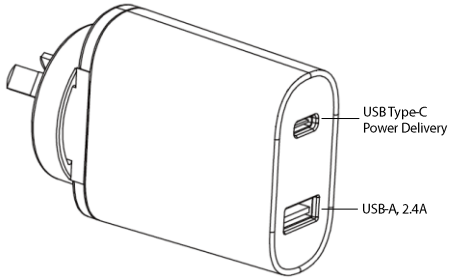

### Operation:

1. Plug the USB mains power adaptor in to a standard 240VAC mains wall socket and turn it on.
2. Make sure the output of your USB device matches the USB charger before plugging in.
3. Plug a USB Type-C or A cable (not included) into one of the two USB ports located on the front.
4. Your device will now begin charging and automatically detect the best charging mode.

### Safety:

1. Do not short circuit the output terminals.
2. Ensure the correct voltage is used as excessive voltage could damage your equipment.
3. Do not use this power supply with a device requiring more than 3000mA.
4. Do not attempt to open this unit.
5. Remove from the 240VAC wall socket when not in use.
6. Always turn off your device before you connect or disconnect from the USB charger.

### Specifications:

Voltage Input: 100-240VAC, 50-60Hz

Voltage Output: 5V, 9V, 12VDC (USB-C)  
5VDC (USB-A)

USB-C Current Output: 5VDC @ 3A

9VDC @ 2A

12VDC @ 1.5A

USB-A Current Output: 2.4A

Power Output: 18W PD (USB-C), 12W (USB-A)

Protection: Short Circuit & Overload Protection

Dimensions: 90(D) x 55(H) x 40(W)mm