



QC-8075

## NEO HD CAMERA

User Manual

Go anywhere, video everything! Full HD video,  
3 megapixel photos. Portable and durable.  
Waterproof to 30m for poolside fun! Want more  
information? Visit [movii.com.au/neo](http://movii.com.au/neo)


## WARNINGS

- Handle it with care - do not drop the camera.
- Do not expose the camera to strong magnetic objects, such as magnets and electrical motors. Strong magnetic fields may cause the camera to breakdown or cause image/sound damage.
- Avoid exposing the camera to strong radio waves.
- Never expose the unit to high temperatures, or direct sunlight for prolonged periods.
- Always choose branded microSD cards for use with this camera. Generic cards may impair performance and cause record/playback issues.
- Do not place microSD cards near strong magnetic objects to avoid data loss.
- In the case of overheating, smoke, or an unpleasant smell in the process of charging, unplug your device immediately to prevent a fire hazard.
- While the unit is charging, keep the product out of the reach of children. The charging cord may present an accidental choking/suffocation or electric shock hazard for children.
- Store the unit in a cool, dry and dust-proof place.

## PRODUCT FEATURES

- Water-resistant casing (up to 30m)
- Video recording (even while charging)
- HD wide-angle lens
- HDMI HD output
- Web camera
- Supports storage cards up to 32GB maximum
- Multiple video recording formats: 1080p, 720p, WVGA
- Records in MOV format
- Multiple photo shooting modes: single shot, self-timer (2s, 5s & 10s) and continuous
- Video encryption enabled
- Light and compact

# OPERATION

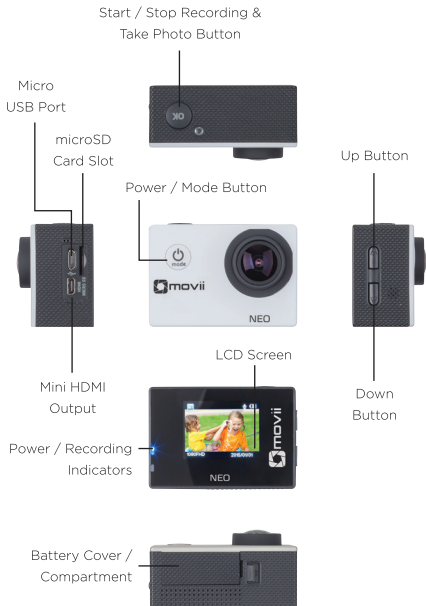

## **Inserting a microSD card**

Please choose a branded microSD card as neutral cards are not guaranteed to work normally. Format it on your computer before use. Insert the card into the card slot on the side of the camera.

## **Installing and removing batteries**

The camera comes with a 3.7V Li-ion battery included. The battery compartment is located on the bottom of the camera. To replace the battery, slide the release lever and the battery compartment cover will pop up slightly. Remove the cover and lift the battery pull tab. Carefully remove the battery from the compartment. Place a new battery in the compartment and replace the cover.

## **Charging your camera**

You can charge your camera by either connecting it to your computer (via the USB cable included) or charging from your car's cigarette lighter socket (using the car charger cable also included).

You can continue to record video while charging your camera. Simply switch to "Vehicle-mounted Mode" from the menu.

## **Turning your camera ON/OFF**

Press and hold the POWER/MODE button for 3-5secs to turn the camera on and off.

## **Switching between modes**

Switch between video recording, photo shooting, playback and the menu by pressing the POWER/MODE button until you reach the desired mode.

## **Recording video**

Switch to video recording mode. A video icon will appear in the upper left corner of the screen. Press the OK button on the top of the camera to start recording and the video icon in the upper left corner will begin to flash. Press the OK button to stop recording and the icon will disappear.

## **Taking photos**

Switch to photo shooting mode. A camera icon will appear in the upper left corner of the screen. Press the OK button to take photos. Shooting options include single shot, self-timer (2s, 5s & 10s) and continuous.

## **Exporting video/photos**

Switch to playback mode. After you are finished recording, connect the camera to your computer via the USB cable included and export your photos/videos to your computer. Alternatively, you can remove the microSD card from the camera and export the photos/video to you computer using a card reader.

# SET-UP OPTIONS

Bike Mount



Belt Clip



Car Mount





# SPECIFICATIONS

Liquid Crystal Display (LCD)	1.5LTIPS
Lens	170°A+ HD wide-angle lens
Language Options	English/German/French/Spanish/ Italian/Portuguese/Chinese Traditional & Simplified/Japanese/Russian
Resolution of Videos Recorded	1080p (1920 x 1080 ) 30fps 720p (1280 x 720) 60fps VGA ( 848 x 480) 60fps QVGA (640 x 480) 60fps
Video Format	MOV
Compressed Video Format	H.264
Photo Resolution	3 megapixel
Storage	MicroSD up to 32GB (Class 10)
Shooting Mode	Single Shot, Self-timer (2s/5s/10s) & Continuous
USB Interface	USB 2.0

## SPECIFICATIONS (CONTINUED)

Power Source Interface	5VDC @ 1A
Battery Capacity	800mAh
Battery Life	Up to 1.5hrs
Power Dissipation	400mA@4.2V
Recording Time	70mins (approx.) @ 1080p
Charging Time	3hrs (approx.)
Operating System (OS)	Windows XP/Vista or above, Win7/8/10 & Mac OS
Dimensions	77(W) x 43(D) x 65(H)mm (with case) 59(W) x 41(D) x 31(H)mm (without case)

## BOX CONTENTS



HD Camera



USB Cable



USB Cable



Waterproof Case



Shield Case



Adhesive Base Plates



Safety Cable



Helmet Straps



Cable Ties



Handle Bar Mount



Mount Joiner



Suction Cup Mount

DISTRIBUTED BY:

TechBrands by Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere

NSW 2116 Australia

Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

[www.techbrands.com](http://www.techbrands.com)

Made in China