

digitech

# 10" Dual Screen Portable DVD Player



Model:  
QM3702

## Instruction Manual

## **CONTENT**

---

SAFETY PRECAUTIONS .....	01
PACKAGE LISTING .....	04
MOUNTING OPERATION .....	05
OPTICAL DISCS .....	07
CONNECTIONS .....	08
CONNECTING POWER SUPPLY .....	09
FUNCTIONAL OVERVIEW .....	10
REMOTE CONTROL .....	14
BASIC OPERATION .....	16
SPECIAL FEATURES .....	21
SYSTEM SETUP .....	23
TROUBLE SHOOTING .....	25
SPECIFICATIONS .....	27
WARRANTY .....	28

# SAFETY PRECAUTIONS

## Warning

To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.

## High Voltage Warning

Dangerous high voltages are present inside this enclosure.


To avoid electric shock, DO NOT open the unit; refer servicing to qualified personnel only.

## Laser

- This player is classified as a CLASS 0 laser product to prevent direct exposure to the laser beam, do not try to open the DVD player.
- Do not attempt to dismantle the player. You may become exposed to invisible laser radiation if the product is open or the interlock is tampered. Avoid direct exposure to beam.

## Instruction Manual

1. To ensure the proper operation, all the safety and operating instructions should be read carefully before connection and operation.
2. Retain instructions - Keep this manual in a safe place for further reference.
3. All warnings on the product and in the instruct manual should be adhered to.
4. All operating and use instructions should be followed.

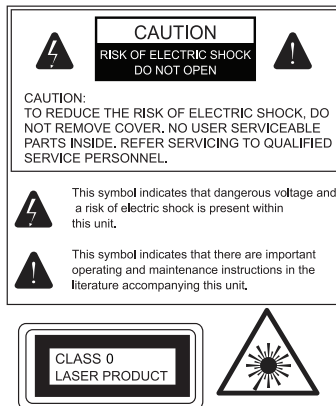

## **Safety Precautions**

1. The DVD player is intended for household use only, and not for commercial or industrial use.
2. This DVD player shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the appliance. Dry location uses only.
3. Do not expose the appliance, discs to extreme temperatures, excessive moisture, rain or sand. Never use this device in high temperature or in high humidity. The best operating temperature is between 5°C~40°C.
4. No open flame sources such as lighted candles should be placed on the appliance.
5. Do not place the unit on unstable surface to prevent from falling. Do not place the unit on top of any other appliance.
6. Do not place the appliance on or near a hot gas flame, electric element, and heaters or in areas subjected to direct sunlight.
7. Place the appliance where there is good air ventilation. Any ventilation holes should not be impeded by covering with items, such as newspaper, tablecloths, curtains etc.
8. Don't put the device near magnetic field, e.g. speaker. The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by switching it off from the mains outlet and then switching it back on after several minutes.
9. Do not operate the player if it is not working normally or has been damaged in any way. Turn the unit off, unplug it from the power source and consult service personnel. Do not attempt to service this unit yourself.
10. Do not listen to headphones at high volumes. The excessive sound pressure from headphones can cause hearing loss.
11. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

## **Power Supply**

1. Do not operate the product with wet hands. Doing so may cause electric shock.
  2. Always turn the power off and remove the adapter from the outlet when the appliance is not to be used for a long period of time and before cleaning,
  3. Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
  4. Do not let the power cord hang over the edge of a table or bench top or touch any hot surface.
- Do not operate the appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, do not attempt to repair or disassemble the appliance by yourself. Contact qualified service personnel if you need help.

### **NOTE:**

There is a blue LED to indicate that power is connected.

When connecting charging cable to charge the Player, it usually takes about 6 hours in a full charge.

There will be a red led light, and light will turn off when power up to over 80%, please do not take off the power and charge for an additional 2 hours for a full charge.



## Operation and Position

1. To extend the life span of the battery and the DVD player, do not use up all power.
2. Please take off the small paper card from the DVD slot before place disc into slot.
3. Do not connect accessories, which are not approved by the manufacturer.
4. Do not abruptly increase the volume to high levels, doing so may damage the player speakers.
5. Press the player's buttons gently. Pressing them or the screen too hard can damage the player.
6. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered.
7. Do not drop the unit or expose this product to harsh impacts. This is a complicated electronic device that cannot withstand shock from drops.
8. Protect the player against extreme weather, moisture and high temperature. Do not use the player in an extremely dry environment, as this can lead to static discharge, which can damage the player.
9. Keep the appliance away from rain and any moisture.
10. Keep the player clean and never store it next to a heat source or in dirty, humid or wet places. Do not expose the player and the remote control to direct sunlight.
11. Ensure that your headphones are inserted into the player before it is switched on. Inserting them afterwards can potentially damage the headphones and the player.
12. Earphone cables may be hazardous to young children. Store the product carefully when it is not in use.
13. Keep "Earbud" style earphones out of reach of small children. "Earbud" earphones may be swallowed if they are placed in mouth.

**Caution:** Not performing controls and functions as stated in this manual may result in hazardous radiation exposure or other unsafe operation.

## Service and Maintenance

1. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards, Refer all servicing to qualified service personnel.
2. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the AC adapter or Car adapter is damaged.
  - b. If liquid has been spilled, or objects have fallen into the product.
  - c. If the product has been exposed to moisture or water.
  - d. If the product does not operate normally by following the operating instructions. Only adjust controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e. If the product has been dropped or damaged in any way, and when the product exhibits a distinct change in performance, service is needed.

## Cleaning and Care


1. Always turn the power off and unplug it from the outlet before cleaning.
2. Never spray or pour liquids directly on the screen or plastic casing, and clean with a dry towel only.
3. Do not clean the unit with strong chemical agents or abrasive cleaners.
4. Do not allow residue or liquids to enter any part of the appliance as this may cause risk of electrocution.
5. Be sure to remove the disc from the player before packing for moving.

## PACKAGE LISTING

Please make sure the following items are included in package.



LCD Player + Slave Monitor

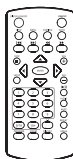


Remote Control




User Manual




AC Adapter

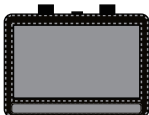

2\*Car bags

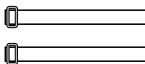


2\*Headrest Straps

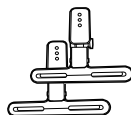

2\* Car Mounting Brackets



Car Charger

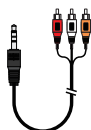

3.5mm-RCA Cable



DC Cable



AV signal Cable

### Quick Keys of Accessories

#### 1. AC Power Adapter( To charge for main player)

First please connect UL plug well. Insert small plug into DC IN 9V-12V on top jack of player, other end insert into AC 240V/50-60Hz wall outlet .

#### 2. Car Charger ( To charge for main player)

Insert small plug into DC IN9V-12V on top jack of player, other end insert into the cigarette lighter socket.

#### 3. 3.5mm-RCA Cable ( Main player connect TV, share movies on a larger TV screen )

Insert small plug into AV OUT on the main player, other end connect audio/video inputs on the Televisions ( Red to Red, White to White and Yellow to Yellow).

#### 4. DC Cable ( To provide electronic to slave monitor)

One end plug into DC OUT on second jack of main player, other end inserts into DC IN jack of slave monitor.

#### 5. AV signal Cable ( To provide audios/videos to slave monitor)

Insert small plug into AV OUT on the main player, other end inserts into AV IN jack of slave monitor.

#### 6. 2\* Headrest Brackets ( Install to car headrest)

Use provided 2\*Brackets mount to your car headrest on two players

#### 7. 2\*Headrest Straps ( Install to car headrest)

Use provided two straps and the headrest mount slot on the bottom cabinet to attach the headrest mount on two players

#### 8. 2\*Car bags (Install to car headrest)

Use provided two car bags to pack the two players to your car headrest.


#### 9. Remote control

Before use, please place 2\*AAA small batteries and towards to between "SETUP" and "UP" on main player at an angle of up 30 degree in 9.

## MOUNTING OPERATION

### How to Use the Headrest strap

1. Slide the strap through the two attachment points on the rear of the unit.
2. Pull the strap through the buckle as shown.
3. Tighten the straps around the seat headrest.
4. Attach the unit on the car headrest using straps, refer to the below picture. And then connect the power source or AV connection.
5. The remote control could be used directly when the unit attached the car headrest. Point the remote control towards the sensor area between "SETUP" and "UP" buttons 9.8ft to the front of the unit.

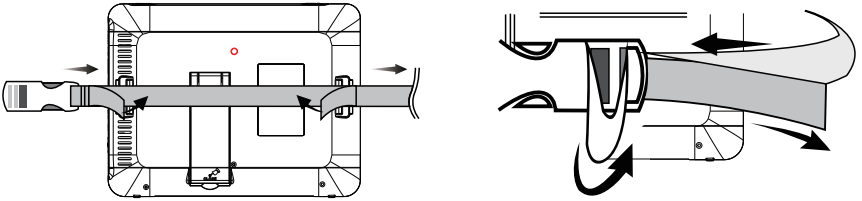

### How to Use the Stand of the Main player/Slave Monitor

Two positions chosen, pull out the stand in the bottom cabinet of main player/slave monitor, it will stand on a flat surface by itself.




### How To Use The Car Mounting Brackets

#### How to take the brackets apart


First we should take out the screw on the top side and spread the small clip.  
Second, press two buttons on both sides to take out the small clip from small clip.

And before we use it to car headrest, we should use your tool to take four small screws off from long clamp socket.

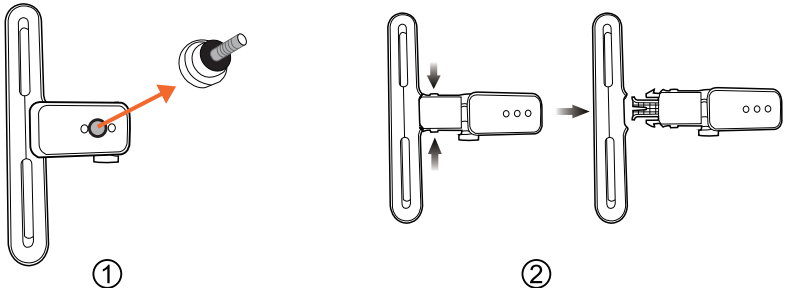

## How to use the brackets on your headrest

Step 1. Use your tool to take the nuts off the long clip, put the separate clips clip on your headrest, and then tighten the screws.

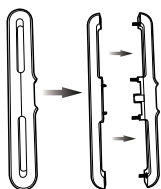

Step 1

Step 2. Place your DVD player in on the small stand clip to attach the supplied screw.



Step 2

Step 3. (1) Insert the small clip into the long clamp socket

(2) You adjust the angle you want by adjusting the left screw on the small clip.



Step 3



Step 4



Step 4. You could open the player and put into discs, and start playing your DVD player without worry loss or falling out of the headrest.

**Note:** Our provided brackets were developed according to standard common car, some cars with special headrest may not be compatible with it. If such a case happen, you can fix use headrest strap to fix your DVD player to choose the headrest.

# OPTICAL DISCS

## Disc Requirements

This DVD player supports playback of the following discs and formats.

Type	Disc Mark	Content Type	Disc Size	Max. Playback Time
DVD-Video Discs		Audio + Video (Moving picture)	12cm	133 min (SS-SL)
				242 min (SS-SL)
				266 min (DS-SL)
484 min (DS-SL)				
Audio Compact Discs (CDs)		Audio	12cm	74 min
JPEG Photo CDs	—	Still Picture	12cm	--

This unit can play CD-R and CD-RW discs that contain JPEG picture files. This unit doesn't support the discs, which are not listed above (e.g., PC CD-ROM, CD-Extra, CD-G, CD-I, etc.)

## Disc Care And Maintenance

Optical discs (DVD, VCD, CD) contain high-density compressed data and need proper handling.

### Handling A Disc

- Hold a DVD/VCD/CD disc by its edge.
- Avoid touching the recorded side of the disc. To remove a DVD/VCD/CD from its storage case, press down on the center retention mechanism of the case and lift the disc out.
- Do not subject discs to prolonged exposure to direct sunlight, high humidity, or high temperatures. Do not bend or press disc.
- To reduce the risk of scratches, always put disc back in its case after use. Store disc vertically in a cabinet.
- Do not place stickers or labels on either side of a disc.



### Cleaning a disc

- Use a dry, soft cloth to wipe off any fingerprints and dust from the playing surface of the disc.
- Wipe in a straight line radially from the center to the outside edge of the disc. Small dust particles and light stains will not affect playback quality.
- Never use chemicals such as record sprays, anti-static sprays, benzene, or thinners to clean a disc. Doing so will damage the surface of the disc permanently.

# CONNECTIONS

## Connecting Monitor/ External TV


Main player comes equipped with an AV OUT jack. Use this feature to connect the players signal to external Monitor/ External TV. Please refer to the image (a) (b) as below to connect them.

### Tips

1. Ensure that the player and other external equipment being connected are switched off before connecting.
2. Read the instructions carefully before connecting other external equipment.
3. Ensure that you observe the color coding when connecting audio/video cables.

## Connecting Main Player to Slave Monitor

1. For DC cable, one end connect DC OUT on the second jack of main player, **NOT** DC IN 9V-12V on the top jack. The other end plug into DC IN of slave monitor.
2. For AV signal cable, one end connect AV OUT on the main player. The other end plug into AV IN of slave monitor, **NOT** earphone jack.
3. Switch main player and slave monitor on by switching the power button ON/OFF to the ON position.
4. Audio and the video of main player will now be seen and heard on the connected slave monitor.

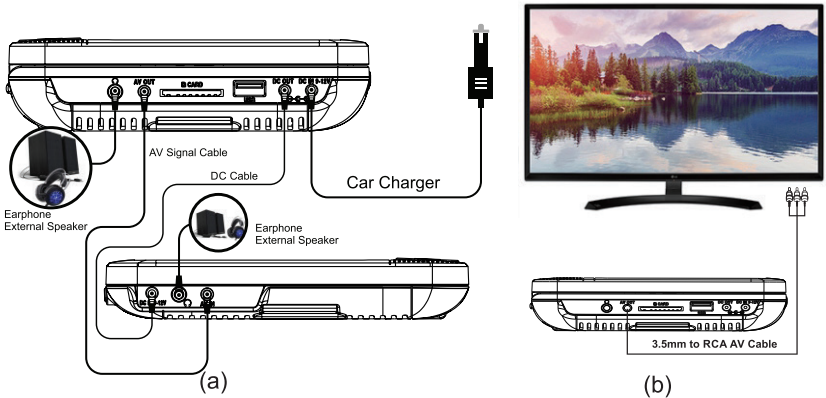

## Connecting External TV

1. Connect the 3.5mm- RCA cable to the AV OUT on the main player and the audio/ video inputs on the Television ( Red to Red, White to White and Yellow to Yellow ).
2. Turn the unit on by switching the power button ON/OFF to the ON position.
3. Change the television to the correct audio/video input setting.
4. Audio and the video played through the main player will now be seen and heard on the connected television.

## CONNECTING POWER SUPPLY

### AC Adapter Operation

Before connecting the supplied AC adapter to the wall outlet, make sure to connect plug well and all other connections have been made.

Insert the small plug of the supplied AC adapter firmly into DC IN 9V-12V on the top jack of the player, and then insert the adapter into an available AC 240V/50-60Hz wall outlet. **NOT** plug into DC OUT on the second jack of main player.

#### Warm Tips:

1. Only use the supplied adapter. Failure to do so that may cause a fire or damage to the unit. Never make or change any connections with the power switched on.
2. Do not connect the adapter to a power outlet other than which is indicated here and on the label as this may result in the risk of fire or electric shock.
3. Do not handle the plug of adapter with wet hands. Doing so may cause electric shock.



### Car Charger Operation

Before connecting the supplied Car charger, ensure that all other connections have been made.

Insert the small plug of the supplied Car charger firmly into DC IN 9V-12V on the top jack of the player, and then inserts the other end into the Cigarette lighter socket. **NOT** plug into DC OUT on the second jack of the player.

#### Warm Tips:

- Disconnect this Car charger when the unit is not in use for long period of time.
- DO NOT plug the Car charger to any automobile cigarette lighter in DC 24V. Only the DC 12V of the automobile cigarette lighter socket can be used. Connecting the Car charger to a power supply with a different voltage can damage the unit.
- The Car charger is for in-car use only.

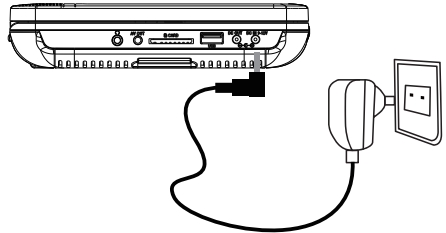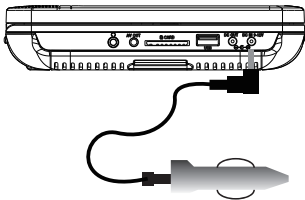

#### Note:

- This portable DVD player requires external power to operate. Otherwise it cannot be operated. Using either the car or wall charger to power it. When disconnected from external power the player and monitor will turn off accordingly.
- Only use the AC adapter and Car charger supplied to power the main player, do not use AC adapter to power the slave monitor.
- Do not use the unit in high temperature or near heat sources.
- The product has a voltage protection. The unit needs to be disconnected from the power supplier in order to reset it if there is no power or response during the operation.


### DC Cable Operation

Main player will provide power to slave monitor by DC cable connecting.

Insert the small plug of DC cable firmly into DC OUT on second jack of main player, other end inserts into DC IN jack of slave monitor. **NOT** plug into DC IN 9V-12V on the top jack of main player.

# FUNCTIONAL OVERVIEW

## DVD Player View

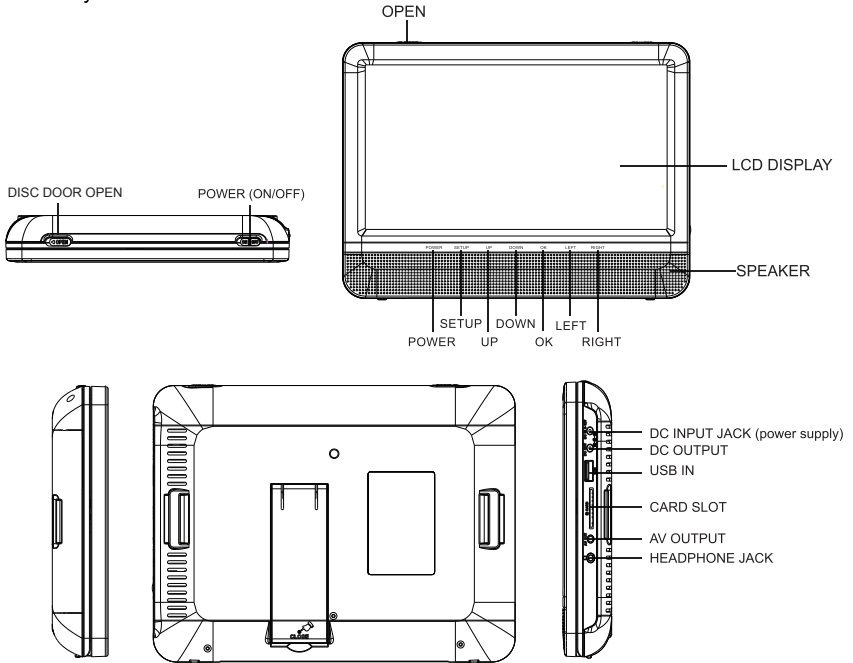

## Volume Control

The main DVD player audio is set to a default of 10. Adjusting the audio on the main DVD player changes the audio on the secondary monitor.

 
Volume goes from quietest at 1 to loudest at 20.

To change the volume on just the secondary screen press MENU twice, select volume then UP/DOWN

**Note:** The remote control is for main player, but not support slave monitor.



## Slave Monitor View

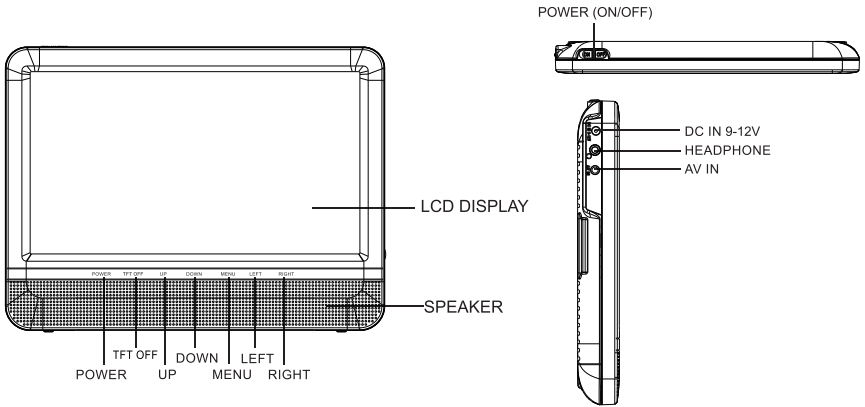


## Common Keys function on the panel

<b>USB/SD</b>	Press to select a media source.
<b>SETUP</b>	Press to access system settings, language settings/audio setting/video settings.
<b>UP/DOWN RIGHT/LEFT</b>	<ol style="list-style-type: none"> <li>1.Direction keys to navigate menus</li> <li>2. Especially, adjust volume of main dvd player. During the playback, you could press RIGHT/LIGHT on touchscreen of main player about 2-3 seconds to increase / decrease the sound</li> <li>3. Especially, fast forward/ fast backward the play on main dvd player. During the playback, you could press RIGHT/LIGHT on touchscreen of main player once without delay to fast forward/ fast backward the play.</li> </ol>
<b>OK</b>	<ol style="list-style-type: none"> <li>1. Press to confirm navigate menus.</li> <li>2. During the playback, you could press OK to stop/continue the play.</li> </ol>
<b>OPEN</b>	Press to eject CD/DVD.
<b>ON/OFF</b>	Power switch to turn on/off the DVD player.

## Buttons and Panel Functions of Main Player

Buttons on the top side	
OPEN	Press to open/close DVD or CD door
ON/OFF	Turn on or off the main player. Note: When you turn on the player first, you must push power switch to ON on the top of main player.

Buttons on the front side	
POWER	Press to turn on or off LCD screen
SETUP	Press SETUP to access system settings/language settings/audio setting/video settings, you will navigate the setup menu when use the directional arrow. When press SETUP again to return SETUP menu.
UP/DOWN/LEFT/RIGHT	<ol style="list-style-type: none"><li>1. Direction keys to navigate menus.</li><li>2. During the playback, you could press RIGHT/LIGHT on touchscreen of main player about 2-3 seconds to increase / decrease the sound.</li><li>3. During the playback, you could press RIGHT/LIGHT on touchscreen of main player once without delay to fast forward/ fast backward the play.</li></ol>
OK	<ol style="list-style-type: none"><li>1. Press to confirm navigate menus.</li><li>2. During the playback, you could press OK to stop/continue the play.</li></ol>

Buttons on the right side	
DC IN 9-12V	Power by AC adapter or Car charger
DC OUT	Provide electronic to slave monitor by connecting to DC IN jack of slave one
USB	Slot to insert USB device
SD/MMC	Slot to insert SD/MMC card
AV OUT	Transmit audio/video to slave monitor by connecting to AV IN jack of slave one
	Headphone or any auxiliary output

Down sides on the player	
Charge Light Indicator	For red light, when it's charging, it will be on, and when it has above 80% power, it will go out. It will take about 6 hours in one full charge. For green light, when it's working, it will be on.
Working Light indicator	It will be blue when working.
Remote Control Receiver	Receive the signal from remote control, work well when aiming (in the bottom middle between button "SETUP" and "UP") on the DVD player.


Back sides on the player	
Stand	Two positions chosen, pull out the stand in the bottom cabinet of main player, it will stand on a flat surface by itself.
Round holes(3.5mm)	It is designed for specific mounting bracket.

**Note:** When you turn on the player first, you must push power switch ON/OFF on the top of main player or slave monitor.

## Button and Panel Functions of slave Monitor

Buttons on the top side	
ON/OFF	Turn on or off the slave monitor. <b>Note:</b> When you turn on the monitor first, you must push power switch to ON on the top of slave monitor.

Buttons on the front side	
POWER	Press to turn on or off LCD screen
TFT OFF	Press to turn on or off LCD screen, no video but have sound
UP / DOWN LEFT / RIGHT	Direction keys to navigate menus
MENU	<ul style="list-style-type: none"> <li>• Press MENU to access PICTURE, VOLUME, RESET.</li> <li>• Press MENU once, see PICTURE, press UP/DOWN, you could choose brightness/contrast/color, press RIGHT/LEFT, you could adjust pictures of slave monitor.</li> <li>• Press MENU twice, see VOLUME, press UP/DOWN, you could adjust the volume of slave monitor.</li> <li>• Press MENU three times, see RESET, press LEFT, you could recover default of slave monitor.</li> </ul>

Buttons on the right side	
DC IN	Accept electronic from main player of slave one by connecting to DC OUT jack of slave one
AV IN	Accept video from slave monitor by connecting to AV IN jack of slave one
	Headphone or any auxiliary output

Back sides on the player	
Stand	Two positions chosen, pull out the stand in the bottom cabinet of slave monitor, it will stand on a flat surface by itself.
Round holes(3.5mm)	It is designed for specific mounting bracket.

## REMOTE CONTROL


### Using the Remote Control

1. Before using one remote control, please make sure you have installed two new AAA batteries inside in correct way.
2. When use the remote control to remote two DVD Player, kindly direct the sensor area in the bottom middle between "SETUP" and "UP" on main player.
3. The remote control works best at a distance less than 9.8ft and at an angle of up to 30 degree to the front of the unit.
4. Please make sure no obstacles stand in the way between remote control and infrared sensor and do not place the remote control in direct sunlight. If the remote control fails to work even when it is operated near the player, kindly first to replace new battery to try again.


### Notes on batteries

1. If the remote control is not used for a long period of time, please remove the battery from the compartment.
2. Do not heat batteries or dispose of them in fires.
3. Do not dismantle, deform or modify batteries.
4. Please keep the battery in a safe place to prevent swallowed by kids.

Requires two AAA batteries (not included)

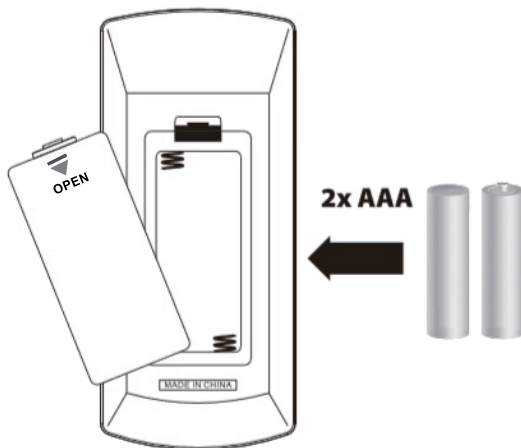

## Buttons of the remote control

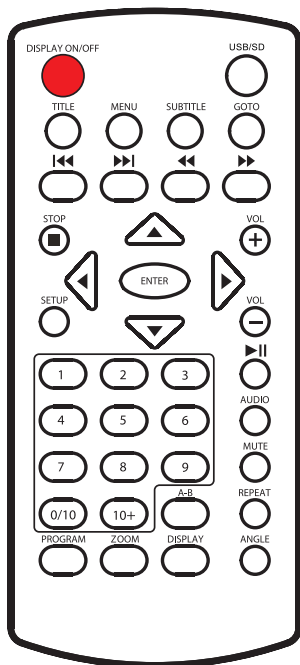

<b>DISPLAY ON/OFF</b>	Press to turn the screen on and off (but have sound).
<b>USB/SD</b>	Press to get a media source from USB/SD.
<b>TITLE</b>	Press to access title menu for DVD.
<b>MENU</b>	Press to access a DVD's main menu.
<b>SUBTITLE</b>	Toggle subtitle ON or OFF.
<b>GO TO</b>	Press the button and enter a track, chapter, title or time to jump to a punk to skip on the disc.
<b>⏪ ⏩</b>	Press to skip between chapters or a title.
<b>⏮ ⏭</b>	During playback, press to fast-forward or rewind.
<b>▲▼◀▶</b>	Press arrows (direction keys) to make selections in the screen or disc menus.
<b>STOP</b>	Press to stop or continue playback.
<b>SETUP</b>	Press to access system settings, language settings/audio setting/video settings.
<b>ENTER</b>	Press to make a selection on the screen or disc menu.
<b>VOL +/VOL-</b>	Increase or decrease the sound.
<b>Number Keypad</b>	Enter chapter / title to play.

<b>▶  </b>	Press to play or pause the current.
<b>AUDIO</b>	Setting for the loaded DVD.
<b>MUTE</b>	Press to mute the volume.
<b>REPEAT</b>	Press to repeat the current title or selection.
<b>A-B</b>	Press to create a repeating loop on a loaded DVD.
<b>PROGRAM</b>	Press to program a loaded disc chapters to play tracks in a specific order.
<b>ZOOM</b>	Press to play in or on a DVD.
<b>DISPLAY</b>	Shows current information on title and menu.
<b>ANGLE</b>	Unstop DVD, press and hold to view multiple angles.

# BASIC OPERATION

## Tips

1. Please remove the sticker from the CD/DVD tray before first use and then put into discs.
2. First slide the power switch ON/OFF on the top side on the player to ON, you will turn on the player. When you don't use the player in a short time, you could press POWER on the player to turn on/off the player.

When you don't use the player in a long time, please slide the power switch ON/OFF on the top side on the player to OFF to turn off the player.

## Playable Discs

1. This player will play CD, VCD, DVD, CD-R / RW and DVD±R/RW etc. discs.

**Note:** If you have trouble with playing a certain disc, remove the disc and try a different one.

Improperly formatted discs will not play on this player.

2. Depending on the discs, some operations may be different or restricted.

Do not put any objects other than disc on the disc tray. Doing so may cause the player to malfunction.

### Note:

- If a "ø" mark appears on the screen when a button is pressed, it means the function is not available at the moment on the current disc or at the current station.
- Depending on the conditions of the recording equipment or the CD-R/ RW (or DVD +R/RW, MP3, Picture CD) disc itself, some discs cannot be played on this player due to the configuration and characteristics of the disc, or due to the condition of recording and digital copyright software that was used.

## Disc Error Messages

If there is a problem with the format of the loaded disc, then the disc cannot be played correctly.

- The region code of the disc does not match the player's region code.
- The parental rating level of the disc is higher than the parental rating level setting of the player.

The player will not play the disc.

- Bad/No disc: The player is equipped with automatic disc quality detection software. If the player detects a disc that is damaged or has a format problem, it may play the disc at a lower quality or stop playing completely, depending on how serious the damage is.

**Note:** DVD disc production quality may vary and some discs may deviate from the industry standard. Some incorrectly formatted discs may still play, however, the playback and operational quality of the disc may be substandard.

## Turn ON/ OFF the Player

### Turn on/off the main player

Slide the power switch ON/OFF on the top side of the main player to ON position to turn on the player after connecting the power supply. Slide the power switch ON/OFF on the player to OFF position to turn off the main player completely.

### Turn on/off the slave monitor

Slide the power switch ON/OFF on the right side of slave monitor to ON position to turn on the monitor after connecting the DC cable with the main player. Slide the power switch ON/OFF on the player to OFF position to turn off the monitor completely.

### Note:

- (1) First turn on the player, you must pressing power switch ON/OFF to ON on both two monitors.
- (2) If the player will not be in use for a long period of time, slide power switch ON/OFF to the OFF position and unplug the portable DVD player from the power source.

## Selecting the different mode (DVD/USB/CARD)

During the DVD or USB/Card playback mode, press the USB/CARD button on the remote control to select DVD or USB or SD play mode if certain disc or memory devices are connected. When a USB mass storage device is simultaneously inserted, the USB device can be recognized.

## Playing Discs

1. Slide the Power switch on the player to ON position to turn on the player.
2. Open the disc cover and insert a playable DVD or CD disc, Make sure the label side is facing up, and then close disc cover.
3. The player will scan the disc, and then the playback will start automatically. If a disc menu appears on the screen, see "using the disc menu" for details.
4. If the disc is locked by parental control, you must enter your password (see "SYSTEM SETUP" section for details).
5. During the playback, press the STOP button stop playback.
6. Sliding the Power switch on the player to "OFF" position will turn off the player.
7. Press the PBC button on the remote control to activate or deactivate the PBC function. PBC playback allows you to play Video CD (VCD version 2.0 only) interactively.
8. Press the MUTE button on the remote control to turn on or off the sound.
9. Press the Go To button on the remote control to select the play time
10. Short press the LANGUAGE button on the remote control to select the audio soundtrack languages; (one DVD recorded with this multiple languages has this function, some recorded DVD may not have this function). Press the ANGLE button to use the picture angle while playing a DVD disc that has been made with multiple angles. Only the DVD shot with multi-angle scenes have this function.
11. Press the REPEAT/PROG on the remote control button to re-configure the playing order.

## Using the Disc Menu

Depending on the disc, a disc menu may appear on the screen once you load the disc.

1. From the file/ folder list menu, using the Direction buttons (UP/DOWN) to select the desired playable file and press the ENTER button to start playback.
2. If the desired file is saved in a folder, press the Direction buttons (UP/DOWN) to select the saved folder and press the ENTER button to open the folder.

## Return to the Root Menu or Title Menu

During the disc playback, press the MENU button to return to the disc's root menu or title menu (depending on disc). For the MP3, Picture disc, press it to go to the tile or folder list after pressing the MENU button or stop button. Use the Direction buttons (UP / DOWN / LEFT / RIGHT) or the Numeric buttons to select a play option. Press the ENTER button to confirm and start playback.

## Play/Pause the Playback (DVD / VCD / CD / MP3)

During the playback, press the PLAY/PAUSE button on the remote control to pause the playback and sound will be muted. Press it again to resume playback.

## Volume Control

The main DVD player audio is set to a default of 10. Adjusting the audio on the main DVD player changes the audio on the secondary monitor.

Volume goes from quietest at 1 to loudest at 20.

To change the volume on just the secondary screen press MENU twice, select volume then UP/DOWN

## Selecting a Track / Chapter/ Title (DVD/ VCD/ CD)

Press the PREVIOUS ◀◀ or NEXT ▶▶ to skip to the previous or next title / chapter / track.

## Stop Playback (DVD / VCD / CD)

During playback, press STOP button to stop playing the disc.

## Fast Forward / Fast backward searching (DVD / VCD / CD / MP3)

During playback, press ◀◀ or ▶▶ button on the remote control repeatedly until the desired speed is reached for fast searching within a track/chapter/title (forward or backward). Press the PLAY/PAUSE button will enter normal playback directly. 2X -> 4X-> 8X ~->16X->32X-> Normal.

**Note:** The function is invalid on some discs. Not support the photo playback.

## Slow Motion Playback ( DVD, SVCD, VCD )

- Press the SLOW button on the remote control when pictures moving, you can enter Slow Motion Playback mode.
- Press the SLOW button on the remote during playback. Press the button again on the remote to play at the next speed. Slow Motion Playback has four speeds: 1/2, 1/4, 1/8, 1/16, and normal playback with each consecutive press of the button, the play speed decreases. If you press button for five times, Slow Motion Playback cycles back to normal playback.
- Press the PLAY/PAUSE button to resume normal playback.

## Repeat A-B (DVD / VCD / CD/ MP3) Playback

- Using this feature to repeat playback of a specific section of a track/chapter (loop).
- Press the Repeat A-B button on the remote to set the desired start point of the section to be repeated.
- Press the Repeat A-B button on the remote again to set the desired end point of the section to be repeated.
- The section "A-B" will now be played repeatedly as a loop.
- Press the Repeat A-B button the third time to cancel the repeat A-B feature and resume normal playback.

## Repeat Playback (DVD /VCD/CD/MP3 / Xvid Disc)

You can play a chapter/ title/ all/ track on a disc repeatedly. Press Repeat button on the remote control repeatedly during playback to select a desired repeat mode. Depending on the kind of disc (DVD, VCD, CD, MP3 or Video photo discs), you have different repeat modes.



## Program Playback

### For DVD / VCD disc

- During playback, press the PROGRAM during the playback: mode.
- Use navigation buttons to scroll through the different fields. Use numeric keypad to enter valid title / chapter number. Maximum of 20 sequences can be programmed.
- Select Play and the press ENTER to start playback.
- To clear the whole program, select Stop and press ENTER.

**Note:** MPEG4 and some video and JPEG disc do not support this function.

## Selecting Subtitle Languages (DVD)

While playing a DVD disc that has been mastered with multiple subtitles, press the Subtitle button repeatedly to select the desired language of the viewable subtitle.

**Note:** Only DVD recorded with multi-language subtitles have this function.

## Changing the Audio Soundtrack Languages (DVD)

Press the Language button on the remote control repeatedly during playback to select different audio languages.

**Note:** Only DVD recorded with soundtrack languages have this function. Some recorded DVD disc or video files without this function.

## Zoom (DVD / VCD)

- Press the ZOOM button on the remote control repeatedly to change the video image during playback.
  - During DVD, VCD playback, each successive press of ZOOM will change the level of magnification. While at ZOOM 2X, 3X, 4X, 1/2, 1/3 and 1/4 and normal; use the Direction buttons (UP/ DOWN/ LEFT/ RIGHT) on remote control or the unit to view the other parts when the photo is magnified (2X, 3X, 4X, 1/2, 1/3 and 1/4 mode can be operated).
  - During the sideshow mode of the JPEG CD or JPEG file in the USB device, press the ZOOM button on the remote control to zoom in or zoom out the photo. Press the ZOOM button repeatedly to select the zoom level, the screen shows the zoom level, includes the 100%, 125%, 150%, 200%, 75% and 50%. When a picture is magnified, you can press the Direction buttons (UP/DOWN/ LEFT/ RIGHT) on the remote control to view other panel parts of the magnified picture.
- Note: Zoom may not work on some disc. The picture quality decreases as the picture size increases.

## Changing the Audio Channel (CD / MP3/VCD)

Press the Language button repeatedly during playback to select available audio channels provided by the VCD disc (Left Mono, Right Mono, Mix-Mono or Stereo).

## Information Display

During playback, press the DISPLAY button repeatedly to show the disc playback Information on the screen (video format, time, title and chapter etc.)

**Note:** Depending on the kind of disc (DVD, VCD, CD or Data discs), different information will be shown on display.

## Numeric Buttons

Use the Numeric buttons to input a DVD chapter, VCD or CD track (invalid for some discs) and press the ENTER button to confirm.

Select "1-9", press the numeric button directly;

Select "10-99", press the "10+" button to select the number on ten digits, the number increase along with the number of the button press, press the number directly to select the number on unit digit.

## Using the Search Feature (DVD / VCD / CD)

**Note:** The function is invalid on some discs.

### 1. When Playing DVD disc

Search by title, chapter or time; Stop the playback, at a specific point, and then press the GOTO button:

The search window appears on the screen. Use navigation buttons to select a search option:

- Title: Enter the title number using the numeric keypad.
- Chapter: Enter the chapter number using the numeric keypad.
- Disc Time: Use navigation buttons to select a field (minutes, seconds). Use the numeric keypad to enter the field values.

### 2. When Playing VCD disc

• Disc Time: Use navigation buttons to select a field (minutes, seconds). Use the numeric keypad to enter the field values.

• Track: Enter the track, number using the numeric keypad.

### 3. When Playing CD disc

• Use navigation buttons to select a search option:

• Disc Time: Use navigation buttons to select a field (minutes, seconds). Use the numeric keypad to enter the field values.

Track: Enter the track, number using the numeric keypad.

## SPECIAL FEATURES

 
### MP3 / WMA / AVI Playing



The MP3/WMA/AVI disc has a directory structure as shown in the picture.

Press the Direction key to choose the root directory and then press the **ENTER** button to enter into the sub directory. Press the Direction key to choose the desired track, and then press the **ENTER**.

### Photo / Picture CD Playback

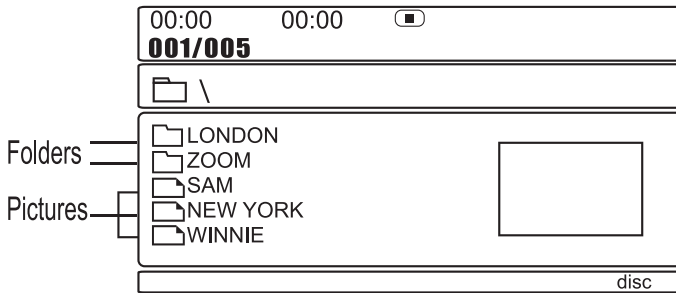

The PICTURE CD disc has such a directory structure as shown in the following picture.

Press Direction key to choose the desired picture and then press the **ENTER** button to enter into the sub directory. Press Direction key to choose the desired picture and then press the **ENTER** button on the remote control to view the picture. The player will show the pictures by slide show mode automatically, press the play/pause button to pause or restart the slide show. Press the stop to turn to the Browse mode. Press Menu if you want to return to the menu.


**NOTE:** The quality and playing speed of JPEG photos depend on the resolution and the compression ratio of the photos. Some JPEG photos may not be played due to discs quality and the formats. Not all video files are played well since the difference video codec.

#### Image rotation

In picture play state, press the Direction key to rotate the picture.

## USB/SD/MMC Support

Built-in USB port and SD card reader, you can enjoy your digital movies and MP3 files directly from a USB flash drive or SD/MMC card. Like most DVD players in the market. It supports 720p videos, and max capacity up to 32G Flash memory. The display screen is 16:9 that you could not adjust.

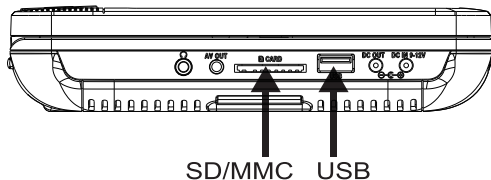

Disc Formats: CD, DVD, DVD+(-R), DVD +RW(-RW), VCD, SVCD-R(RW), CD-R(RW)

Video Files Formats: VOB, AVI, MPEG1, MPEG2, XVID

Audio File Formats: MP3, WMA

Images Files Formats: JPEG

## Way to connect USB/SD

1. Insert the USB/SD device into USB or SD port on the right side of your portable DVD player.
2. Press USB/SD button on the remote control to select the desired media source.
3. Use the Arrow/Enter buttons to select and play content from the connected Media drives.

**Note:** The USB port is compatible with flash memories no more than 32GB, it is not compatibility with MP3 players using Software.

Please do not insert in the wrong direction, always stop the playback or change to other modes before removing the USB device.

## USB / SD / MMC Card Storage Device Protection

1. The operating features described here might not be possible for some USB devices or SD/ MMC memory cards. Always refer to the instructions supplied with external devices.
2. Always insert the SD/MMC card in the correct direction. Failure to do so may result in damage to the memory cards and this player. Do not force the memory card into the slot.
3. Not all USB and memory cards can be recognized in this player. If you have trouble with playing a file, remove the SD/MMC card or USB device and try a different one. Improperly formatted files will not be played on this player.

## Tips

Electrical interference and electrostatic discharges may cause the USB device or SD/MMC card to malfunction and suffer damage, resulting in data loss.

It is strongly recommended that any important data is backed up on a PC to protect against corruption, data loss or device malfunction.


## SYSTEM SETUP

### Attention:

Last Memory on General Setup Page can resume the movies or music you like.

To access the setup menu, press the setup button on the remote control. You will be given four sub menu options to choose from. Each option is described below. Use the arrow keys to navigate between the options.

### GENERAL

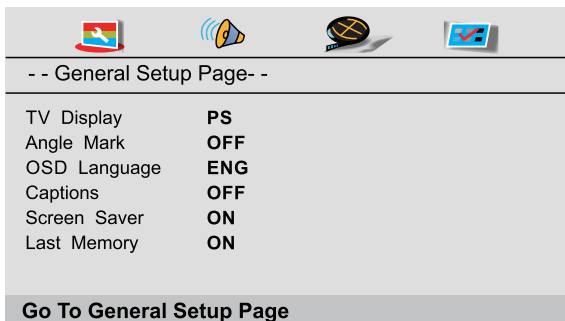

The general menu allows you to modify basic setting such as language. The general options are as follows:

**TV Display:** Adjust the screen aspect ration between 4:3 Pan Scan/4:3 Letter Box/16:9

**Angle Mark:** Display an icon on the screen when multiple angles are available.


**OSD Language:** Allows you to change the menu language.

**Captions:** Display subtitles automatically when available.

**Screen Saver:** Display a screen saver when the portable DVD has not been used for a period of time

**Last Memory:** Revert back to the same spot on a DVD if the portable DVD is turned off in the middle of a Program.


### SPEAKER

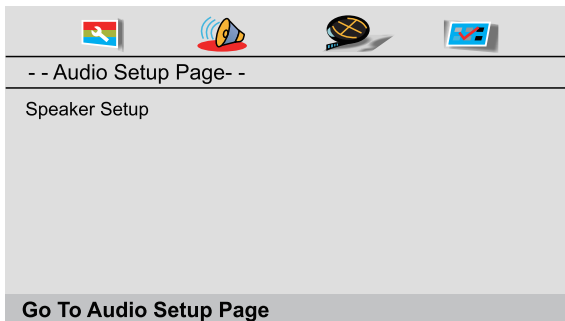

The speaker menu allows you to change the audio setup of the portable DVD

**Downmix:** Set downmix to LT/RT, Stereo

## PANEL QUALITY

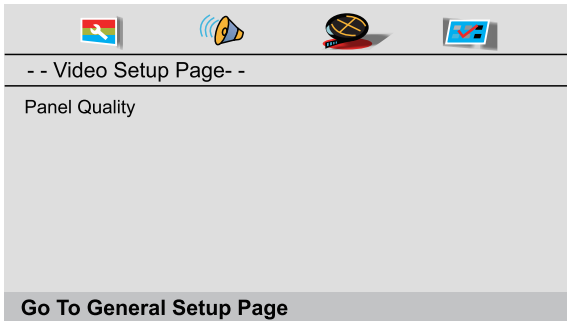 

The panel quality menu allows you to change the display properties of the portable DVD

**Sharpness:** Adjust the screen sharpness between LOW / MID / HIGH


**Brightness:** Adjust the screen brightness

**Contrast:** Adjust the screen contrast

**Hue:** Adjust the screen hue

**Saturation:** Adjust the screen saturation

## PREFERRED SETTING

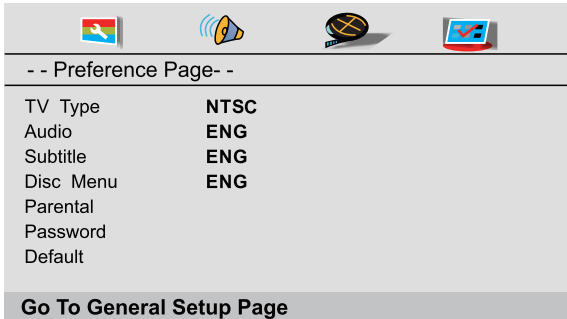

The preference menu option allows you to adjust the default DVD disc settings. (This setting only available when no media inside the unit)

**TV Type:** Set TV type to PAL, AUTO or NTSC

**Audio:** Set the default audio language

**Subtitle:** Set the subtitle language

**Disc Menu:** Set the disc menu language

**Parental:** Set a maximum parental rating for discs that can be played without a password

**Password:** Set a parental lock password (The default password is 0000)

**Default:** Return the portable DVD player to factory default.

## TROUBLE SHOOTING

Check the following Troubleshooting guide in the following section before contacting

**When the slave monitor does not work, firstly please help check all connecting cables.**

1. For DC cable, one end connect DC OUT on the second jack of main player, NOT DC IN 9V-12V on the top jack. The other end plug into DC IN of slave monitor.
2. For AV cable, one end connect AV OUT on the main player. The other end plug into AV IN of slave monitor, NOT earphone jack.
3. For AC power cable or Car charger, plug into DC IN 9-12V top jack of the main player, **NOT** connect the second jack.

**Please check yourself with the following diagram before using the maintenance service**

Problem	Potential Factor	Available Solution
Screen Issues	<b>Screen has scratches</b> There is a screen protector attached to the screen . It will not affect the use of machine	You could take the screen protector off before using by some pointed tools. And if it is attached tightly, you may need some time and efforts. After that, please use soft cloth to clean the screen.
	<b>Screen has lines through or been cracked</b> LCD screen may be damaged in shipping or not protected while in use	Please contact us
	<b>Slave Monitor become grainy and lines through out</b> DC cable do not work well	Retry inserting AV and DC Plugs
	<b>Slave monitor show gray</b> When you push MENU on touch keyboard of slave monitor, turn RIGHT three times, you will see SYSTEM, you choose PAL or SECAM in four kinds of S-ROLOC.	You could choose other two S-ROLOC, AUTO or NTSC and it will become okay.
Could not resume playing from original position	Last Memory has closed	Make sure Last Memory open on General Setup Page
No Sound	Press MUTE or not connect correctly.	1. Try to adjust the volume of main player up to 20 through the remote control or Try to press RIGHT on touchscreen of main player about 2-3 seconds to increase the volume 2. Check connections
Remote control does not work	Not reach the sensor area/Obstacle blocked /Battery inserted in wrong way/Battery runs out	Contact us/Point into sensor area/ Remove the obstacle from the front of dvd player/Check the battery polarity and rectify the mistake/ Change new battery

Problem	Potential Factor	Available Solution
Main player does not work	Without electricity	Charge it by AC wall adapter or car charger
	Not turn power switch "ON/OFF" to ON	Turn power switch "ON/OFF" to ON
	NOT remover paper card before putting discs	Remover paper card first
	No disc inserted/Disc cover not closed	Put a disc/Close disc cover
	Disc inserted the wrong way/ Disc dirty or scratched	Insert disc with label facing up/Clean disc, or insert other disc
	Moisture on lens	Remove disc and turn off player
Slave monitor does not work	<b>Slave monitor becomes blue and show "AV" on the top</b> 1. AV cable not plug in or insert into wrong jack 2. Incorrect operation: Press "POWER" on the keyboard of main player	1. Check and insert AV cable into correct position 2. Re-press the "POWER" on the keyboard of main monitor
	<b>Slave monitor have sounds, but no picture</b> Incorrect operation: Press "TFT OFF" on the keyboard of slave monitor	Re-press the "TFT OFF" on the keyboard of slave monitor
	<b>Slave monitor have no sound and no picture</b> 1. Incorrect operation: Press "POWER" on the keyboard of slave monitor  2. AV cable do not work  3. DC cable is plugged into wrong position/DC cable do not work	1. Re-press the "POWER" on the keyboard of slave monitor 2. contact us directly or try another AV cable: transfer (Audio+Video)-3.5mm to 3.5mm male to male connection 3. DC cable is plugging into DC OUT, the second port of main player/ Contact us or try new DC cable 4 x 1.7mm
No discs or loading	Not take paper card out before putting a disc or not put DVD/VCD/CD well	1. Take yellow paper out before putting a disc 2. See whether disc rotate, or blue indicator will be on/Contact us
Poor video and or / audio quality	Device not properly connected	Check connections and connect device in the correct way
	Disc dirty or scratched	Clean disc, or insert another good disc
Repeated playback of section	Cycle mode is switched on	Exit the loop mode
	Disc dirty or scratched	Clean disc, or insert other disc
When happens to impossible to pass the foreword of the film, or could not execute fast forward or fast reverse function	Some discs have their own limits	Some discs have sections that prohibit quick scanning or chapter skipings. It is impossible to skip the warnings and the opening credits. This part of the movie is often programmed to prevent it from being skipped.



## SPECIFICATIONS

Power Adapter	AC Adapter input power: AC 100-240V 50/60Hz Output: DC 12V 2A (AC adaptor Terminal) Monitor: DC in 12V (from the DVD player terminal)
Power Supply	DC 9V-12V 2A
Region Encoding Playback	NTSC/PAL/AUTO
Disc Mode	DVD,VCD, CD, MP3, CD-R, CD-RW, JPEG, DVD±R/RW
Video S/N Ratio	≥ 65dB.
AV Out Resolution	≤ 500 lines
Frequency Response	fs 96kHz: 125Hz-16kHz:±/-1dB
Audio S/N Ratio	≥ 90dB.
Dynamic Range	≥ 80dB.
Distortion	< 0.01%
Headphone jack	3.5mm
AV in/AV out jack	3.5mm
D/A Converter	96kHz/24bit
Display Device	Color TFT-LED display, screen resolution is 1024*600 pixel
Screen Size	Widescreen (16:9)
Operating Conditions	Temperature 0°C~40°C

**NOTE:** As a result of continual improvements, the design and specifications of this product are subject to change without notice and may differ slightly from the unit illustrated on the packaging.

## WARRANTY

The warranty will not be valid if:

1. The product has not been installed, operated or maintained in accordance with the manufactures operating instructions with the product.
2. The product has been used for purposes other than its intended function.
3. The product has been used for purposes other than household use.
4. The damage or malfunction of the product is caused by any of following conditions:
  - Incorrect voltage
  - Accidents (including liquid or moisture damage).
  - Misuse or abuse of the product
  - Faulty or improper installation
  - Mains supply problems including power spikes or lightning damage
  - Infestation by insects
  - Tampering or modification of the product by persons other than authorized service personnel
  - Exposure to abnormally corrosive materials
  - Insertion of foreign objects into the unit
  - Used with accessories not pre-approved

**Please refer to and heed all warnings and precautions in the User Manual.**

Distributed by:  
Electus Distribution Pty Ltd  
46 Eastern Creek Dr,  
Eastern Creek NSW 2766 Australia  
Ph 1300 738 555  
Int'l +61 2 8832 3200  
Fax 1300 738 500

[www.electusdistribution.com.au](http://www.electusdistribution.com.au)