

QM-3872

RESPONSE

9" LCD Monitor with 4 Channel DVR



Instruction Manual

SAFETY FIRST

For your safety, please operate this unit in accordance with your local road and traffic regulations.

- Do NOT watch video while driving
- Do NOT install this product illegally
- Use responsibly

 
PRODUCT OVERVIEW



1. Sunshade
2. Menu Button: Pause recording. Return function in Menu. Status in Playback Menu.
3. CH 1 Button: View Channel 1. Select Left in Menu. Previous Track in Playback.
4. CH 2 Button: View Channel 2. Select Right in Menu. Next Track in Playback.
5. Power Button: Power On, Record/Stop Record. press and hold for 3 seconds to Power Off. Play/Pause in Menu. press and hold for 10 seconds to reset system.
6. CH 3 Button: View Channel 3. Select Down in Menu. Decrease Volume in Playback.
7. CH 4 Button: View Channel 4. Select Up in Menu. Increase Volume in Playback.
8. Mode Button: Display All 4 Channels. Select between volume decrease/ play/pause in playback status.
9. Remote Control Receiver
10. Indicator: Blue - Power On, Flashing Red - Recording.
11. U-shaped Bracket
12. SD Card Slot

CONNECTION


4 Pin connection

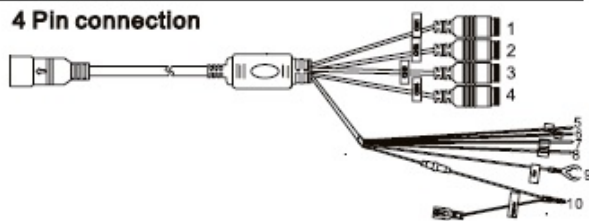

1. CH1 Signal Input
2. CH2 Signal Input
3. CH3 Singal Input
4. Ch4 Signal Input
5. Brown Wire: CH1 Trigger
6. Green Wire: CH2 Trigger

7. Blue Wire: CH3 Trigger
8. Grey Wire: CH4 Trigger
9. Black Wire: Ground
10. Red: DC 12V / 24V Power Supply

 
RCA connection

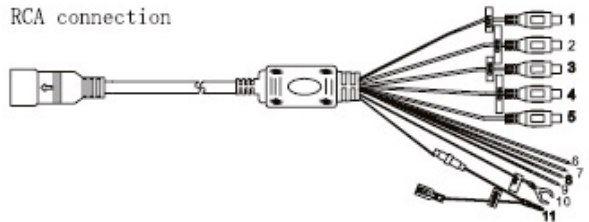

1. CH1 Signal Input
2. CH2 Signal Input
3. CH3 Singal Input
4. Ch4 Signal Input
5. Audio In
6. Brown Wire: CH1 Trigger

7. Green Wire: CH2 Trigger
8. Blue Wire: CH3 Trigger
9. Grey Wire: CH4 Trigger
10. Black Wire: Ground
11. Red: DC 12V / 24V Power Supply

 REMOTE CONTROL

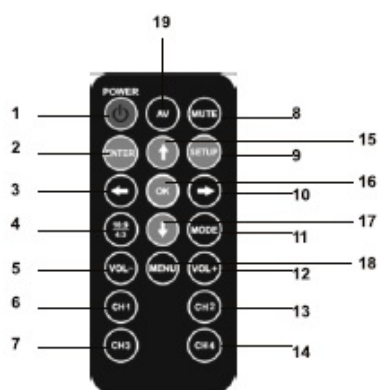

1. Power Button: Turn On/OFF
2. Enter Button: Switch between Record and Playback
3. Left Button: Select Left. Previous Track in Playback
4. Aspect Ratio Button: Select between 16:9 and 4:3
5. Decrease Volume
6. CH1: View Channel 1
7. CH3: View Channel 3
8. Mute Button: Sound Off
9. Setup Button: Enter or exit Menu.
10. Right Button: Select Right. Next Track in Playback
11. Mode Button: Select between image effects.
12. Increase Volume
13. CH2: View Channel 2
14. CH4: View Channel 4
15. Up Button: Select Up
16. OK Button: Record/Stop Record, Confirm in Menu, Play/Pause in Playback.
17. Down Button: Select Down
18. Menu Button: Enter Menu
19. AV Button: Switch between channels

FUNCTION & SPECIFICATIONS

9" Digital LCD Panel, 16:9
 Resolution: 800x480 RGB
 Remote Control Included
 Video Standard: PAL & NTSC
 Video Sources: 4
 Image Compression: Motion JPEG
 Video Compression: AD PCM
 Video Record: Automatic
 Single Channel & Four Channel Display
 DVR Image Resolution: 640x480
 Video Input: 4 Channel with 4 pin connector or RCA connector
 Audio Input: 1 Channel with 4 pin connector or RCA connector
 Recording Speed: 30FPS
 Recording Media: SD Card (Up to 32GB)
 Built-in battery: 1 polymer battery
 Power Supply: DC 12V-24V
 Working Temperature: 0°C - 60°C
 Dimensions: 235(W) x 170(H) x 76(H)mm
 Weight: Around 700g

RESPONSE

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500

www.techbrands.com

Made in China