



QP2102

Digital Tyre Pressure Gauge with Deflation Function



INSTRUCTION MANUAL

CONTENTS

Box Contents.....	3
Product Diagram	3
Before First Use.....	4
Operating Instructions.....	5
Cleaning, Care, Storage & Maintenance	7
Warranty Information.....	8

BOX CONTENTS



1x Digital Tyre
Pressure Gauge

PRODUCT DIAGRAM



BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Please pay close attention to the section entitled Important Safety and General Instructions. Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual. Plastic wrapping can be a suffocation hazard for babies and children so ensure all packaging materials are out of their reach.

WARNING: The manufacturer is not responsible for any potential injury from misuse

OPERATING INSTRUCTIONS

Your new tire deflator uses a bourdon tube movement and is not affected by changes in barometric pressure, temperature or altitude.

DO NOT exceed the maximum pressure on the dial, doing so will damage the gauge. Accuracy of the gauge will be reduced if maximum pressure is exceeded or by repeated impacts and excessive vibrations. Always store in a clean, dry and safe area.

WARNING: always wear eye protection when using this gauge, working around pressurized vessels/tires or attempting tire repairs.


DO NOT use on tires with any internal foreign matter such as balance sand, liquid tire repair/sealer, etc.

Slide valve push in to hold air/read pressure. Pull out to release air.

Valve core tool. Removes valve core. Turn clockwise to install, counter-clockwise to remove.



Valve stem adapter. Threads onto valve stem.

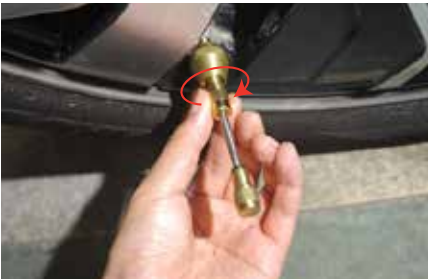

1. Thread the valve stem adapter onto the valve stem till snug.

NOTE: If you push in on the valve core remover firmly, the gauge will read the current tire pressure. This feature works with most valve stems.



2. Push on the valve core remover and turn counter-clockwise to remove valve core.



3. When the valve core is unthreaded, air pressure from the tire will push the valve core remover out and the gauge will read the tire pressure.



4. Pull out the slide valve to release pressure. Push the slide valve in to stop bleeding pressure and to read tire pressure.



5. Once desired air pressure is achieved, keep the slide valve pushed and re-install the valve core by pushing the valve core remover and turning clockwise to install the valve core. Tighten until snug. **DO NOT** over tighten.



6. Remove air down gauge by turning the valve stem adapter counter clockwise until it is removed from the valve stem. Always replace the valve stem cap to prevent dirt and debris from damaging the valve core.

ALWAYS KEEP ALL MOVING PARTS CLEAN AND DRY. IF THEY BECOME DIFFICULT TO MOVE, YOU MAY LUBRICATE WITH NON PETROLEUM, SILICON OIL.

CLEANING, CARE, STORAGE & MAINTENANCE

- Clean with a damp cloth.
- Store away in a cool dry place away from dirt and debris.
- Avoid impacts and keep threads and valve free from dirt and debris.

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555