

# digitech

## LCD Desk Clock with Alarm



## User Manual

XC-0232

# Product Diagram:



#	Feature	Description
1	LCD Screen	Displays time, date, day and temperature (C°/F°)
2	Snooze/Backlight	Press to activate snooze while the alarm is set. Press once to turn the LCD backlight on for 5 seconds



#	Feature	Description
1	Speaker	Sounds the programming and alarm
2	Set	Press and hold for 2 seconds to set the time, date, day and language
3	Alarm	Press and hold for 2 seconds to set the alarm
4	Up	Use to program the time, date, day and alarm
5	Down	Use to program the time, date, day and alarm. Press once to change the temperature between C° and F°
6	Battery Compartment	Insert 2 x AA (Not Included) to power the unit

## **Operation:**

1. Open the battery compartment on the rear side.
2. Insert 2 x AA batteries (not included) using the correct polarity in to the battery compartment.
2. Close the rear battery compartment locking it in to place.

## **Clock Settings:**

1. Press and hold the set button for up to 2 seconds until the 24 hour is flashing.
2. Press the ▲ or ▼ button to select 12 or 24-hour mode.

3. Press the set button again to change the hour.

4. Press the ▲ or ▼ button to set the hour.

5. Press the set button again to change the minutes.

6. Press the ▲ or ▼ button to set the minutes.

7. Press the set button again to change the year.

8. Press the ▲ or ▼ button to set the year.

9. Press the set button again to change the month.

10. Press the ▲ or ▼ button to set the

month.

11. Press the set button again to change the date.

12. Press the ▲ or ▼ button to set the date.

13. The languages English (ENG), Italian (ITA), French (FRE), Dutch (DUT), Spanish (SPA), Danish (DAN) and German (GER) will display. Press the ▲ or ▼ button to set the language.

14. Press the set button again to lock in the settings.

## **Alarm Function:**

1. Press and hold the alarm button for up to 2 seconds until the alarm hour is flashing.
2. Press the ▲ or ▼ button to set the alarm hour.
3. Press the alarm button again to change to minutes.
4. Press the ▲ or ▼ button to set the alarm minutes.
5. Press the alarm button to lock in the alarm time. The alarm symbol 🔔 will display when set correctly and sound for 2 minutes.
6. Press the alarm button twice to turn off.

**Snooze Function:**

While the alarm is sounding; press the snooze/backlight button to push the alarm back 5 minutes. The symbol Zz will display on the LCD.

Press any button to deactivate the snooze function.

## **Temperature:**

Press the down ▼ button to change between Celsius (C°) and Fahrenheit (F°).

## **Backlight:**

Press the snooze/backlight button to activate the blue backlight for 5 seconds.

## **Safety:**



1. Do not open the case of the LCD clock to avoid damage and injury.
2. Keep the LCD clock away from high temperatures as it may cause damage to the unit.
3. Do not expose the LCD clock to water, moisture or liquids to prevent the unit from damage.

## **Features:**

- . Alarm & Snooze Function
- . Battery Operated
- . 5 Second LCD Backlight
- . Time, Date, Day & Temperature (C°/F°)

## **Specifications:**

LCD: 1.9"

Time Format: 12/24 Hour

Batteries: 2 x AA (Not Included)

Battery Life: Up to 1 Year

Dimensions: 166(W) x 80(H) x 40(D)mm

Distributed by:  
Electus Distribution Pty. Ltd.  
320 Victoria Rd, Rydalmere  
NSW 2116 Australia  
Ph: 1300 738 555  
Int'l: +61 2 8832 3200  
Fax: 1300 738 500  
[www.techbrands.com](http://www.techbrands.com)