

NEXTECH



Economy DVD Maker XC4991 Quick Installation Guide

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com
Made in China

INTRODUCTION

Introduction

USB 2.0 AV Grabber is capture equipment specified designed for capturing MPEG, which transmit screened important images to HDD by connection of AV and S-Video with high resolution as 720*576.

Features

- USB 2.0 Interface, USB video/audio transfer
- Create your High Definition Home Video Library
- USB audio support, one USB cable to your PC, especially for Notebook without Line in port.
- Real-Time MPEG 2/1 encoding
- Burn edited files onto DVD, VCD, and SVCD...
- Capture video source from VHS, V8, and Hi8...

System requirement


- Pentium-IV 1.6GHz or higher (recommended)
- 512 MB RAM of system memory or above (recommended)
- One available USB port (preferably USB2.0)
- Graphics Card (Must support DirectX 9.0c)
- Sound Card (AC97 compatible sound card)
- 1GB Free HD Space
- Microsoft Windows XP / Windows Vista / Windows 7/8/10

Package Contents

- 1 x USB 2.0 AV Grabber
- 1 x Installation CD
- 1 x Installation Manual

Installation

Hardware Installation

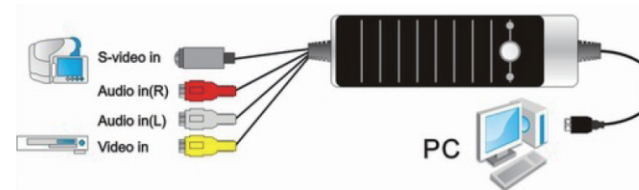


Please ensure that windows is correctly installed and started before connecting the USB 2.0 AV Grabber to your Computers USB 2.0 port. Connect the USB 2.0 AV Grabber to the USB connection of your computer.

Driver Installation

Note: "If you have any anti-virus software enabled, please disable it during the installation of the software."


When you first connect the USB 2.0 AV Grabber to your computer a Hardware Assistant will appear, the "SM-USB 007" will be recognized. Please select "Close"

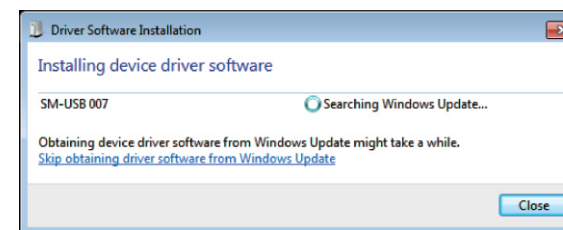


Insert the Drivers CD into your CD drive. Please double click **Setup.exe**, and then click the "Install Windows Drivers" from Autorun Setup cover page.



Wait for the installer to run. Select your language for the installation and Click "Next"

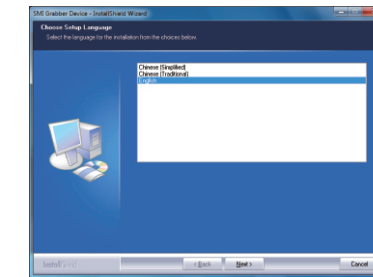

Then please follow the instructions of the wizard to complete the installation process.

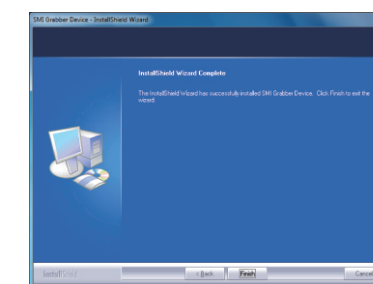

Then Click on "Finish" to finish Drivers installer


User's Manual

REV.1.0


01 Economy DVD Maker

TotalMedia Player Software Installation


To start the USB 2.0 AV Grabber software installation, click Start / Run then type your CD-ROM drive and click "ArcSoftTotalMedia3.5".

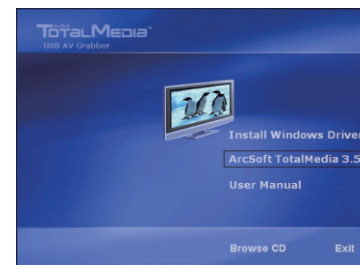

Select your language for the installation and Click "OK"

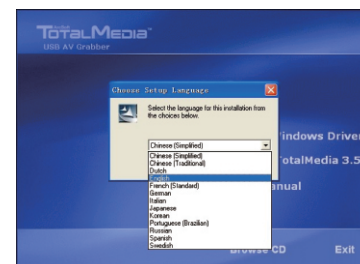

 Follow the instructions which you just installed enter **User name** and **License Key** (you can find out the License Code on driver CD bag or Product)

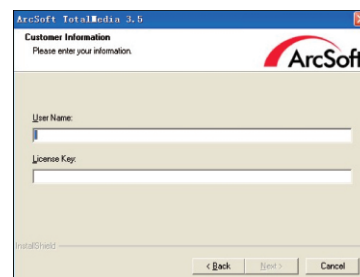

Then please follow the instructions of the wizard to complete the installation process.

 
Drivers Installation Verification

Maybe, your pc will pop windows log verify dialog box, Then you should select continue anyway.

After finishing driver installation and plugging this USB 2.0 AV Grabber to your computer, the system will detect the device. You can go to Device Manager to verify the entire installation.

Right Click on My Computer and Left Click on Properties. Click on Hardware tab and then Device Manager.


In the "Device Manager", click on the "+" symbol on the "Sound Video and Game controllers" section.

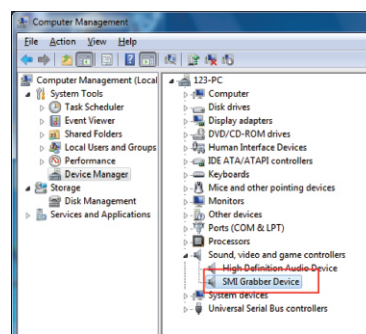


If the driver is installed correctly you should see the "SM Grabber Device". If it has a Yellow mark next to it then this means that the driver is not installed correctly. You will need to remove the driver and disconnect the USB 2.0 AV Grabber from the computer and re-connect it to install the driver again.

02 Economy DVD Maker

 
When done click on "Finish" to complete setup.

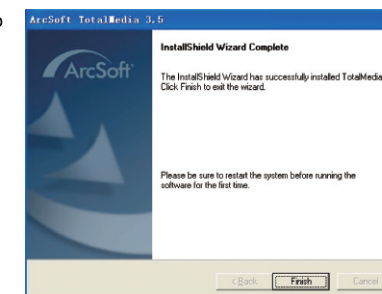

Click on **Video** of Total Media player, then click on **Capture** of Total Media player you can find the signal.

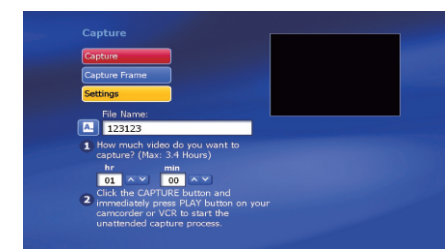

03 Economy DVD Maker

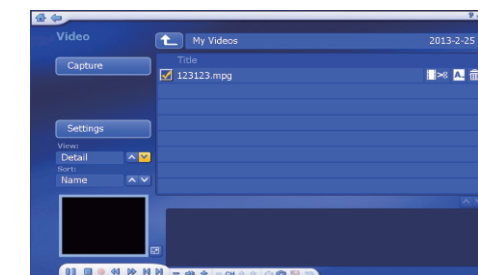

Appearance & Menus

Button/Icon	Name	Description
	Record	Start / Stop Record
	Capture	Capture a image
	Stop / Play	Stop / Play AV Source
	Volume Control	Drag slider bar to adjust volume
	Mute	Turn on/off audio
	Open	Select Media files
	Rewind/fast forward	Rewind/fast forward
	Previous / Next	Skip to play Previous/Next Media file
	Cut /Edit/ Delete	Cut video/ Edit Title/ Delete files

Note: On Windows 7, please check your computer audio drivers installed correctly. Refer to Windows 7 Audio Setting in CD.

More TotalMedia3.5 Player Software operation details please refer to User Manual in CD

WEEE Directive & Product Disposal

At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

04 Economy DVD Maker

05 Economy DVD Maker

06 Economy DVD Maker

07 Economy DVD Maker