

User Manual

Waterproof Rechargeable Shower Speaker

XC-5630



Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com

Specifications:

Weatherproof Rating:	IPX4
Bluetooth® Range:	Up to 10m
Power Supply:	5VDC
Charging Time:	Up to 3 Hours
Operating Time:	Up to 5 Hours
Dimensions:	93(L) x 85(H) x 45(D) mm
Weight:	99g

Charging the battery:

- Insert the charging cable into the DC 5V socket on the unit. Connect the USB plug into USB power terminal. The LED indicator will turn red.
- Once the charging is completed, the LED indicator will turn off.

Bluetooth® pairing:

- Turn the speaker on using the On/Off button.
- Turn on your device and activate the Bluetooth® function.
- Search for Bluetooth® pairing name 'XC5630' and click to pair. If prompted for a password, type "0000", the Bluetooth will sound "Bluetooth Connected".

Note: Once your device has paired with the speaker, it will connect automatically in future when the speaker is on and your devices Bluetooth® is activated.

Button description:



On/Off: switch the device on and off.



Press once to go back to the previous track.
Press and hold to decrease the volume.



Press once to go forward to the next track.
Press and hold to increase the volume.



Press to pick up or hang up a phone call.
Press twice quickly to redial the last phone number.
Press and hold for 3 seconds to disconnect the Bluetooth® pairing.



Press to Play or Pause the music.



RESET button: Press the button strongly to reset the speaker.