

Instruction Manual

Rechargeable Insect Zapper with LED Lantern

YS-5512

Specifications:

1. Adaptor: DC5V 500mA(included)
2. Input of the adaptor: AC100-240V 50/60Hz
3. Battery type: 1pc 18500 3.7V 1400mAh, lithium battery (included)
4. Charging time: 6-7 hours
5. Using time for purple light: approx. 20 hours
6. Using time for white light: approx. 24 hours

Function:


This device can be also used both as Insect Killer and Emergency Lamp just by operating the switch on the top.

- Switch on the purple light for Insect Killer function.
- Switch on the white light for emergency lamp function.

Using Directions:

- Indoor Use
 1. Plug in with adaptor while charging the appliance, it also can work as Insect Killer function or Emergency Lamp function.
 2. Close windows and doors and other lamps when keep it working (purple light), for a better attraction to the flying insects and kill them.
 3. It is better to put it at the darkest corner of the room for better attraction to flying insects and kill them.
 4. Put the unit on the chair or table where the height is about 50-100cm from the ground.
 5. Ideal for bedroom, sitting room, living room, etc.
- Outdoor Use
 1. Keep the unit plugging in and recharging before taking it out.
 2. Operate the switch in proper place for Insect Killer or Emergency Lamp.
 3. For a better killing rate, keep the unit about 1-2m away from people, don't put the unit very closed by the people when switch on Insect Killer function.
 4. Ideal for Camping, BBQ, Fishing, etc.

WARNINGS:

1. High voltage!  Do not touch the inner electric grids.
2. Children cannot play with it.
3. Do not insert foreign metal object into the unit.
4. Do not submerge the device into water or other liquids.
5. Do not cover the device while it is using.
6. Keep away from flammables.
7. Check the local voltage before operating.
8. Put it on a place where children cannot reach.
9. If damaged, supply cords must be repaired or replaced by a qualified technician.
10. The Insect Killer cannot be used in garage, stable or similar places.
11. Please unplug the unit from the power source before commencing to clean and maintenance.
12. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
13. Keep the appliance and its cord out of reach of children less than 8 years.
14. Children should be supervised to ensure that they do not play with the appliance.