User Manual

Portable Rechargeable Speaker XC-5209
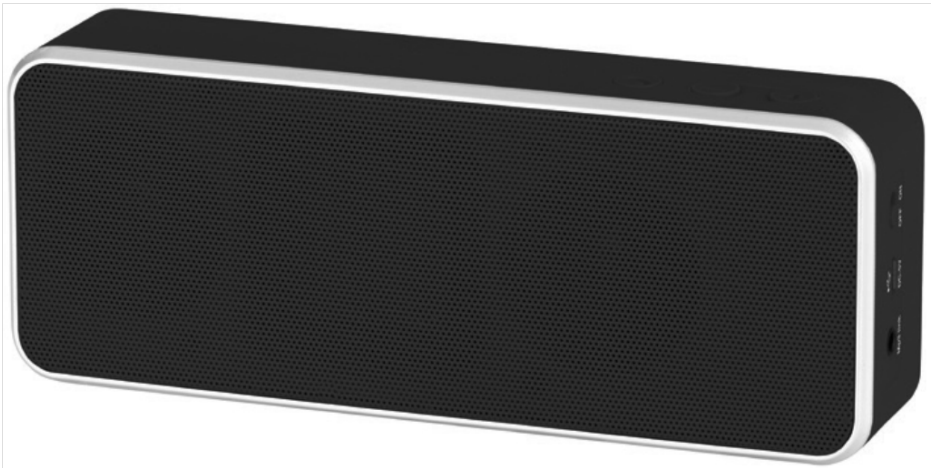
Specifications:

Output Power:	2 x 3WRMS
Bluetooth® Range:	10m
Frequency Response:	90Hz~18kHz
Impedance:	4 Ohm
Charging Time:	3.5 – 4 hours
Playback Time:	
At max. volume:	5 hours
At 80% volume:	6.5 – 7 hours
Dimensions:	170 (L) x 65 (H) x 35 (W) mm

Power and Charging:

The unit has a built-in rechargeable battery. Before using the speaker, please follow these steps to charge the unit first:

1. Using the supplied USB cable, plug into speaker and the other end into a USB power terminal.
2. During charging, the LED will be red. Once it is fully charged the LED will turn off.
3. When the battery is low, a voice will speak "Low Battery, Please Charge". Once the battery has been depleted, the speaker will power off.

Note:

Your battery will last longer if you follow these guidelines:

- When charging for the first time, charge for at least 10 hours. The battery will have a better performance if it is fully charged and fully discharged 3 times. Not discharging a battery completely before recharging again can impact the battery's lifetime.
- Recharge and store the unit within the temperature ranges of 5°C and 35°C.
- Do not charge for longer than 24 hours. Excessive charging may shorten the battery's life.

Bluetooth Pairing:

1. Slide the power button to the ON position, the blue LED at the front of the speaker will be flashing quickly and the speaker will sound briefly "Bluetooth mode on". It is now in Bluetooth® pairing mode.
2. Turn on the Bluetooth® Technology pairing of your device, and search for 'XC5209'. Select this name and input '000o' as the password if prompted. The speaker will sound "Matching OK", and the blue LED at the front of the speaker will flash slowly to show that the pairing has been successful.
3. Select the music to play from your device, or use as per the Operation Instructions below.

NFC (Near Field Communication):

1. To use the NFC function, you must have an NFC enabled device. Ensure that the NFC on your device is turned on, and hold your NFC enabled device over the NFC logo on the speaker.
2. This will connect your device to the speaker, and any previous devices that were connected will be disconnected.
3. Select the music to play from your device, or use as per the Operation Instructions below.

AUX Link:

1. After powering on the unit, use a 3.5mm audio cable to connect your music device with the speaker. The LED on the front will turn red and the speaker will sound "Under Line-in Mode".
2. Select the music to play from your device, or use as per the Operation Instructions below.

Operation Instruction:

- Press the ✆ button once to Play and Pause the music.
- If you press and hold the ✆ button, the Bluetooth® will disconnect and you will hear "Waiting for Connection".
- Press the + or – buttons once to select the previous track or the next track.
- Press and hold the + or – buttons to increase or decrease the volume.
- In Bluetooth® mode (doesn't work with 3.5mm audio cable), when there is an incoming call, press ✆ to pick up the call, and press it again to hang up.