



QP2321 DISCHARGE MONITORING

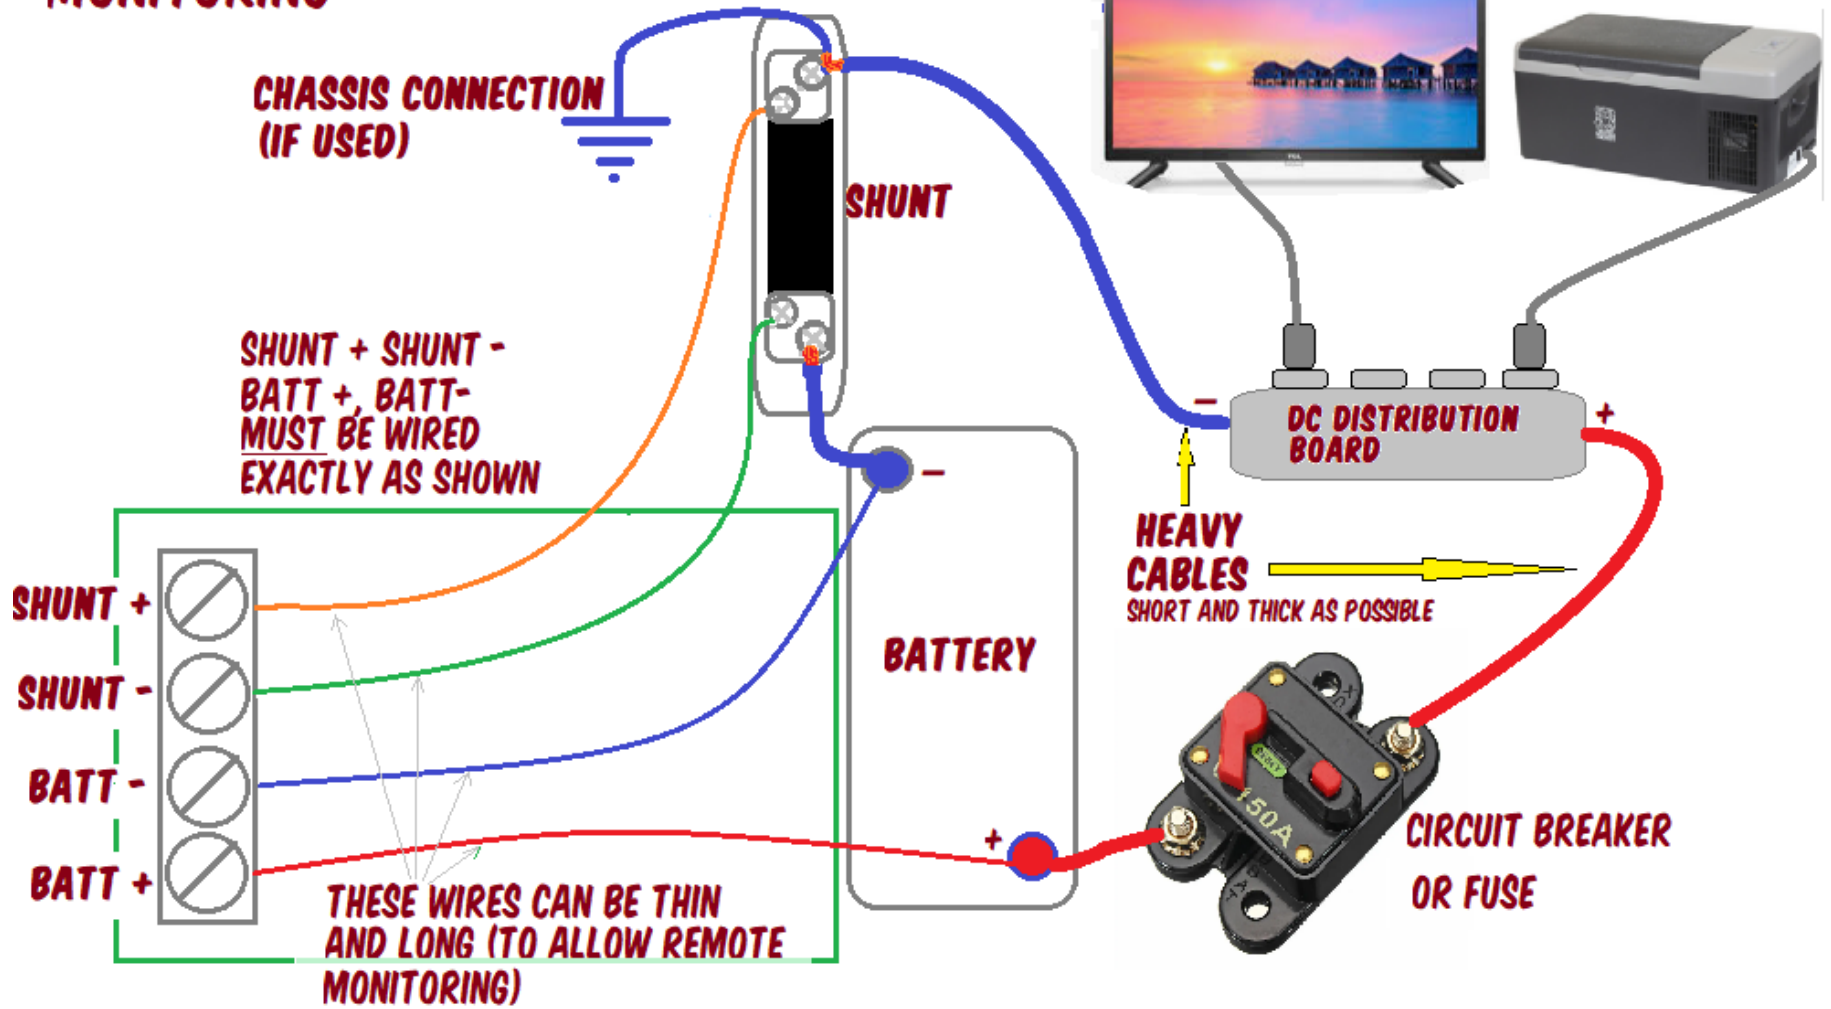

QP2321 SOLAR CHARGE MONITORING

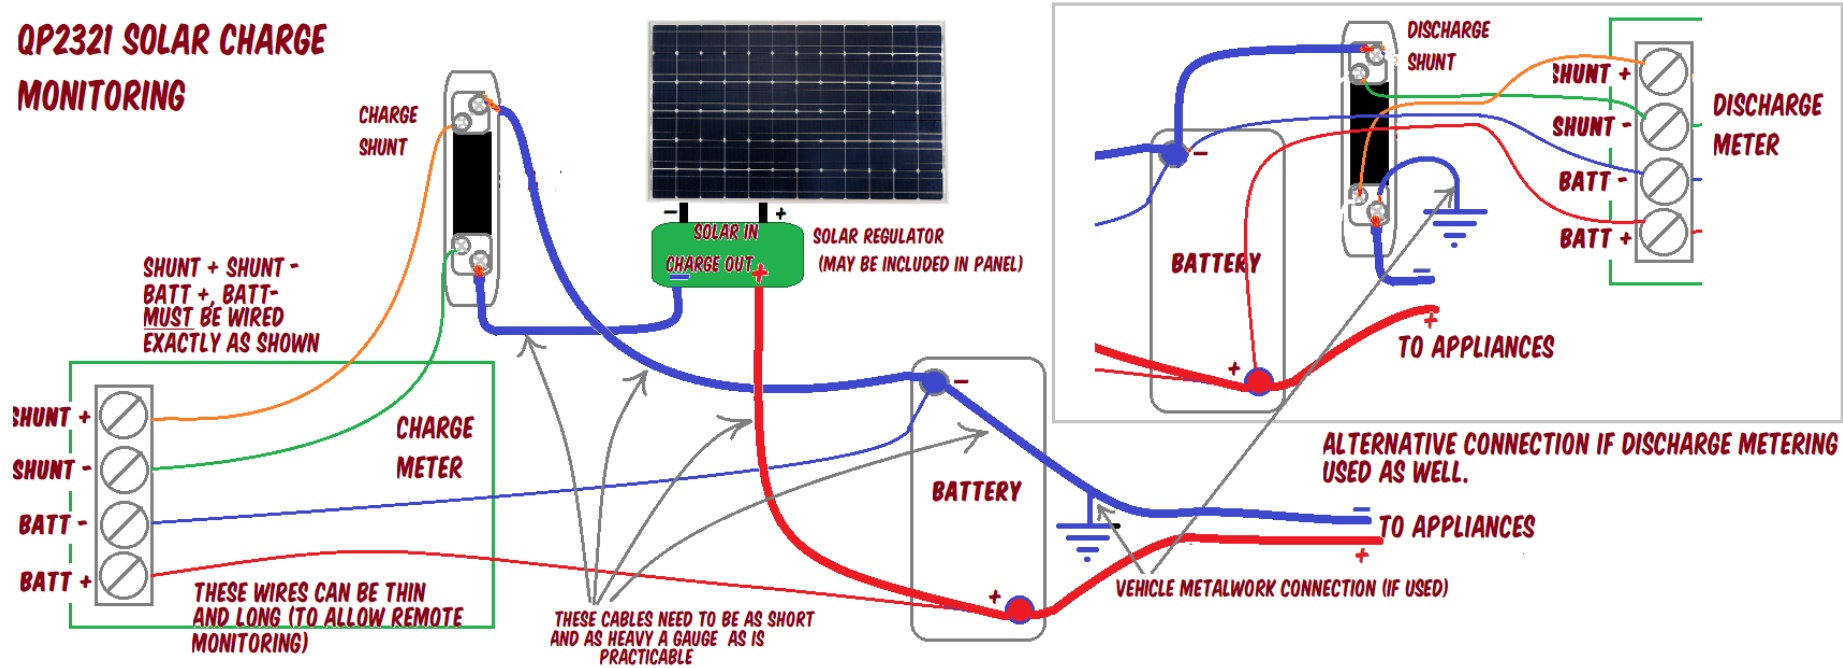


SHUNT + SHUNT -
BATT +, BATT -
MUST BE WIRED
EXACTLY AS SHOWN

SHUNT +
SHUNT -
BATT -
BATT +

CHARGE METER

THESE WIRES CAN BE THIN
AND LONG (TO ALLOW REMOTE
MONITORING)

THESE CABLES NEED TO BE AS SHORT
AND AS HEAVY A GAUGE AS IS
PRACTICABLE

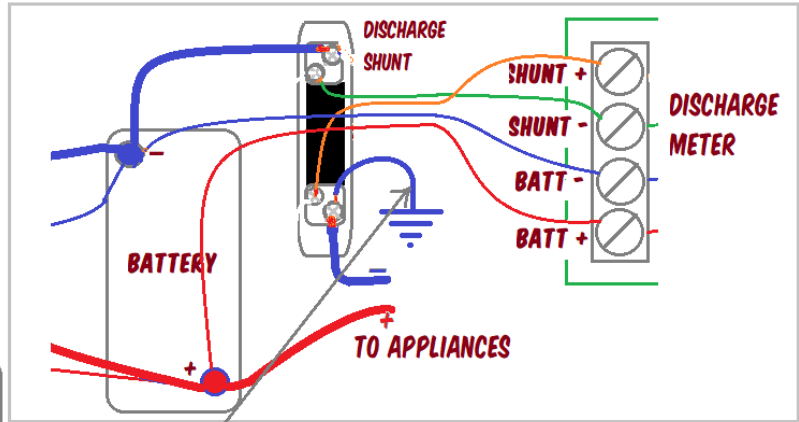

ALTERNATIVE CONNECTION IF DISCHARGE METERING
USED AS WELL.

TO APPLIANCES

VEHICLE METALWORK CONNECTION (IF USED)