

148\*105MM  
100铜板  
骑马钉

### ■ User Warnings

1. Avoid exposing body or eyes to UV-C light directly.
2. Please pay attention on water collection tray if it is full please clean it prompt.
3. Please keep the UV-C bulb clean to ensure the effect of sterilizing.
4. The mist inside will be the reason of occurring malfunctions.
5. Please use dry cloth on device for cleaning.
6. Please do not use alcohol, oil or any corrosive liquid for cleaning.
7. Never use this device directly on animals! This device is for the sole use of non-living items.
8. This product is not a toy, please store and keep it out of reach from the children.
9. When in sterilizing, please do not move or shake it.
10. The Ventilating hole is reverse of the product, so please keep the hole flowing.



## UV Toothbrush Sanitiser User Manual




### ■ Introduction

UV-C Lighting technology is effective in destroying DNA cells of different microorganisms, killing epidemic germs, bacteria and fungus.

It protects your health by preventing you from damages brought by contracting hepatitis, pneumonia, and influenza. We hope you enjoy using this innovative product and the peace of mind that comes with it. Please check the package after purchase to ensure all components are included.

### ■ Introduction

1. Cover
2. UV-C Bulb
3. Toothbrush pedestal
4. LED Indicator
5. START Button
6. Water collection tray
7. Tooth past pedestal
8. Ventilating hole
9. Wall mount hole
10. DC Jack
11. DC Adaptor (Accessory)

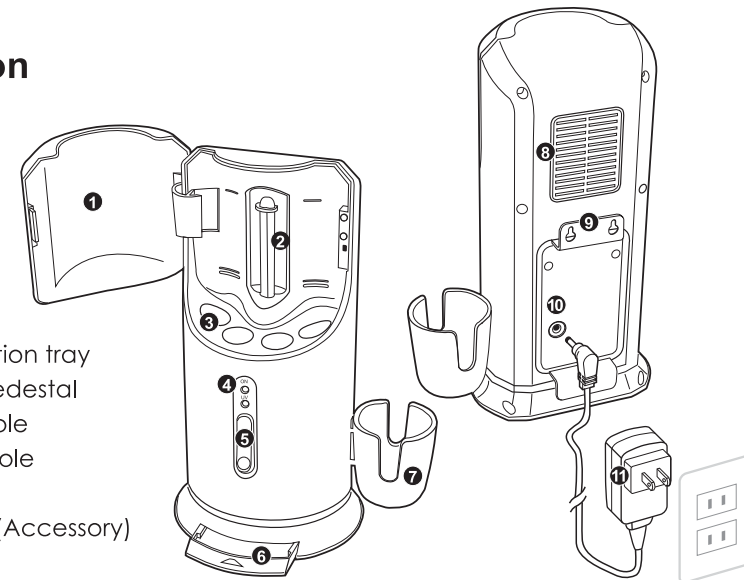

p1

p2

### ■ Specifications

Dimension	L21 1/2" x W8 1/3" x H11 1/2" (inch) not included toothpaste stand
UV-C Lamp	1.5W DC Lamp
UV-C Wavelength	253.7nm (Ozone free)
Power Supply	Adapter Input : AC100-240V    Output: 6.0V 500mA
Sterilizing Modes	Auto Mode: 10 minutes per 3 hours    Prompt Mode: 5 minutes
Weight	332g (without adaptor)

### ■ Feature

1. The 99% bacteria and virus on the surfaces will be eliminated if expose the UV-C light.
2. Tow sterilizing mode: Prompt sterilizing mode and Automatically sterilizing mode.
3. The UV-C light will turn off automatically if open the cover to prevent to shine the person directly.
4. It is available to put 4 toothbrushes and 1 tooth paste.
5. Two types for placing: Mounted on the wall or Stand on the desk.
6. Adopting high reflected materials to add the antiseptic effect.
7. Translucent cover, you can see the sterilizing process clearly.
8. Closed design to avoid the dust into.

p3

p4

### ■ Operating Instructions

■ Please place the product on a stable surface or use the parts to fix the product on the wall.

#### 1. Turn on : (Default setting is AUTO mode)

Firstly, please connect the adapter with DC jack and plug. Secondly, please press and hold "START" button for 3 seconds. Then the red indicator will light on.

#### 2. Automatically sterilizing mode :

The system will enter the "Auto Mode" directly for sterilizing 10 minutes per three hours. When in sterilizing the Green indicator will light on.

### ■ Operating Instructions

#### 3. Prompt sterilizing mode :

While in "Auto Mode", press the "START" button again, the system will enter "Prompt Mode". The Red and Green indicator will light at this moment. After sterilizing for 5 minutes, the Green indicator will be off automatically and the system will be back to "Auto Mode".

#### 4. Turn off :

When in operating, press and hold the "START" button for 3 seconds. Then the power will be turned off.

p5

p6

### ■ Operating Instructions

#### 5. UV-C Lamp Safety feature:

While in sterilizing, the UV-C light will be automatically off and Green indicator light will flash if opened the cover. The UV-C light will start to work once the cover is closed.

### ■ Operating Instructions

#### 6. The description of LED indicator light:

LED indicator	Action
Red light on	Automatically sterilizing mode (ready to work)
Green light on	In sterilizing (UV-C light turns on)
Green light flashes	Pause sterilizing
Green light off	Stop sterilizing

p7

p8