# **POWERTECH**

# Car Cup Charger with 15W Wireless Charger



User Manual HS-9064

#### **Box Contents:**





### **Product Diagram:**




#### Installation:

- 1. Unscrew the adjustable mounting ring knob from the phone cradle. Place it over the end of the cup mount.
- 2. Attach the phone cradle to the cup mount and tighten the adjustable mounting ring knob so the cradle and cup mount are secured tightly.



3. Place the cup mount in the cup holder of your car. Use the adjustable locking knob at the base of the cup mount to expand the size of the cup mount. Adjust until it fits securely in your cup holder.

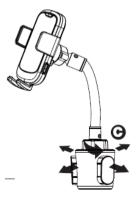

#### Power:


- 1. Insert the USB power cable in a 5VDC/9VDC USB car charger (not included).
- Insert the USB-C plug in to the USB power socket of the phone cradle.
- 3. The LED status indicator will turn green once it has been powered on.

Note: It is suggested to use a Qualcomm® Quick Charge™ 3.0 USB car charger for fast charging. Please check to see if your device supports quick charge otherwise it will charge at 5W.


#### **Operation:**

#### **Charging:**

1. Press the lock/release button to open the phone clamps.



Slide down the adjustable holder located at the bottom of the cradle and slide your smart phone into the cradle.

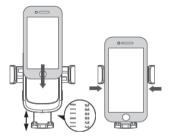

3. The LED status indicator will turn blue once charging has started.

Note: You may need to change the position of the adjustable holder at the bottom of the cradle. The wireless charging pads are in a different location depending on the type of smartphone.

## **Troubleshooting:**

Problem:	Solution:
Will not charge	Ensure your
device	smartphone supports
	Qi wireless charging
	Ensure the mobile
	device is placed on
	the charging pad
	correctly and adjust
	the adjustable foot
	holder accordingly
	Restart your mobile
	device and wireless
	charger

device	case as it may be
	interfering with the
	wireless charger
Will not power on	Ensure the USB
	cable is connected
	properly to a suitable
	USB car charger

Take off your phone

Will not charge

#### Safety:

- 1. Do not place any metal objects, magnets, magnetic stripe cards or metal phone cases between the mobile device and the charger as it may not work properly.

  2. Keep the wireless charger at least 20cm away from any implantable medical devices such
- as a pacemakers or cochlear, etc. to avoid interference with the medical device
- medical device.
- Do not open the case of the wireless charger to avoid damage and injury.

- 4. Keep the wireless charger away from high temperatures as it may cause damage to the speaker and battery.

  5. Do not expose the wireless
- 5. Do not expose the wireless charger to water, moisture or liquids to prevent the unit from damage.

## Specifications:

Input: 5VDC @ 2A, 9VDC @ 1.7A Voltage Output: 5VDC, 9VDC Current Output: 5V @ 1A (5W) 9V @ 0.8A (7.5W) 9V @ 1.1A (10W) 9V @ 1.66A 15W)

Output Power: 5W/7.5W/10W/15W

Charging Efficiency: 73% (Max)

Charging Distance: ≤7mm

Battery: 3.7V Li-ion, 60mA

Battery Standby Time: Up to 30

Days

Dimensions: 287(H) x 90(Dia)mm

Distributed by:

Electus Distribution Pty. Ltd. 46 Eastern Creek Drive, Eastern Creek NSW 2766 Australia

Ph: 1300 738 555 Int'l: +61 2 8832 3200 Fax: 1300 738 500

www.electusdistribution.com.au