

Premium 8 Zone Wireless Alarm Kit

INTRODUCTION

The wireless alarm system is designed to protect your home. It is a simple to use, easy to install unit. No special tools or training are required, all fixings are included.

IMPORTANT – Please read this manual carefully, in full, before commencing installation. You will find installation easier if you follow these steps in the sequence shown.

SAFETY

Before proceeding with the installation, please note the following safety warnings:

DO NOT connect the mains supply directly to the products, this will cause permanent damage to the products.

Control panel, Adaptor, Movement Detector and Door/Window contact are for indoor use only. Avoid mounting location which can expose these product to splashing or dripping liquid.

Always follow the manufacturer's advice when using any tools power tools, ladder/steps,. using steps or ladders, and wear suitable protective equipment (e.g. safety goggles) when drilling holes, etc. The use of ear defenders are advisable when working in close proximity to the External Siren or the Control Panel's Siren when the front panel cover is removed due to the high sound level produced by it. Before drilling holes in walls, check for hidden electricity cables and water pipes. The use of a cable/pipe locator is advisable if in doubt. Batteries (battery pack or batteries installed) should not be exposed to excessive heat. Danger of damage to the unit may occur if battery is incorrectly replaced. Replace only with the same or equivalent type. (Do not mix batteries type).

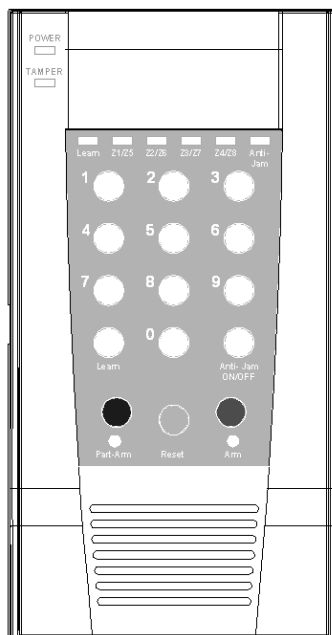


Table of Contents :

Section 1 - Overview of System	3
Section 2 - Planning your Installation	4
Section 3 - Installing your System	8
Section 4 - Using the System	16
Section 5 - Maintenance	19
Section 6 - Extending the System	19
Section 7 - Specifications	20
Section 8 - Troubleshooting Guide	21
Appendix A LED Alarm Indications	22
Appendix B Zone-Location Table	23

HEALTH WARNING:

The Remote Control unit is fitted with a Coin Cell (CR2032) battery. When removing this cell, do not place in your mouth as this could impair your health. Keep out of reach of young children to prevent risk of choking.

Section 1 – Overview of System

This wireless alarm system is based on wireless radio technology to give exceptional levels of protection and reliability. It has the ability to control up to eight detectors, three remote keys and one wireless siren.

1.1 – Kit Contents

Control Unit (CU) (One Unit)

This is the heart of the system. It receives signals from detectors, accepts inputs from user and activates warnings such as siren and LED.

Wireless Magnetic Contact Detector (MC) (One Pair)

Uses a magnetically operated switch to sense the opening/closing of door or window.

Wireless Movement Detector (PIR)(One Unit)

The PIR uses Infra-Red technology to sense the body heat of a moving person. One unit can cover an entire room.

Wireless External Siren(One Unit)

Gives audible and visual indication of an alarm condition.

Other accessories

External AC adaptor(One Unit)

4 x D-Cell Alkaline battery pack (One Unit)for Wireless External Siren

The CU is pre-programmed to recognize the PIR/MC/Remote Key/Siren for immediate operation after power supply is being connected properly.

Tools required :

- Large & small flat bladed screwdrivers and cross point screwdrivers
- Hammer
- Power drill
- Drill bits – 4mm & 8mm
- Wire cutters and wire stripper
- Eye protection (recommended when using a power drill or hammer)

1.2 – System Features

- Detector /Key /External Siren learning – Every wireless device (detector, Key, External Siren) contains an unique identification code. During installation, the CU will learn which devices belong within your system by receiving coded radio transmissions from each detector.
- This system can control up to eight detectors (every zone can control one wireless detector.) If the system is triggered, the CU will indicate which zone the alarm occurred.
- The wireless alarm system has three modes: OFF, Part-Arm, ARM; when entering ARM or Part-Arm mode, the user has 30 seconds to leave the monitored areas without triggering the alarm.

1.3 – Explanation of Terms

Zone – A logical area that is monitored by a detector.

Disarmed – (Standby mode) – This is the normal state of the system when the house is occupied. Enter your four-digit user PIN code to return to OFF state.

Full Alarm – (ARM state) – The CU will sound full alarm (internal siren) when it receives alarm signals.

Part Arm – (Home state) – Arming the system so that certain zones omitted (i.e. will not trigger an alarm). It is typically used to omit the upstairs zones at night when you sleep.

Entry/Exit Zone – The CU recognize MC zone as entry and/or exit zone.

OK Beep – Rapid double tone; it indicates correct operation.

Error Beep – Long single tone; it indicates incorrect operation.

Anti-Jamming –Detect if jamming exists or not. it can be enabled/disabled


Section 2 – Planning your Installation

2.1 – Location of components

Control Unit (CU) – Location

In choosing a suitable location you should bear in mind:

- The need to reach the CU easily, within the 30 seconds, when entering and leaving the premises, ideally passing only one detector.
- The CU should not be visible from the exterior of the protected premises.

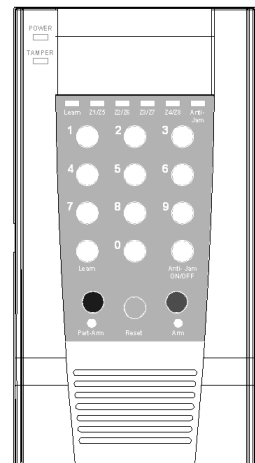


- Reception of radio signals can be affected by the presence of metal objects within a few feet of the CU. (E.g. mirrors, central heating radiators, garage doors and cars parked in garages on the opposite side of the wall. Avoid any location which is near (within 60cm) to these or any other large metal objects.

Having chosen the location, do not mount at this stage.

Door/Window Contact Detector (MC) – Location


- These parts contain a radio transmitter and should not be sited near to large metal objects.
- Contains two parts. The larger one (the actual detector) contains the batteries and the electronics. The smaller part is simply a magnet inside.
- Designed to detect a door or window opening. The detector is usually mounted next to it on the door or window. For optimum radio range, they should be mounted as high as possible.
- In most applications, it is fitted to the front door.

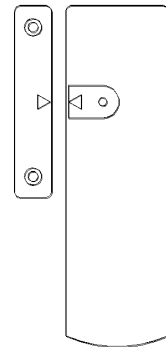

Having chosen the location, do not mount at this stage.

Movement / Passive Infrared Detector (PIR) – Location

- The detector should not be mounted near to large metal objects or on metal surfaces. It needs to be mounted on a wall or in corner at a height of approximately 2-2.5 meters for the best general coverage in an average room. The detector has been designed to avoid false alarms, nevertheless, it is best to avoid installing the unit where it is facing directly at sources of heat such as fires and boilers and always try to avoid facing at the window. A PIR can look at a radiator but should not be sited above it.

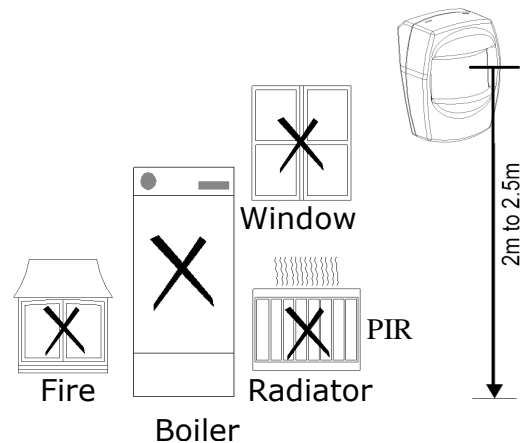

- Do not site a PIR where its field of view may be obstructed (e.g. by curtains.) Also, note that PIR works best when sensing a movement across rather than along their detection beams.
- Allowing for pets – The PIR senses moving body heat. In some cases, the movement of pets may also be detected. To overcome this it is recommended that the pets are kept in one specific room out of sight of a PIR when the system is armed. If required, additional MC (available as accessories) can then be used to protect the doors and windows of the room (see section 6 – Extending the System.)

Having chosen the location, do not mount at this stage.


2.2 Planning the location of system components

Example of a domestic layout

The 2 sample layouts below are intended as guides only but demonstrate two examples of how a house can be protected with the system.

Sample 1:


Zone Number	Area	Zone Number	Area
1	Front door	5	Area of the Control Panel
2	Back door	6	Bedroom 1
3	Window	7	Bedroom 2
4	Living room	8	Bedroom 3

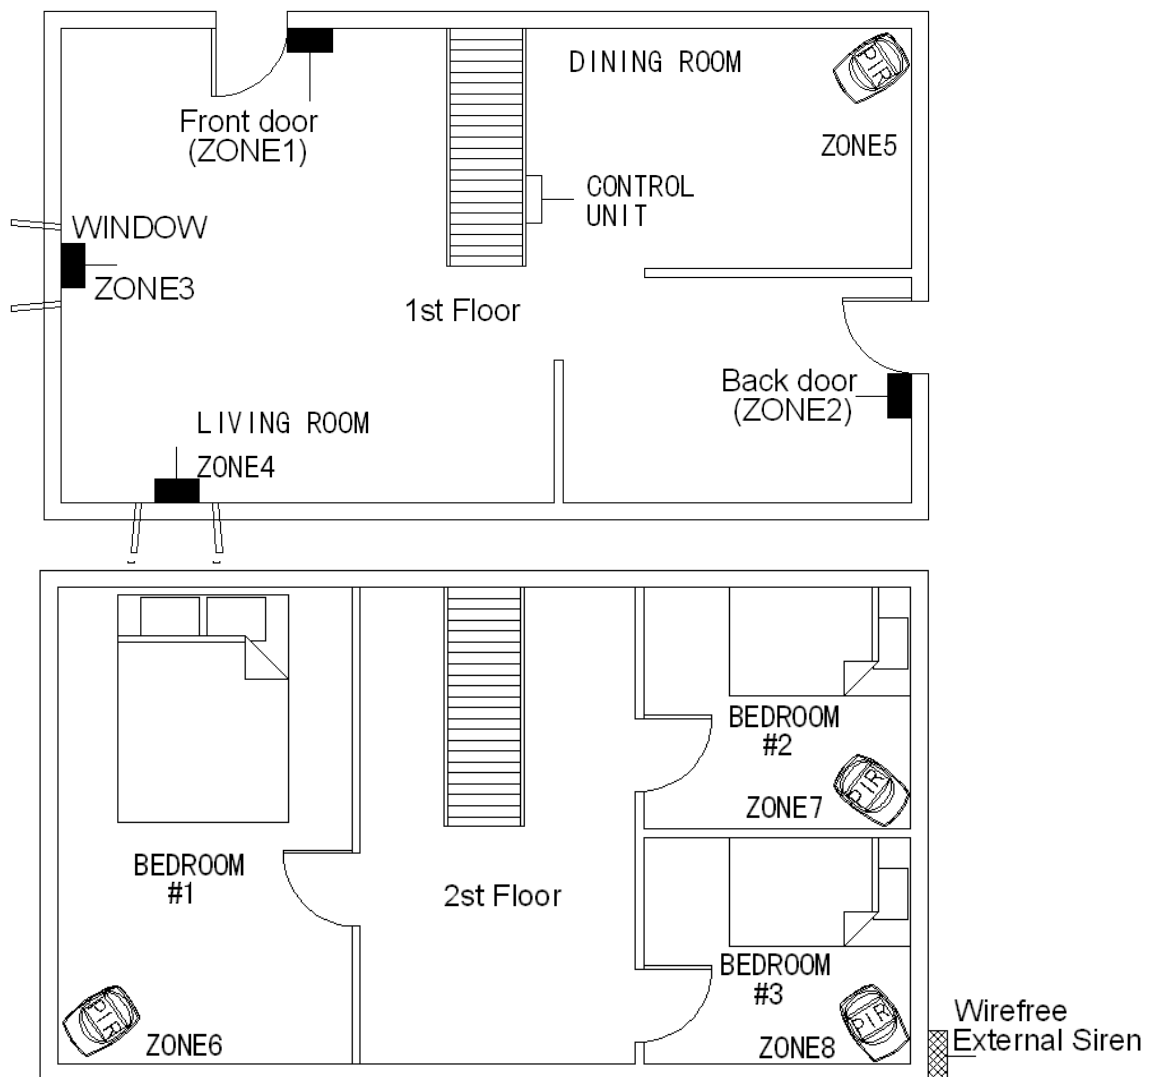

The PIRs have been separately placed in bedroom #1, bedroom #2, bedroom #3, and the area where the Control Panel is installed, to protect these areas. The Door/Window Contact Detectors have been positioned to protect the front door, back door and windows on the 1st floor.

Sample 2:

Zone Number	Area	Zone Number	Area
1	Front door	5	Area of the Control Panel
2	Back door	6	KITCHEN
3	Window	7	Bedroom 1
4	Window	8	Bedroom 2

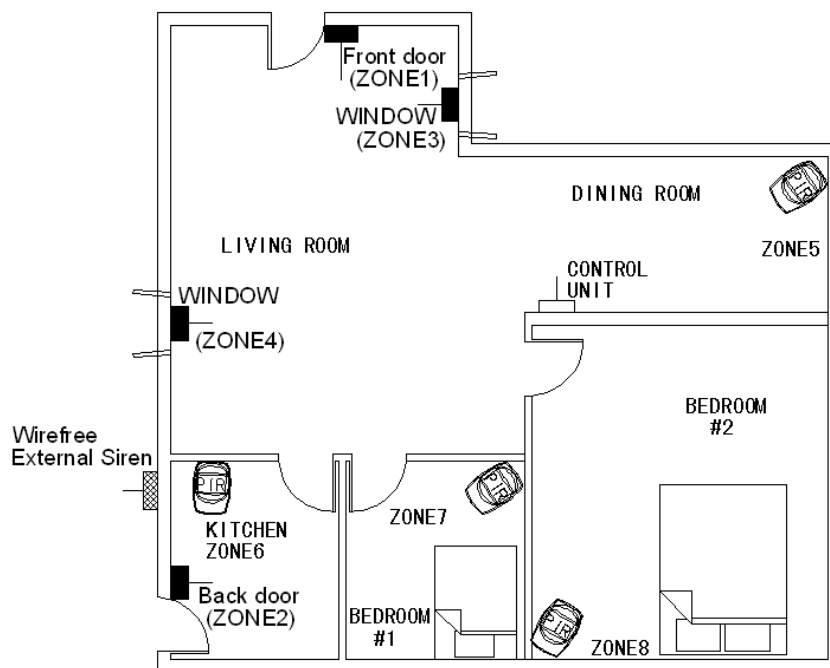

The Zone 5 PIR has been placed in the Dining room to protect this area where the Control Panel is installed. The Zone 6, 7, 8 PIRs have been separately placed in the Kitchen, Bedroom #1 and bedroom #2 to protect these area . Zone 6, 7 and 8 are set as “Home-Bypass zone” so that these PIRs are disabled when the system is set to “Part Arm” mode. The Door/Window Contact Detectors have been positioned to protect the front door, back door and windows.

When the system is installed for the first time or any further detectors are learned to it at any stage, please follow sections 3.1 to 3.5 explained in this manual to prevent the tamper function from unnecessarily triggering the alarm of the CU during installation.

Summary of the steps:

1. Install and power ON the CU
2. Power up the Wireless Devices and link to the CU
3. Power OFF the CU
4. Install the Detectors in their final locations
5. Install the backup battery in the CU and finally power up the CU



Section 3 – Installing your System

3.1 – Installing the CU

- Remove and retain the two holding screws from front cover of CU and carefully hinge off the front cover.


Fitting


- Place the CU base mounting plate on the wall at the chosen location. Mark and drill 4mm holes for the two mounting screws. Insert wall plugs and have the top mounting screw screwed in to protrude by about 5 to 6mm before hanging the CU base mounting plate on wall.
- Align the CU base mounting plate to vertical position before final tightening of both mounting screws.

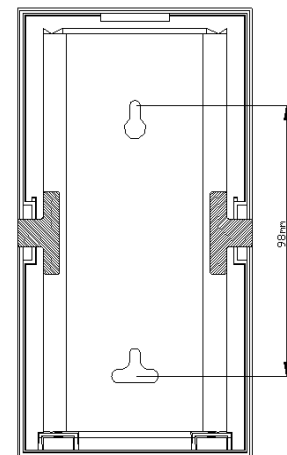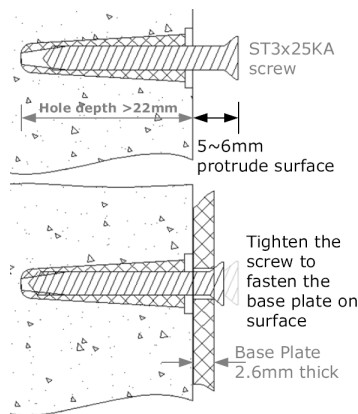

Powering the CU

- Wire up the Main Power Adaptor to the CU, but DO NOT plug the adaptor into the main supply at this stage..
- Do not install the 9V back up battery (provided with this kit) at this stage, but note its installation position for later.
- Put back the front cover carefully and secure it with the two holding screws, complete with the screw covers (plugs.)
- Power up the Main Power Adaptor to power the CU. The POWER LED will light up and the TAMPER LED will flash since no backup power is installed yet
- If the alarm sounds then enter the factory User PIN 1234 to silence the system

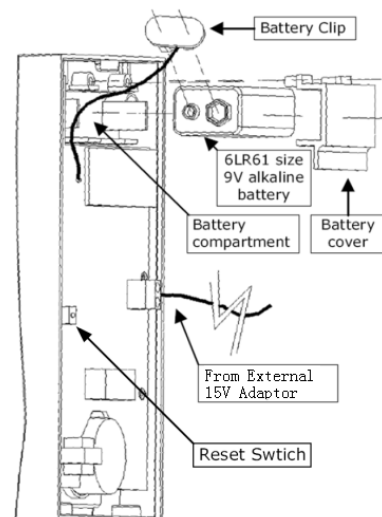

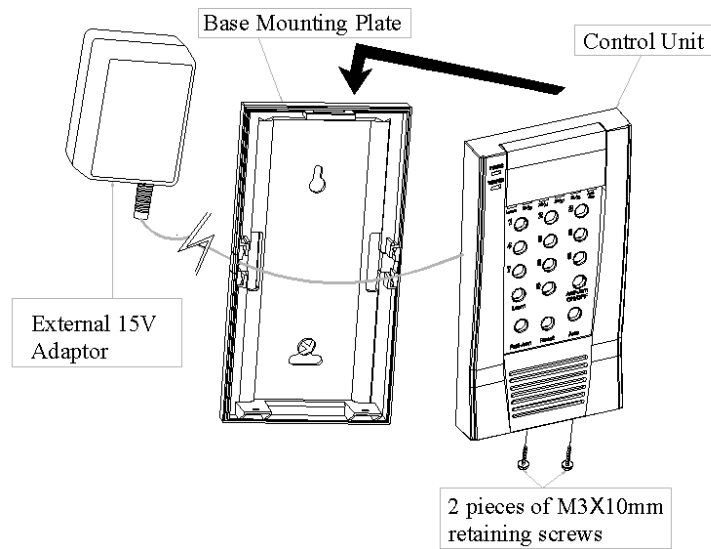


WARNING: The CU must never be operated from the mains with the front cover opened. The user PIN code is factory set to 1-2-3-4. If the system sounds during the installation, pressing the factory set code of 1-2-3-4 will silence the system.

3.2 – Power up the Wireless Devices and learning to the CU

The wireless alarm system uses advanced radio technology that under most circumstances will give more than sufficient transmission range. Before fixing the control unit and detectors in their selected install position, it is recommended to learn each wireless detector to the CU. Please follow the procedure below:


Powering up the Wireless Magnetic Door/Window Contact Detector(s):

- i. Remove the screw from battery compartment cover.
- ii. Insert two LR03 “AAA” size 1.5V alkaline batteries (not included with the kit) in correct polarity as shown.
- iii. Replace battery compartment cover and secure its screw.
- iv. Replace the detector front cover and refit retaining screw.

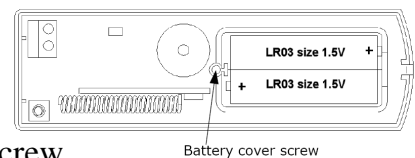

Powering up the Wireless Remote Control:


- i. The Remote Control is supplied fitted with a battery isolation tab. Pull and remove this power the Remote Control

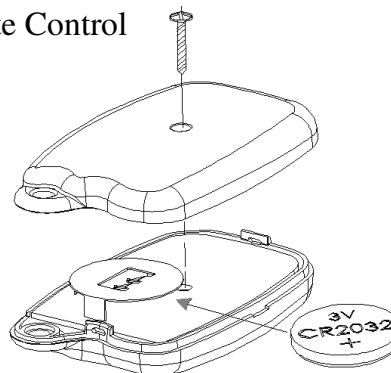

Powering up the Wireless Siren :


* The use of ear defenders is advisable at this stage *

- i. Separate the Siren's front cover from the Siren's base.
- ii. Connect the battery pack to the terminals on PCB and tie up the battery pack firmly on Siren's base as shown.. The Siren's LED will flash to indicate powered up. Refit the battery cover taking care not to press and release the tamper switch located on the rear of the siren's back plate to prevent the Siren from triggering an alarm.
- iii. If the tamper switch is accidentally press and released then move the power switch to the 'OFF' position as shown below to silence the alarm. However, move the switch back to 'ON' again ready for it to be learned by the Control Panel:

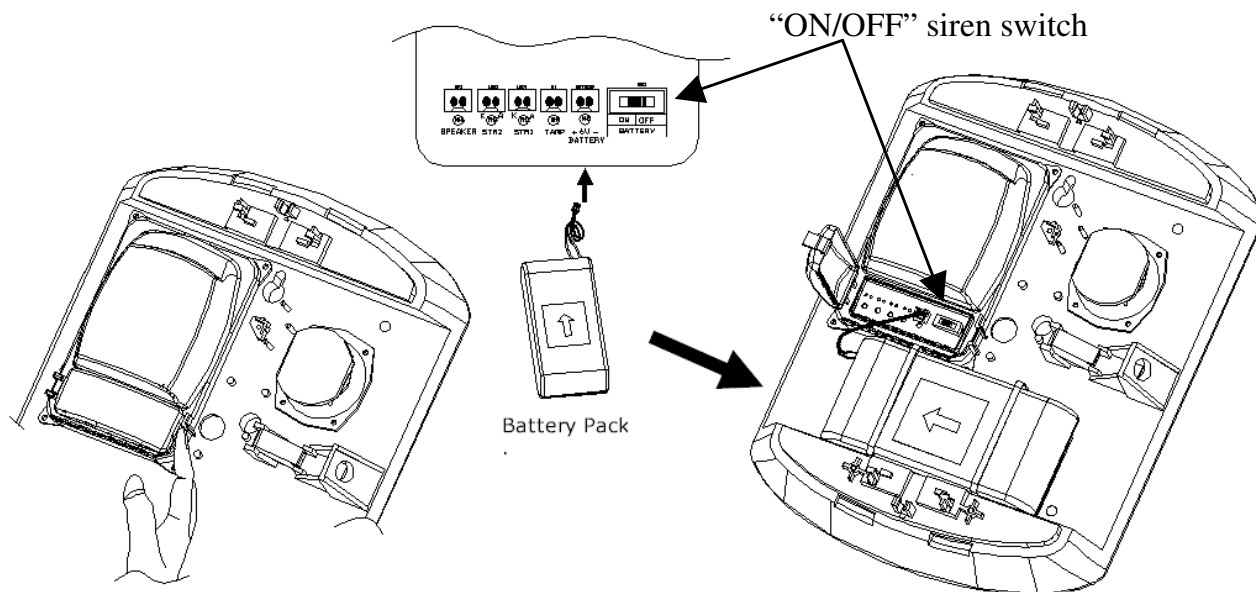

Powering up the Wireless PIR Detector(s):

- i. Remove battery cover and insert two LR03 "AAA" size alkaline batteries in correct polarity as shown.
- ii. Replace battery compartment cover.


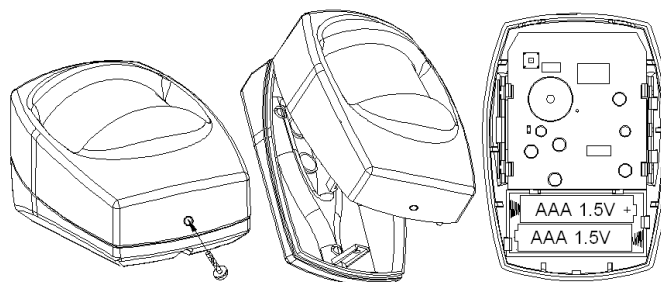


When the PIR is first powered up it will take 2 minutes for it to warm-up before it can be linked to the CU.

Note : After the first 2 minutes, the PIR will enter a test mode period for the next 15 minutes. During the test mode period, the PIR will constantly detect for movement so that it gives enough time to link it to the CU. When this period has expired, after the PIR detects any further movement, it will go to sleep and not detect any movement for 2 minutes. This is just an energy saving feature.

Linking the detectors to the CU.



1. Press and hold the “Learn” button for over 5 seconds in standby mode to enter learn mode. The CU will beep twice to confirm and the learn LED will turn on.
2. Trigger the device within 10 seconds ensuring it is kept at least 0.5m away from the CU. To trigger:
 - 2.1 **a magnetic contact**, activate the MC detector by moving the magnet away (greater than 40mm) from the arrow near the red LED.

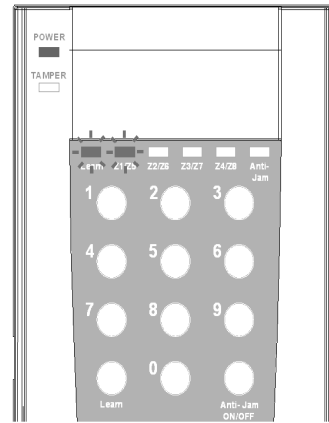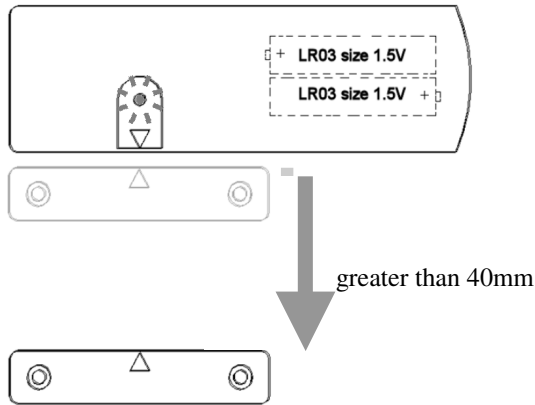

Learn MC

When a MC Detector has been learnt successfully, Z1, Z2, Z3 or Z4 zone LED (depending on which next zone is unprogrammed) will be constantly lit.

- 2.2 **a PIR Detector**, trigger the PIR detector by simply moving your hand in front of the detector.

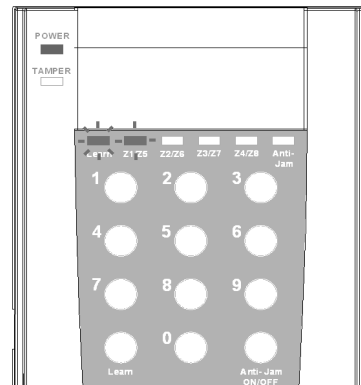
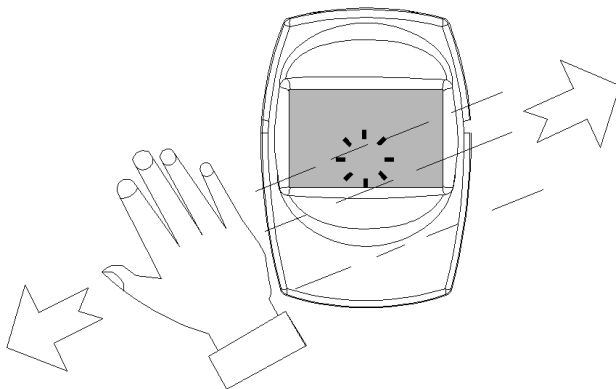


Learn PIR

When a PIR Detector has been learnt successfully, Z5, Z6, Z7 or Z8 zone LED (depending on which next zone is unprogrammed) will flash.



* The use of ear defenders is advisable at this stage*

- 2.3 **a Siren**, press and release the tamper switch once located on the rear of the Siren. The siren will trigger an alarm. After the Control Unit confirms the siren is linked (both 'Learn' and 'Z4/Z8' LEDs will flash together), silence the siren again by moving its power switch to 'OFF' again before installing it on the wall (see diagram on page 10).

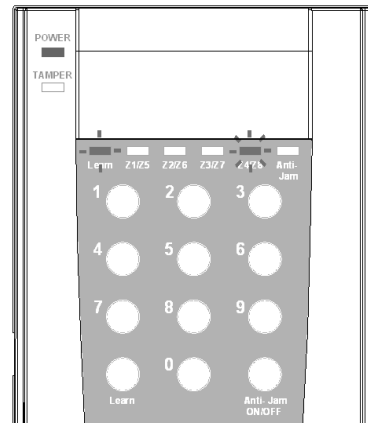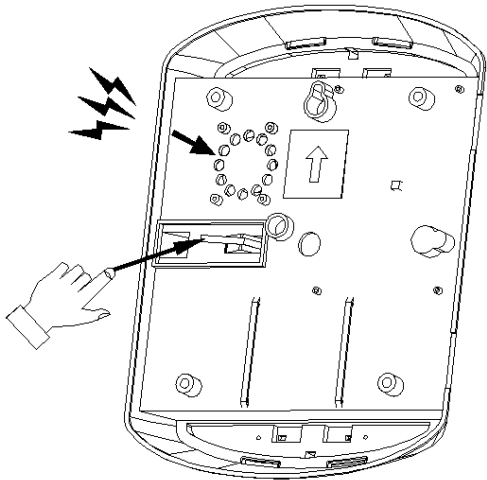

Learn siren

- 2.4 **a Remote Control**, press and release the disarm button once.

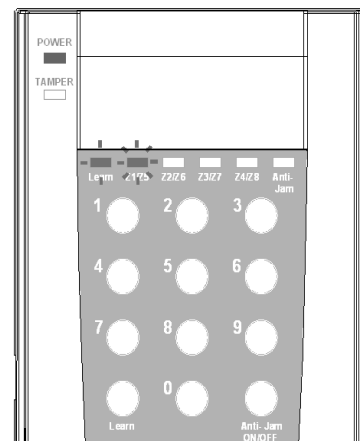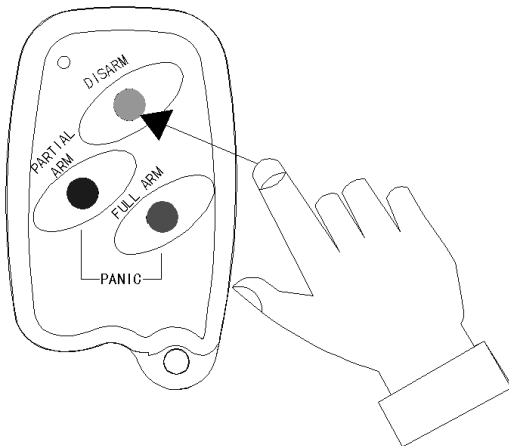

Learn remote key

When the device is triggered, the first available unprogrammed zone LED for that device will light up on the CU. The CU will beep twice to confirm the device has been learnt and the corresponding zone LED will light up red. (See diagrams below to show which zone LEDs correspond to which device when learnt). If the device has not been triggered in 10 seconds then re-enter programming mode again (press and hold the "Learn" button for over 5 seconds)

3. Trigger the next device within 10 seconds to learn it and repeat for additional devices. If the system has reached its maximum capacity and no more devices can be added. The CU will not beep any more.
4. When you have finished learning the devices, all zone LEDs will turn off after 10 seconds which indicates successful programming. After this the system returns to standby mode.

Summary of the learn mode LED state

Learn mode state	Learn Red LED	Z1/Z5 Red LED	Z2/Z6 Red LED	Z3/Z7 Red LED	Z4/Z8 Red LED
Learn Wireless MC	ON	ON	ON	ON	ON
Learn Wireless PIR	ON	Flash	Flash	Flash	Flash
Learn Wireless Remote Key	Flash	ON	ON	ON	
Learn Wireless External Siren	Flash				ON

If you have any additional detectors, make sure they are programmed to the CU before location testing and installation.


3.3 – Powering down the CU

Turn OFF the Main Power Adaptor so that the POWER LED on the CU is OFF.

3.4 – Installing your Detectors

a) Wireless Magnetic Door/Window Contact (MC) Detector

- i. Choose where on the door or window you wish to locate the unit. The transmitter unit is usually mounted on the frame and should be positioned such that the red LED is close to the door or window.
- ii. The magnet should be fitted as shown with one narrow edge level with the flat top on the detector housing. The gap between the magnet and detector should not be more than 8mm with the arrow on the magnet pointing directly towards the arrow on the detector.
- iii. If there is insufficient room to mount the detector on the frame, then it can be fixed to the door or window instead (with the magnet fixed to the frame alongside it.) For reliable operation, the front face of the magnet should be no more than 8mm from the front face of the detector. In some cases, it may be necessary to place packing behind the magnet or detector to achieve this.

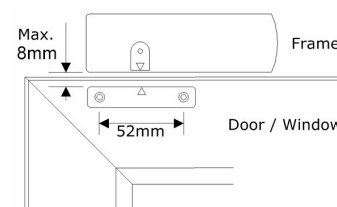


Fitting

- iv. Remove and retain the screw from the bottom of the detector. Use a small drill or screw driver to make two fixing holes in the back plate as a template. Use the backplate to mark and drill two 4mm fixing holes 80.5mm apart. Fix the back plate in position using the screws provided.
- v. If you wish add an additional Wired Magnetic Door/Window Contact Detector, then connect the wiring to the two hard wire terminals provided.

- vi. Locate the detector on the back plate and replace the retaining screw at the base of the unit.
- vii. Align the magnet as described above and fix in position with the two screws provided.

Note: If you are fitting the unit to a PVC door or window, you may wish to use **STRONG** double-sided tape to fix both detector and magnet in position.

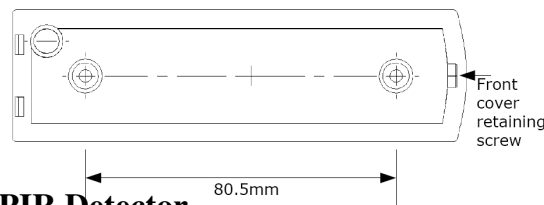


b) Wireless Movement PIR Detector

- i. Remove and retain the screw from the bottom of the PIR and lift off the cover.

Fitting

- ii. If you are fitting the PIR in a corner, use mounting points “A”. If you are fitting the detector on to a flat surface, use mounting points “B”. The mounting points are shown by indentations in the plastic molding. Use a small drill to create two fixing holes at the mounting points.
- iii. Hold the base of the PIR in the chosen position, ensuring that the front of PIR will face towards the centre of the protected area, and mark and drill two 4mm fixing holes in the wall. **DO NOT** drill holes with the PIR in position – the resulting dust may damage the PIR and prevent it from operating. Secure the PIR to the wall using two screws (25mm countersink) and the wall plugs.
- iv. Replace the electronic module into the retaining clips, ensuring that it is correctly positioned and firmly seated.

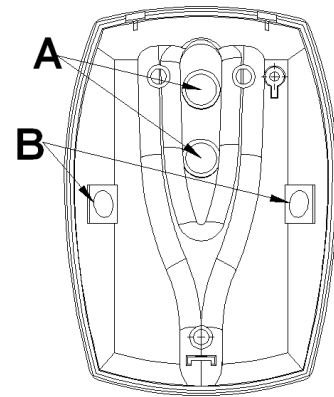

c). Wireless External Siren


Fitting

- i. Mount the Siren base on to the wall using screws or fixings that are appropriate for the construction of the building. Keyhole slots and slide mount are provided to assist with positioning. It is recommended that all 3 fixing points are used.
- ii. Once mounted, move the Siren’s power switch to ‘ON’ again for normal operation at this stage (see diagram on page 10).

Tamper protection fixing

- iii. The tamper switch will touch against the wall, but will not ‘click’ in position at this stage, provided the wall is a flat surface.
- iv. When the front cover is fitted and the cover screw moves further in , it will push the wall tamper switch down against the wall making it ‘click’. This screw when fully tightened, provides front cover and wall tamper protection.

* Note each time this screw is removed, an alarm will be triggered by the system. Silence the alarm by entering the user PIN code at the Control Panel (factory set PIN 1234).*

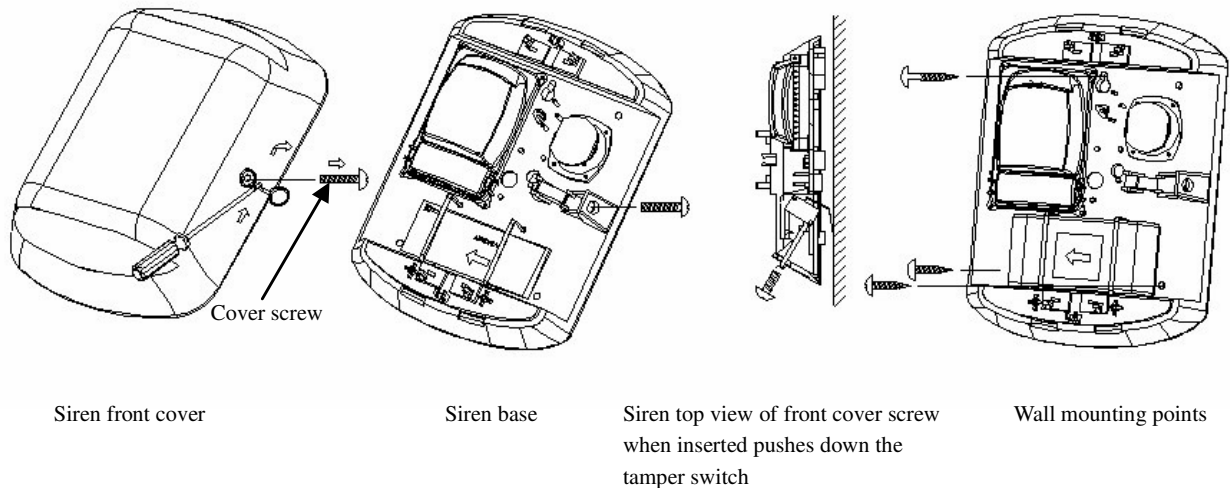

3.4.1 – Movement Detector/PIR Final Setup

IMPORTANT – To extend the battery life, wireless PIR detectors are designed to detect once only before entering a “Sleep” condition for two minutes during which the unit will not trigger. Any movement seen by the PIR during this period would cause “Sleep” conditions to be extended by a further two minutes. Therefore, a wireless PIR which is constantly sensing movement, such as a person walking around a room, may appear to be non-functional; you will find that the PIR will detect normally again following a two minute period with no movement present.

The wireless PIR detector has a jumper link, which activates/deactivates the LED. This LED can be used when performing a walk test in the chosen installation area to make sure you are happy with detection coverage. To increase battery life, pull this link off after completing the walk test. The LED will be off when the detector is triggered during arm. Otherwise, leave the link on, the LED will be on when triggered.

3.5 – Powering up the CU

- 1) While the CU is powered OFF, remove the CU front cover again (see page 9)
- 2) Disconnect the battery snap connecting the battery holder. Take out the battery holder.
- 3).Connect the 9V Alkaline PP3 back up battery to the battery clip and place the battery into its compartment section.
- 4).If the alarm sounds then enter the factory User PIN 1234 to silence the system
- 5) Refit the battery cover. Refit the CU cover to the base.
- 6) Power up the Main Power Adaptor again.

The CU will return to standby ready for operation and the POWER LED will remain ON.

Section 4 – Using the System


4.1 – Control Unit

When the CU is powered up, it will remain in standby mode. The PIN code can also disarm the system and put it into standby mode.

a) Changing the User PIN code

The User PIN code is factory set to **1234**. It is highly recommended to change the User PIN code immediately after completing the basic installation.

- i. Set the system into “standby mode if not already set.
- ii. The following is a button sequence example of changing User PIN code to 6502:




Two short beeps from CU confirm the operation. A long beep shows the request has not been accepted or the waiting time between two buttons has exceeded 5 seconds.

- * User PIN code of 0000 (four zeros) would lock this function. Pressing the reset switch reverts the User PIN code to 1234 and unlocks this function.

b) Clear all programmed zones and reset User PIN code to default 1234

Pressing the reset switch inside the CU clears all programmed zones, keys and external siren and reverts the User PIN code to 1234. It is necessary to open the CU cover by removing and retaining the two M3x10mm retaining screws at the bottom of the CU (please see section 3.1 for details.)

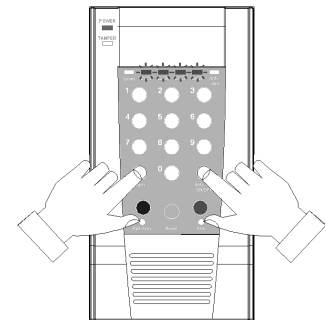


c) Panic/Attack Alarm from control unit

Activated by pressing “Learn” button together with “Anti-Jam On/Off”, the system will sound the alarm immediately for the preset siren duration (3 minutes at the factory setting.) All four zone LEDs would be illuminated. Enter User PIN code to return to standby mode. Press “Reset” button to clear the zone LEDs.

d) Panic/Attack Alarm from Remote control key

Activated by pressing “PARTIAL ARM” button together with “FULL ARM”, the system will sound the alarm immediately for the preset siren duration (3 minutes at the factory setting.) All four zone LED would be illuminated. Pressing “Disarm” button will return it to standby mode. Press “Reset” button at the CU to clear the zone LEDs.

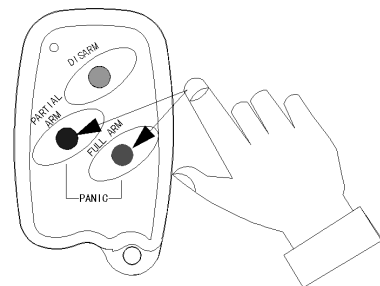

e) Silencing the system

- i. When the alarm is triggered, enter the User PIN code at the CU or press “DISARM” button at the Remote key to cancel the alarm and return to standby.
- ii. If the alarm has not been cancelled, the alarm sound will stop by itself after the preset siren duration time (3 minutes at the factory setting,) and the alarm hold indication (zone indicators) of the zone1 to zone 4 will be illuminated, zone 5 to zone 8 will be flashed. Enter User PIN code at the CU to return or press “DISARM” button at the Remote key to return to standby mode, press “Reset” button to clear the zone LEDs.

f) Arming the alarm system while exiting the house

Press “Arm” button at the CU or press “FULL ARM” button at the remote key, close the door and leave the house within the exit delay time (30 seconds at factory setting,) both PIR and Magnetic Contact are activated for protection after the exit delay time elapsed.

Note: The CU will suspend the exit delay (30s) count down if the door is opened or a PIR is triggered.

g) Part Arm the alarm system while at home

Press “Part-Arm” button at the CU or press “PARTIAL ARM” button at the remote key, close the door and leave the house within the exit delay time (30 seconds at factory setting,) both PIR and Magnetic Contact are activated for protection after the exit delay time elapsed. When omitted zones (zone 6 to zone 8 at factory setting) are triggered, they will not activate the alarm. Part-arm can also be used when you are sleeping upstairs at night and you wish to protect the ground of your property provided the PIRs of Zones 6-8 are installed upstairs.

When the system is part-armed. Zone 5 PIR is used to protect the area next to the Control Panel with a delay period (30 seconds at factory setting)

Note: If a door/window where a magnetic contact detector is installed (zones 1-4) is opened, the alarm will activate instantly.

h) Disarm the alarm system while entering the house

When you open the entrance door, the count down warning sound (entry delay time) will be started. Enter your four-digit User PIN code at the CU or press “DISARM” button at the remote key within the delay time (30 seconds at factory setting,) system will return to standby mode. At any time, the User PIN code can be entered to set to the standby mode.

i) Anti-Jamming detection feature


Press and hold the “Anti-Jam On/Off” button for over 10 seconds in standby mode to turn anti-jamming function ON/OFF. The corresponding “Anti-Jam” green LED will turn ON/OFF.

Anti-Jam LED – Green colour (Constantly On means enabled, Flashing means jamming is detected)

4.1.1 Low battery detection

CU:

When the CU's backup battery falls below 7.2V to 7.6V for over one minute, TAMPER LED will flash to show low battery status.

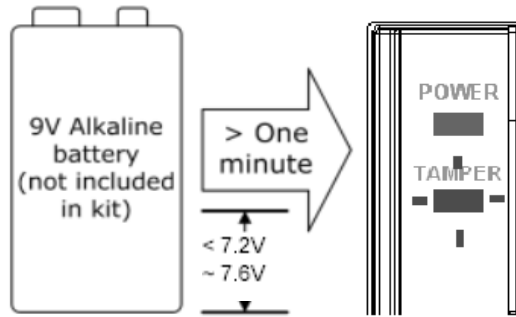

PIR Detectors:

The PIR Detectors have a built in buzzer which will sound in the event of a low battery status. Please replace the batteries within 2 weeks.

Magnetic Door/Window Contact Detectors:

The Magnetic Door/window Contact Detectors have a built in buzzer which will sound in the event of a low battery status. Please replace the batteries within 2 weeks.

When replacing any batteries, ensure you power OFF the CU completely to prevent the tamper function from triggering the alarm. After having replaced any batteries, reconnect the power to the CU.

4.2 – Summary of the detector responses in different mode

Detector		Part Arm mode	ARM mode	Usage
Magnetic Contact	Zone 1	Instant	Delay	Exit/Entry Zone
	Zone 2	Instant	Delay	
	Zone 3	Instant	Delay	
	Zone 4	Instant	Delay	
PIR	Zone 5	Delay	Delay	Protect area far away from Exit/Entry Zone
	Zone 6	Disable	Delay	
	Zone 7	Disable	Delay	
	Zone 8	Disable	Delay	

4.3 – Default settings

Parameter	Ex-factory Value
User PIN code	1234
Entry/Exit delay	30 seconds
Siren Duration	3 minutes

Zone allocation for PIR and MC Detectors	
Zone 1 to 4	Magnetic Contact
Zone 5 to 8	PIRs

Section 5 – Maintenance

Once every 3 months:

Test all detectors.

Additionally, once every two years:

It is suggested to replace all batteries in wireless detectors and the control unit.

Replace with the same type of battery :

PIR Detector: 2 x AAA 1.5V Alkaline batteries

Magnetic Contact Detector: 2 x AAA 1.5V Alkaline batteries

Remote Control: 1 x CR2032 Lithium coin cell

Siren: 4 x D cell Alkaline batteries

Control Unit: 9V PP3 Alkaline battery

When replacing any batteries, ensure the CU is powered OFF completely.

REMARK: It is recommended to replace the 9V alkaline battery in the CU after the AC power is out of service for a period of times.

Section 6 – Extending the System

A number of accessories are available to extend your system to suit your exact requirements. When extending the system, please note the system can take up to 4 wireless Magnetic Door/Window Contact Detectors (in zones 1-4), 4 PIR Detectors (in zones 5-8) and up to 3 Wireless Remote Controls.

Wireless Remote Control – can be used to arm, part-arm, disarm or panic the CU system with an operating range of about 60 meters in open field conditions. Please contact your supplier for more information.

Wireless PIR – easy to install, one unit protects a large area.

Wireless Door/Window Contact – easy to fit, detects opening of a door or window, can be extended by the addition of wired magnetic contact.

Dummy Siren – easy to install, device for deterrent purpose.

Door /Window Contact – This Wired Detector can be hardwired to the terminals in the Wireless Magnetic Contact Detector to extend the system.

Section 7 – Specifications

Control Unit

Type	Microprocessor based wireless control unit
Housing material	ABS
Zones	8 Alarm Zones–1 detector maximum per zone (8 detectors capacity)
Entry/Exit Delay	30 seconds
Siren Duration	3 minutes
RF Receiver Frequency:	433MHz
Power Supply	15V 500mA 50Hz AC/AC mains adaptor Back-up Power (1 x 9V DC PP3 Alkaline - excluded.)
Back-up battery life	Up to 16 Hours on standby (@ full battery capacity)
Current Consumption	< 25mA (standby), <90mA (alarm)

Wireless Movement Detector/PIR

Type	Dual Pyroelectric element with hemispherical lens
Housing material	ABS
LED	On/off selectable
Mounting height	2 ~ 2.5 meters
Detection Range	12 meters @ 110°
Transmission Frequency	433MHz
Transmission Range	150 meters (open air with direct line of sight)
Power Supply	3VDC (2x 1.5V LR03 size AAA alkaline batteries - excluded)
Typical battery life	Up to 18 months

Wireless Door/Window Contact Detector

Type	Magnetically activated switch with option for external wired contact detectors
Housing material	ABS
LED	Transmission indication
Transmission Frequency	433MHz
Transmission Range	150 meters (open air with direct line of sight)
Power Supply	3VDC (2x 1.5V LR03 size AAA alkaline batteries - excluded)
Typical battery Life	Up to 18 months

Wireless Remote Control

Type	Microprocessor based wireless remote control key
Housing material	ABS
LED	Transmission indication
Transmission Frequency	433MHz
Transmission Range	60 meters (open air with direct line of sight)
Power Supply	3VDC (1 x CR2032 Lithium Coin size Battery)
Typical battery Life	Up to 12 months

Wireless External Siren

Type	External audible and visual indication
Housing material	ABS
Transmission Frequency	433MHz
Transmission Range	60 meters (open air with direct line of sight)
Siren Output	100dB min @ 30cm
Siren time	3 minutes
Power Supply	4 x 1.5V D Cell Alkaline battery pack
Battery Life	Up to 12 months

Control Panel Power Supply Adaptor

Type	AC/AC Adaptor with 3-pin UK style
Housing material	ABS
Rated Supply	230VAC 50HZ supply
Output	Extra Low Voltage (AC15V max at 500mA AC)

Section 8 – Troubleshooting Guide

1) Control Unit (CU)

Symptoms	Possible causes and cures
Power indicator and all status LEDs are off without any response.	No power supply to unit. Check connectors to mains and alkaline battery.
Power indicator does not light up but the status LEDs or TAMPER LEDs are on.	Main supply is out. It is operating from alkaline battery. Check power connections/adaptor.
TAMPER (Red) flashing.	Low backup battery condition; replace 9V PP3 Alkaline battery as soon as possible.
No response to wireless detector transmissions.	Are detectors programmed correctly? Are PIR Detectors in warm up time (During the first 2 minutes from the batteries installing)? Are detectors within radio range of the CU? CU not armed.

2) Wireless Door/Window Contact Detector (MC)

Symptoms	Possible causes and cures
Does not detect opening of door or window (Red LED does not flash)	Check that batteries are correctly installed. Check that magnet is correctly positioned.
Built-in buzzer makes a sound	Batteries are low. Replace batteries


3) Wireless PIR detector (PIR)

Symptoms	Possible causes and cures
Does not detect movement (Red LED does not flash)	Is PIR's LED turned off? Is the PIR in its "sleep" condition (Section 3.4)
PIR causes false "intruder" alarms.	Check that PIR is not pointed at heat sources or moving objects, and is not mounted above a radiator or other heater.
PIR will not trigger alarm when the system is set.	PIR in "sleep" condition.
Built-in buzzer makes a sound	Batteries are low. Replace batteries

4) Wireless Remote Control

Symptoms	Possible causes and cures
Does not transmit (Red LED does not flash)	Check that the battery is correctly installed. Battery low, replace battery

Remark: if you have any problem with the wireless alarm system, press the RESET switch inside the CU. The system will reset to factory default settings, but the detectors will need to be re-programmed again.

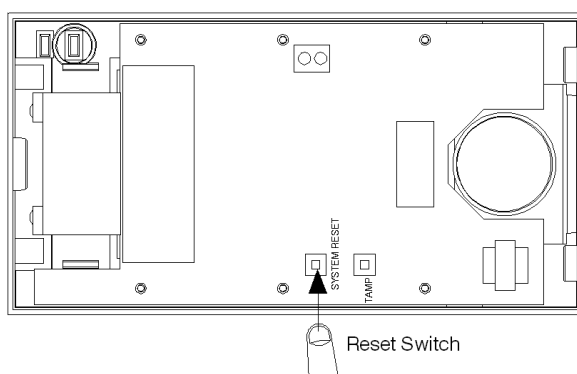

Appendix A

LED Alarm Indication:

LED		Power (GREEN)	Tamper (RED)	Z1/Z5 (RED)	Z2/Z6 (RED)	Z3/Z7 (RED)	Z4/Z8 (RED)
Status							
Power Ready		ON	X	X	X	X	X
AC Failure		X	X	X	X	X	X
Low Battery		ON	Flashing	X	X	X	X
MC	Z1 Alarm	ON	X	ON	X	X	X
	Z2 Alarm	ON	X	X	ON	X	X
	Z3 Alarm	ON	X	X	X	ON	X
	Z4 Alarm	ON	X	X	X	X	ON
PIR	Z5 Alarm	ON	X	Flashing	X	X	X
	Z6 Alarm	ON	X	X	Flashing	X	X
	Z7 Alarm	ON	X	X	X	Flashing	X
	Z8 Alarm	ON	X	X	X	X	Flashing
Z1 Tamper		ON	ON	ON	X	X	X
Z2 Tamper		ON	ON	X	ON	X	X
Z3 Tamper		ON	ON	X	X	ON	X
Z4 Tamper		ON	ON	X	X	X	ON
Z5 Tamper		ON	ON	Flashing	X	X	X
Z6 Tamper		ON	ON	X	Flashing	X	X
Z7 Tamper		ON	ON	X	X	Flashing	X
Z8 Tamper		ON	ON	X	X	X	Flashing
Control panel Tamper		ON	ON	X	X	X	X
External Siren Tamper		ON	ON	X	X	X	X
PANIC Alarm		ON	X	ON	ON	ON	ON

Appendix B

Zone - Location Table :

Zone Number	Location
1	
2	
3	
4	
5	
6	
7	
8	