



POWERTECH



2200W 24VDC to 230VAC Pure Sine Wave Inverter with 30A Solar Regulator MI-5718 User Manual





PRECAUTIONS

1. Keep the product away from children to avoid them playing with it as a toy and resulting in personal injury.
2. Use only approved accessories or the parts fully consistent with the company's requirements, or else it may cause hazard.
3. Environment: $-20^{\circ}\text{C} \sim 50^{\circ}\text{C}$.
4. Do not use in an environment lower than -20°C or higher than 50°C , exposure to rain or liquids, may cause hazard.

PRODUCT



Front side of master unit



Back side of master unit





Top side of master unit




Front side of remote






LCD SCREEN

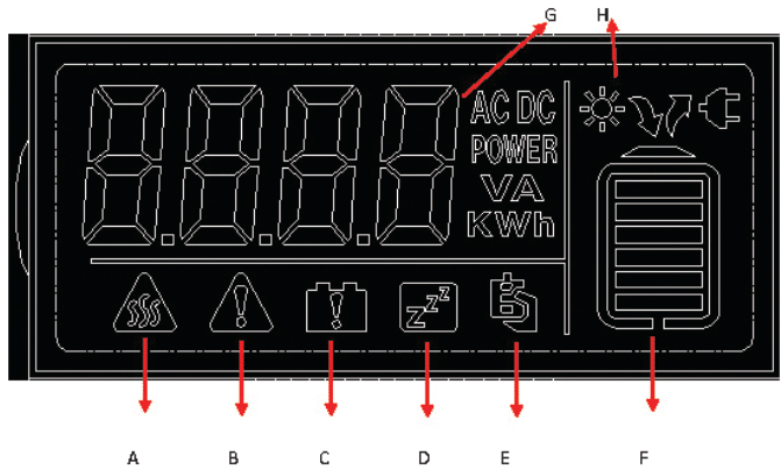


- A. Over-Temperature Protection:** When this icon appears and flashes, the machine enables over-temperature protection.
- B. Protection:** When this icon appears, the machine enables some protection features, such as USB overcurrent, PV overcurrent etc.
- C. Battery Error:** The battery voltage is not in the operating scope of the inverter.
- D. Sleep Mode:** Press and hold the Black Light button for 3 seconds and the machine enters sleep mode. When the AC output power is lower than 25W (LCD), the machine will work for 10 seconds and then turn off for one minute, and so on.
- E. Remote Connection:** When the switch is turned to position II, if the machine is not connected to the remote control, this icon will flash. If the remote control has been connected, the icon will be displayed properly.
- F. Battery Indication:** When displaying 5 bars, the battery is fully charged. When displaying only one bar, the battery is about to run out, and should be charged in time. The battery indicator flashes when charging.
- G. Numerical Display:** Press the MODE key to switch current data of the machine, such as AC power, battery voltage, and charging current.
- H:** When PV and battery are connected, an arrow under the sun symbol will flash, indicating that it is charging.





MACHINE BUTTONS

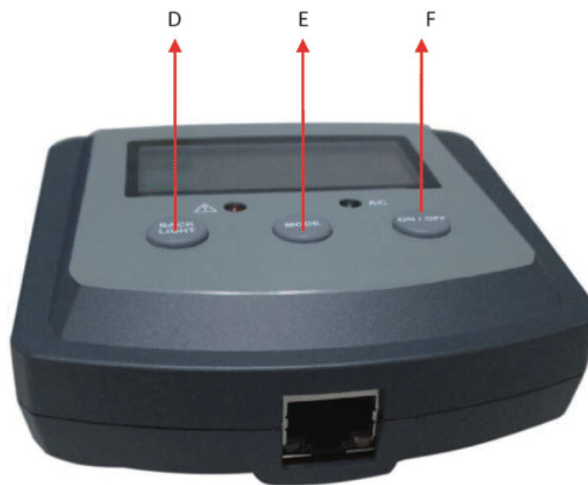

- A. LCD Backlight:** Press this button and the LCD backlight will light up for one minute, press it again and the LCD backlight will turn off. If you press and hold this button for three seconds, the machine will enter sleep mode.
- B. MODE Button:** Switch the content on the LCD screen with this button.
- C. Selector Switch:** When it is turned to position 0, the machine enters standby mode. At this time, the inverter has no output, and the LCD screen is off. USB outputs 5V normally. If normal PV is connected, the LCD screen will light up and charge





normally. When it is turned to position I, the inverter can work normally, USB outputs 5V normally, and PV charges properly, but the remote control does not work. When it is turned to position II, the remote can work normally, and other functions are same as position I.

- D. LCD Screen Backlight of Remote Control:** When you press this button, the LCD backlight will light up for one minute, press it again and the LCD backlight will turn off. If you press and hold this button for three seconds, the machine will enter sleep mode.
- E. MODE Button of Remote Control:** Switch the content on the LCD screen with this button.
- F. Switch Button of the Remote Control:** Press this button, the machine stops inverter output, and LCD screen turns off; press it again, and the machine will resume inverter output.





SOCKETS AND FEATURES

- A. USB Output:** The output voltage is 5VDC, the output current of the top USB output port is 1A, and the bottom USB output port is 2A. The maximum current when the two ports output at the same time does not exceed 3A. When the battery voltage is lower than 21V, USB will turn off the output. When the battery voltage restores to 24V, the output resumes. If the output is greater than 3A, USB will enable overcurrent protection and turn off the output, and resume output after 5 seconds.
- B. AC Output:** IT SHOULD BE USED SEPARATELY AND CAN'T BE CONNECTED TO THE GRID.
1. Standard Output: 230VAC, 50Hz, 2200W.
 2. Output can sustain 20 minutes at peak power 2200W~2500W, and 1 second at 2500W~4000W. When the battery is low, the output will be turned off, when the battery voltage is lower than 24V, it enables undervoltage protection.
- C. Network port terminal:** When the switch is turned to position II, connect it to the remote control with straight-through cable.
- D. PV Input Terminal:**
1. Maximum Power Input 500W @ Maximum Current $\leq 30A$
 2. Input Voltage Range 32~45VDC, rechargeable battery up to 30A.
 3. Only charge 24V rechargeable lead-acid battery, charging range 18VDC~28.8VDC.
 4. Positive pole is red, and negative pole is black. The machine will alarm if the polarity is reverse.
- E. Ground Terminal.**
- F. DC Input:** Connect the battery input. Battery Voltage range: 18VDC~31VDC.

NOTE: Do not reverse the battery connection. Positive pole is red, and negative pole is black.





WIRING DIAMETER REQUIREMENTS

All external terminal load cables of the terminals should be as short as possible. If the cable is hot, replace with a piece of thicker cable. The recommended cable length doesn't exceed 4m. Copper core wires are recommended and the wire diameter cross-sectional area shouldn't be smaller than $1A \cdot 0.2\text{mm}^2$.

For example: 10A current. $10 \cdot 0.2 = 2.0\text{mm}^2$, wire diameter cross-sectional area shouldn't be smaller than 2.0mm^2 .



ELECTRICAL PARAMETERS

Battery Requirements:

Battery Voltage:	18-31VDC
Battery Capacity:	≥ 65Ah Recommended
Maximum Input Current:	120A
Standby Current:	≤ 0.75A

Solar Charge Input:

PV Voltage:	32-45VDC
Maximum Solar Power:	500W(Excess Power Not Used)
Maximum Solar Charge Current:	30A(Into Very Flat Battery)
Solar Charge Controller Type:	PWM

AC Specifications:

Voltage Output:	230VAC
Frequency:	50Hz
Power:	2200W Max
Peak Power:	2500W @ 20 Minutes
Surge Peak Power:	4000W @ 1 Second
Voltage Harmonics:	≤ 5%
Conversion Efficiency:	≥ 88%

USB Output:

Output Voltage:	5VDC
Maximum Output Current:	3A Combined

Operating Temperature:


-20°C - 50°C

Dimensions:

400(D) x 200(W) x 100(H)mm

Weight:

4.7kg



TROUBLESHOOTING

LCD Displays E2: Battery Overvoltage Protection - please check if the battery voltage is too high.

LCD Displays E3: Battery Undervoltage Protection - please check if the battery voltage is too low, and charge it if yes.

LCD Displays E4: Bus Voltage Protection - Please re-boot and check if there is alarm still; if yes, please contact customer service for maintenance.

LCD Displays E5: Short Circuit Protection - Please check if AC load is too large, reduce the load and try again.

LCD Displays E6: Overtemperature Protection - Please wait for some time before use.

LCD Displays E7: PV Reverse Polarity Protection - Please check if PV polarity is reverse.

LCD Displays E8: PV Overcurrent Protection - Please check if solar panel power or battery is too large, and reduce the solar panel access power.







Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500

www.techbrands.com

Made in China

